



AT

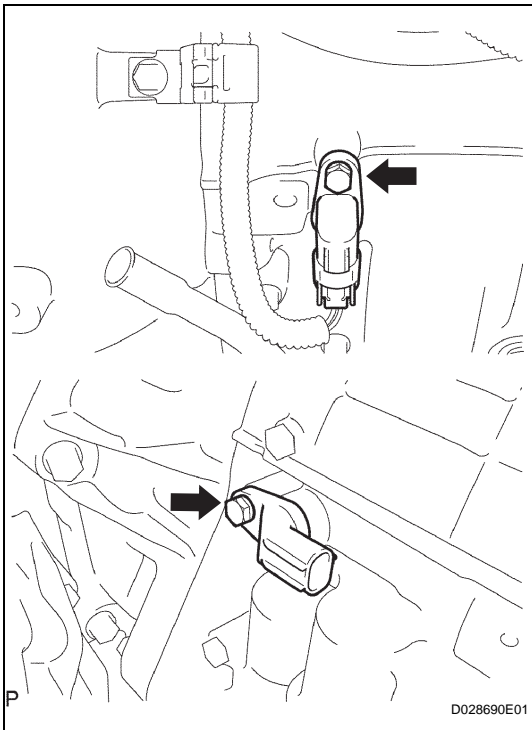

## SPEED SENSOR

### REMOVAL

1. REMOVE TRANSMISSION REVOLUTION SENSOR
  - (a) Disconnect the connector.
  - (b) Remove the bolt and speed sensor.

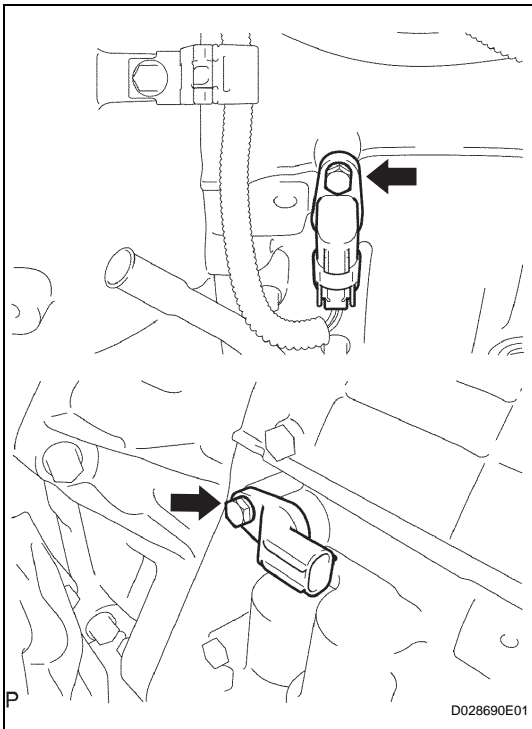

### INSTALLATION

1. INSTALL TRANSMISSION REVOLUTION SENSOR
  - (a) Coat a new O-ring with ATF.
  - (b) Install the speed sensor with the bolt.  
**Torque: 5.4 N\*m (55 kgf\*cm, 48 in.\*lbf)**
  - (c) Connect the connector.