



F RELAY LOCATIONS


[Engine Compartment]

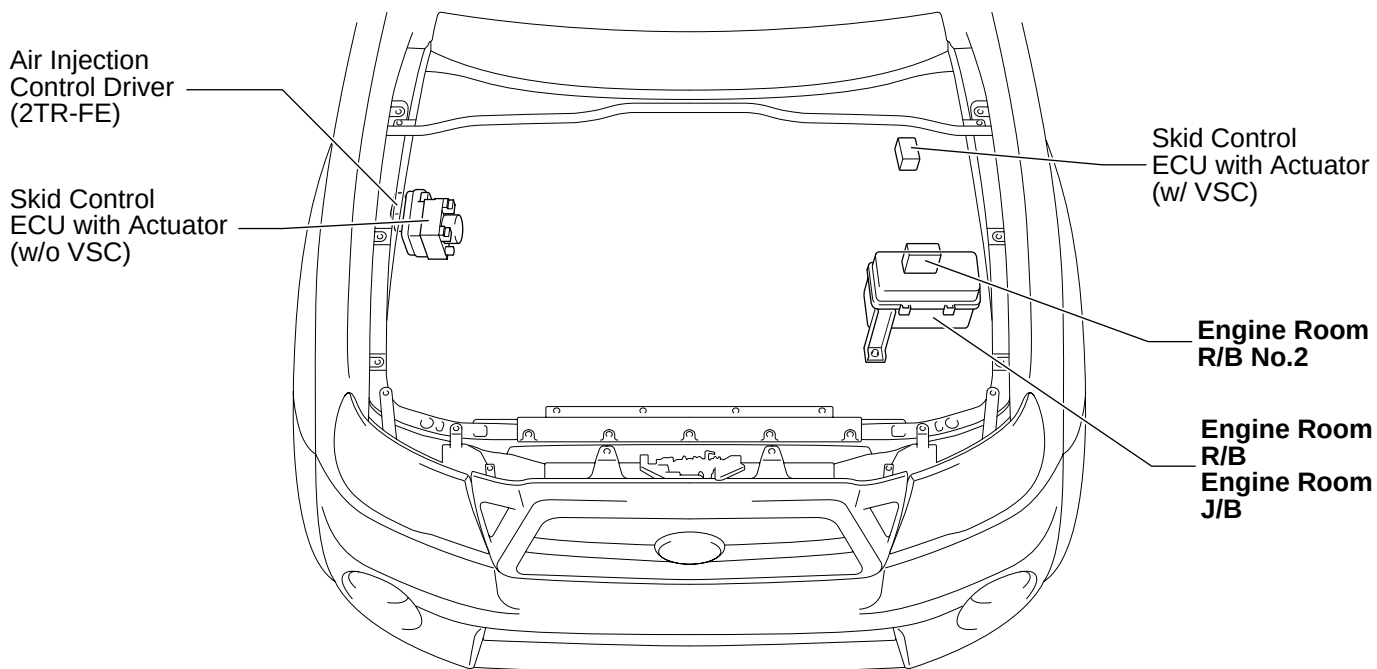


[Instrument Panel]

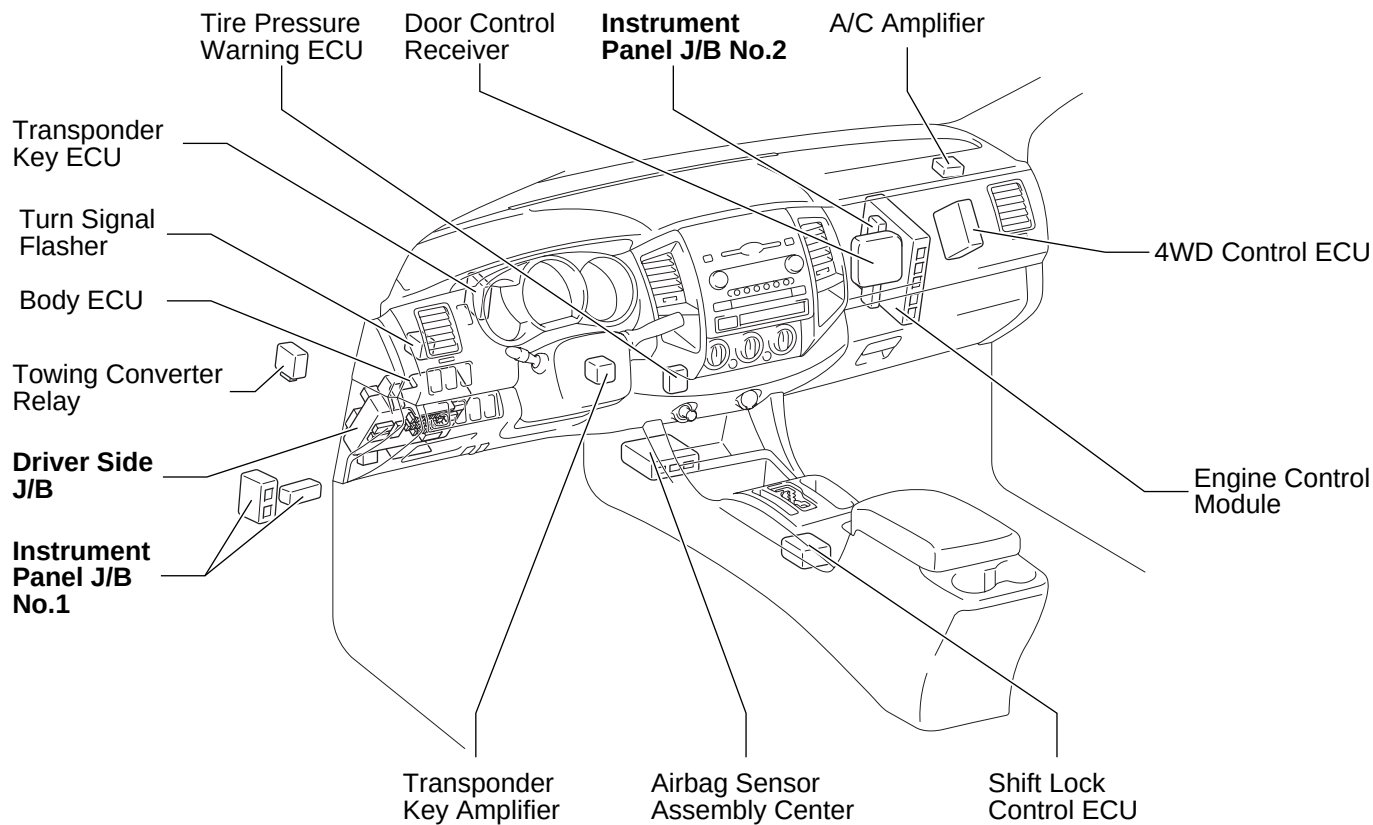

**[Body]
(Double Cab)**

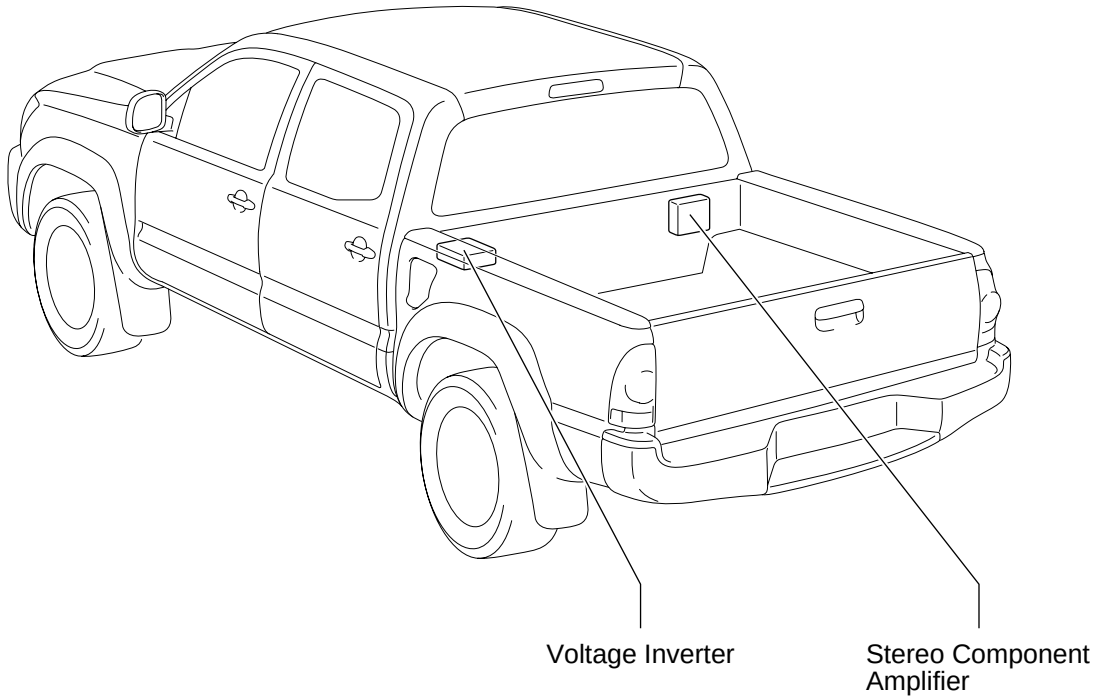


(Access Cab)

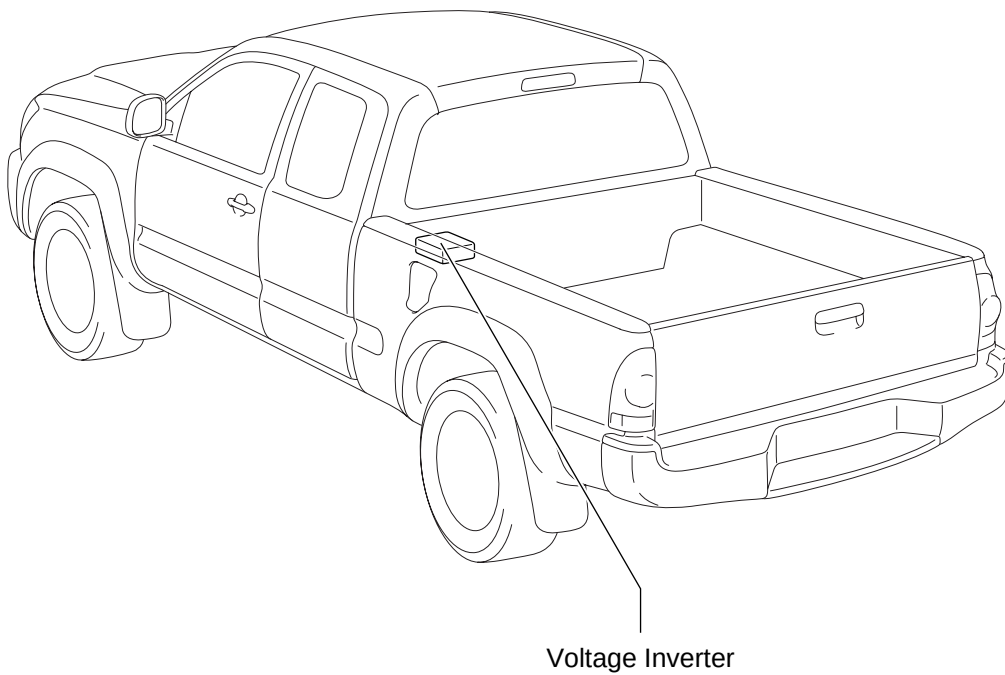


F RELAY LOCATIONS

[Seat]
(Separate Seat)

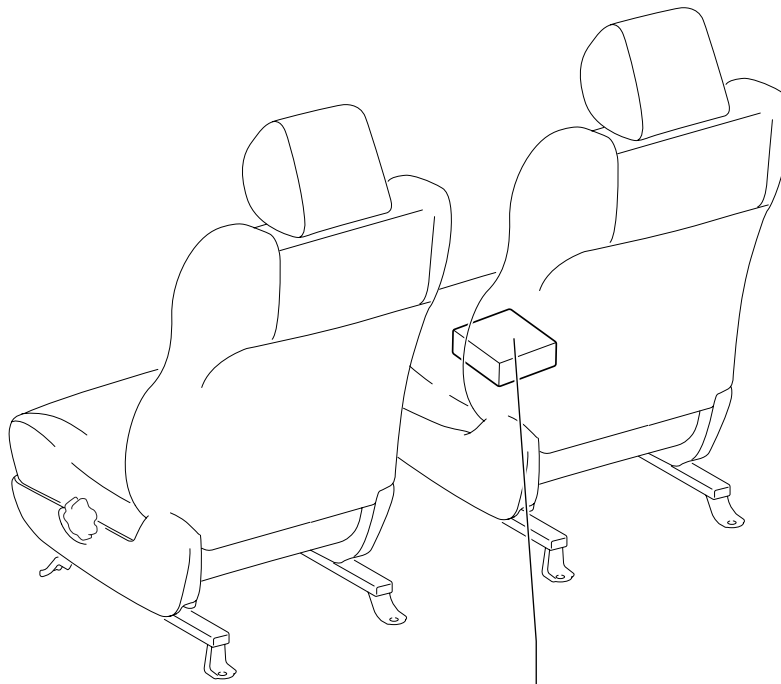


Occupant Classification ECU

(Bench Seat)

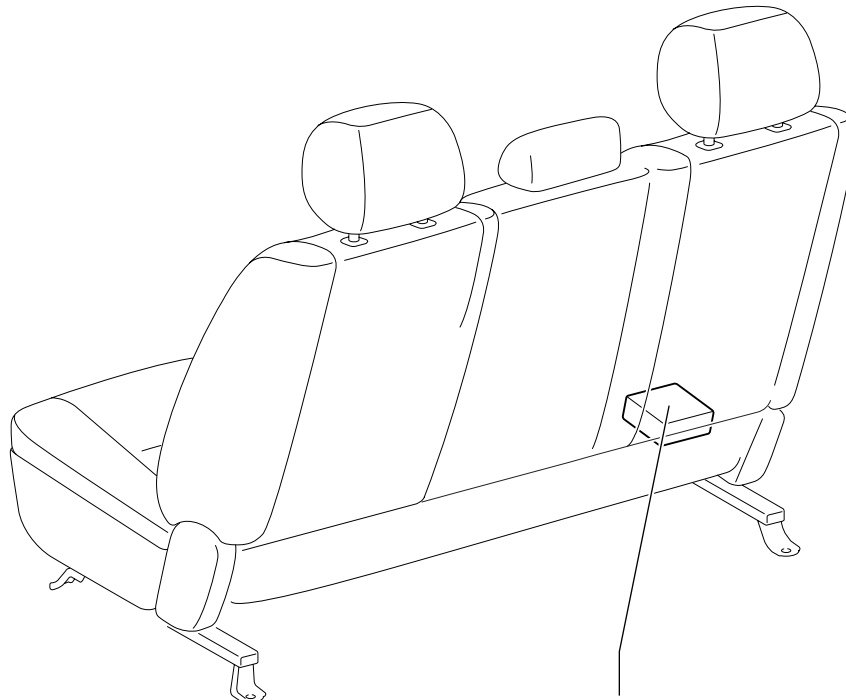


Occupant Classification ECU


③ : Engine Room R/B No.2	Engine Compartment Left (See Page 20)
--------------------------	---------------------------------------

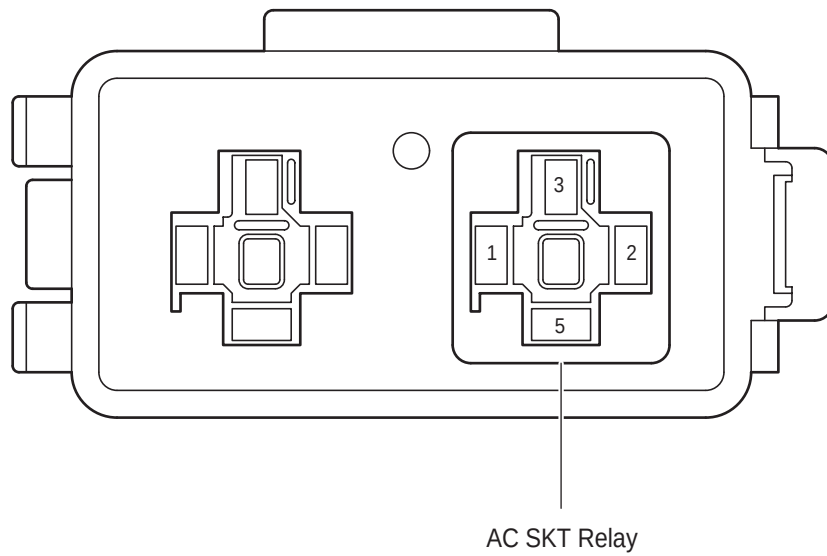

F RELAY LOCATIONS


② : Engine Room R/B	Engine Compartment Left (See Page 20)
○ : Engine Room J/B	

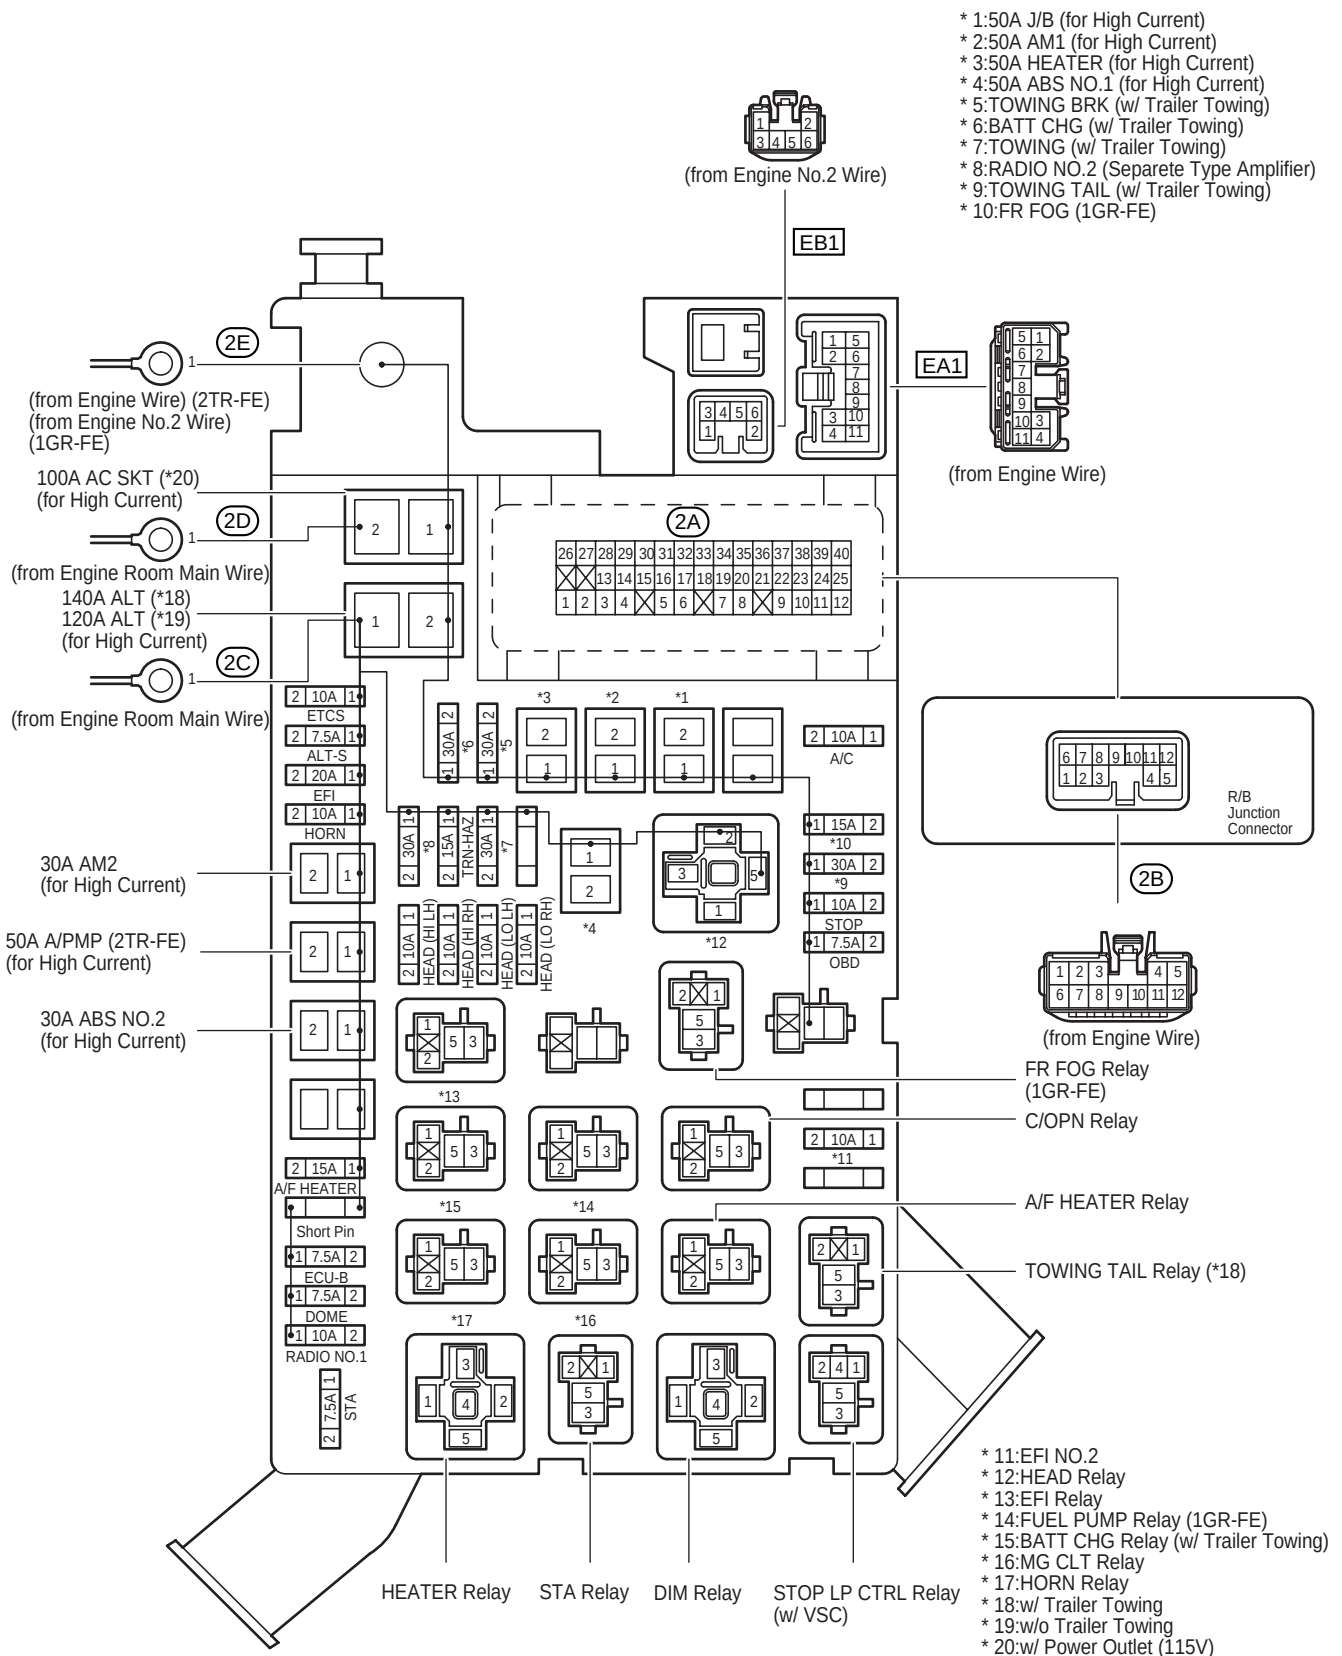

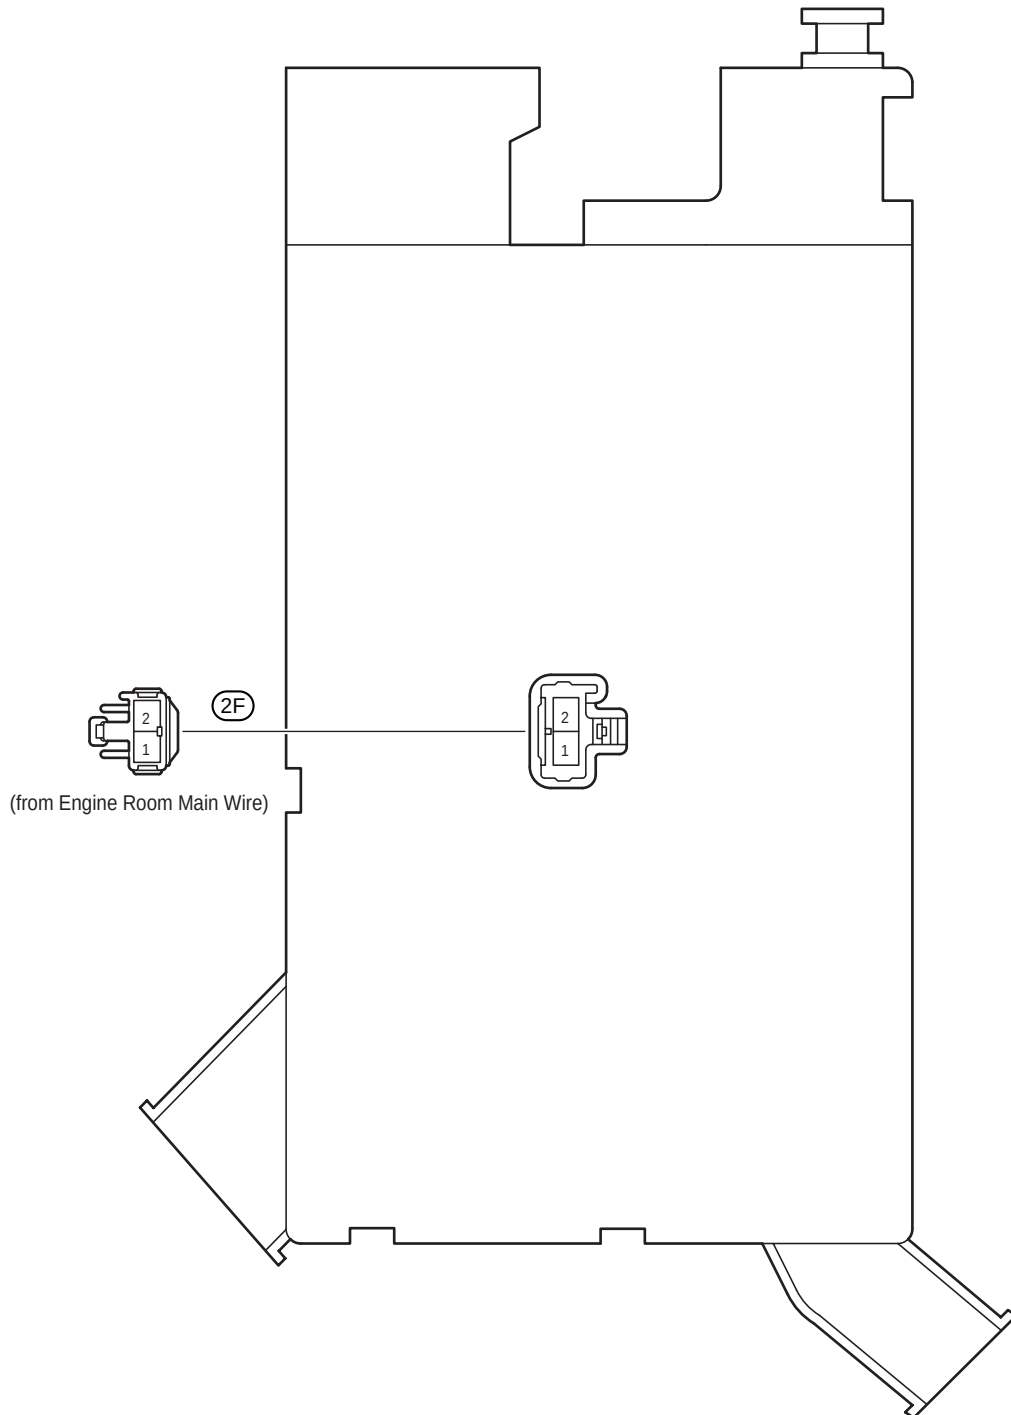

F RELAY LOCATIONS


[Engine Room R/B Junction Connector Inner Circuit]

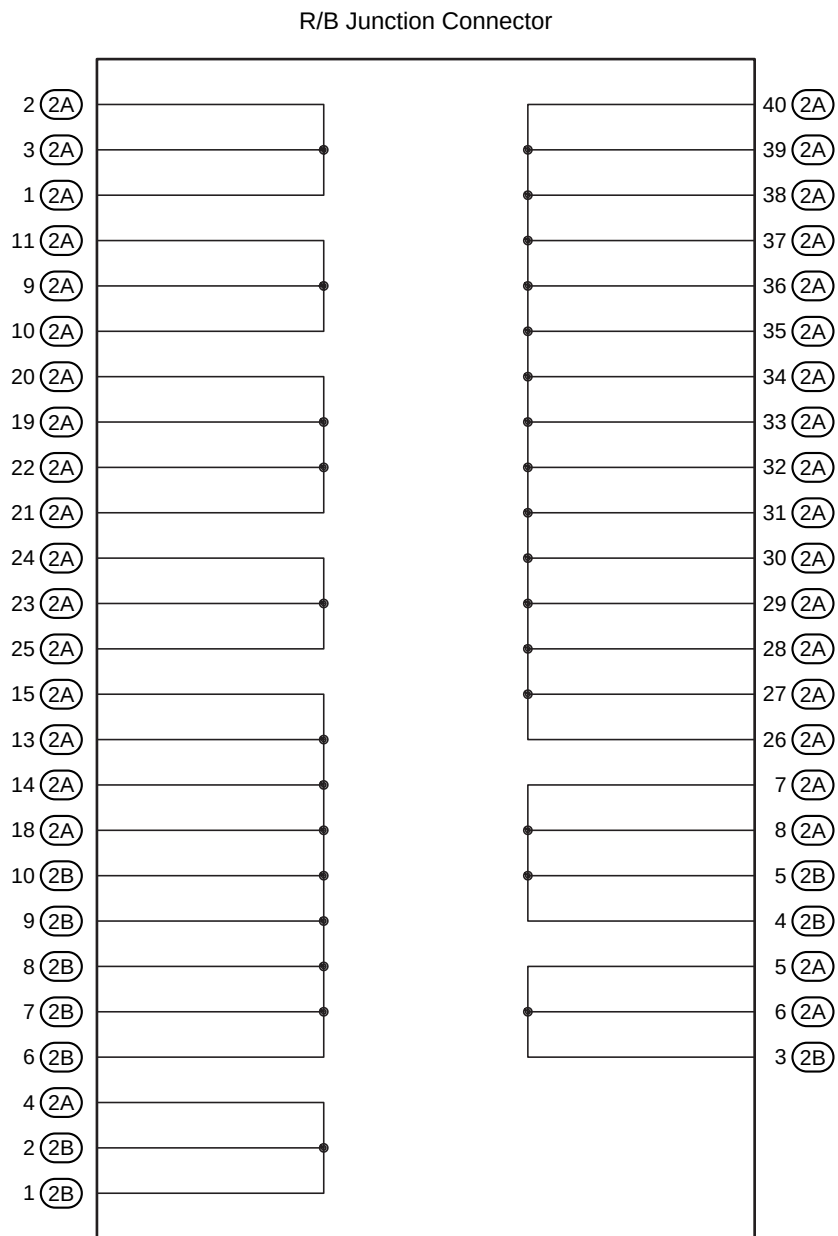


F RELAY LOCATIONS

○ : Driver Side J/B


Lower Finish Panel (See Page 20)

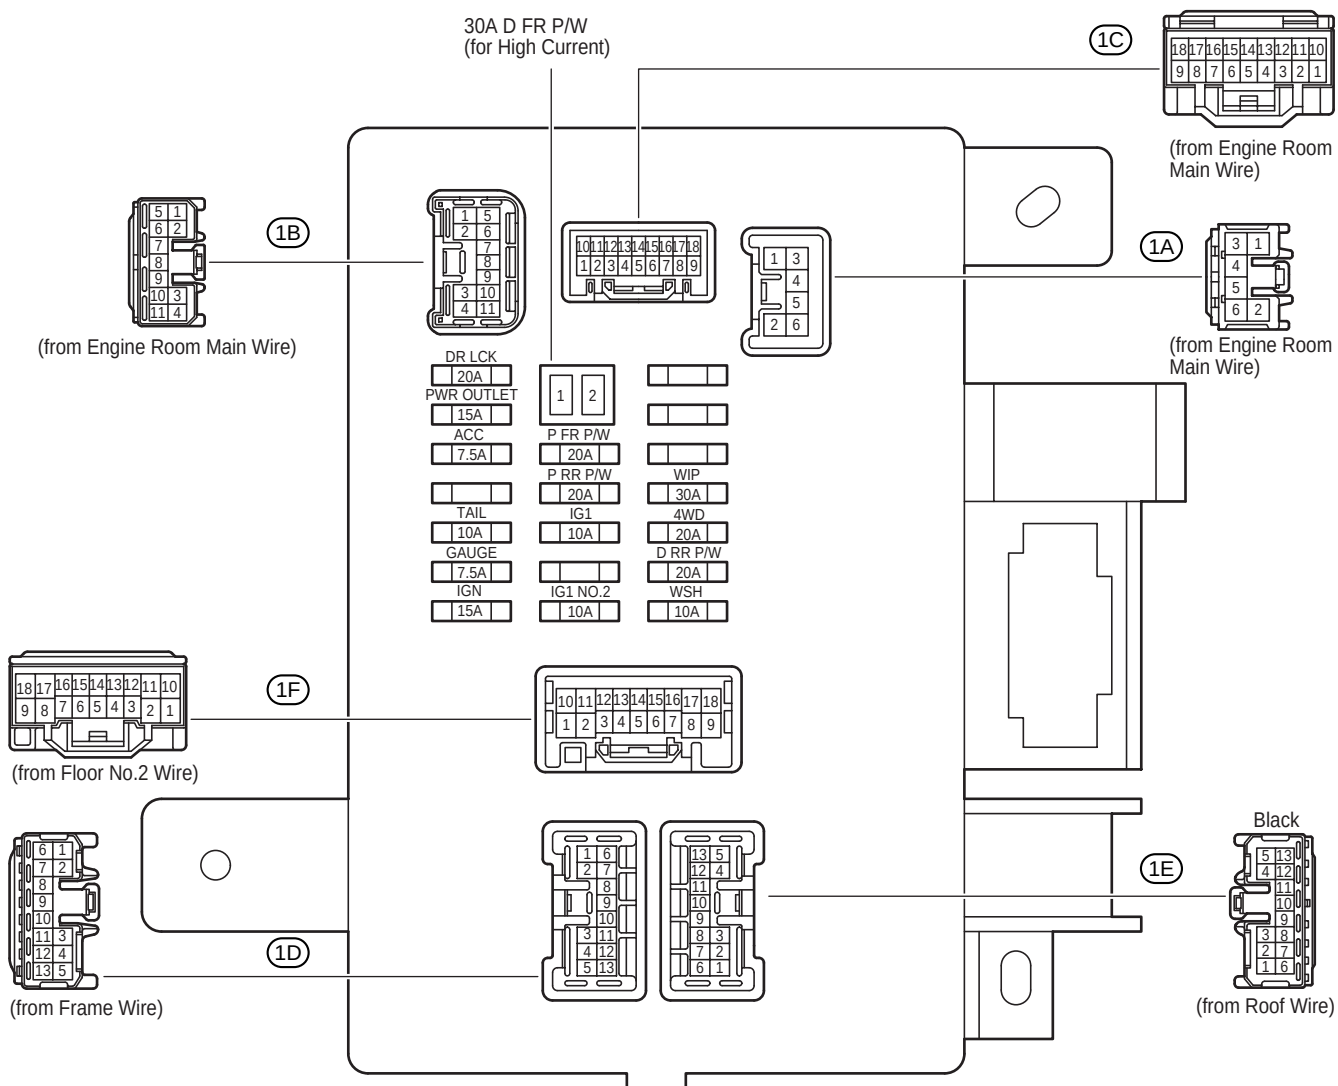

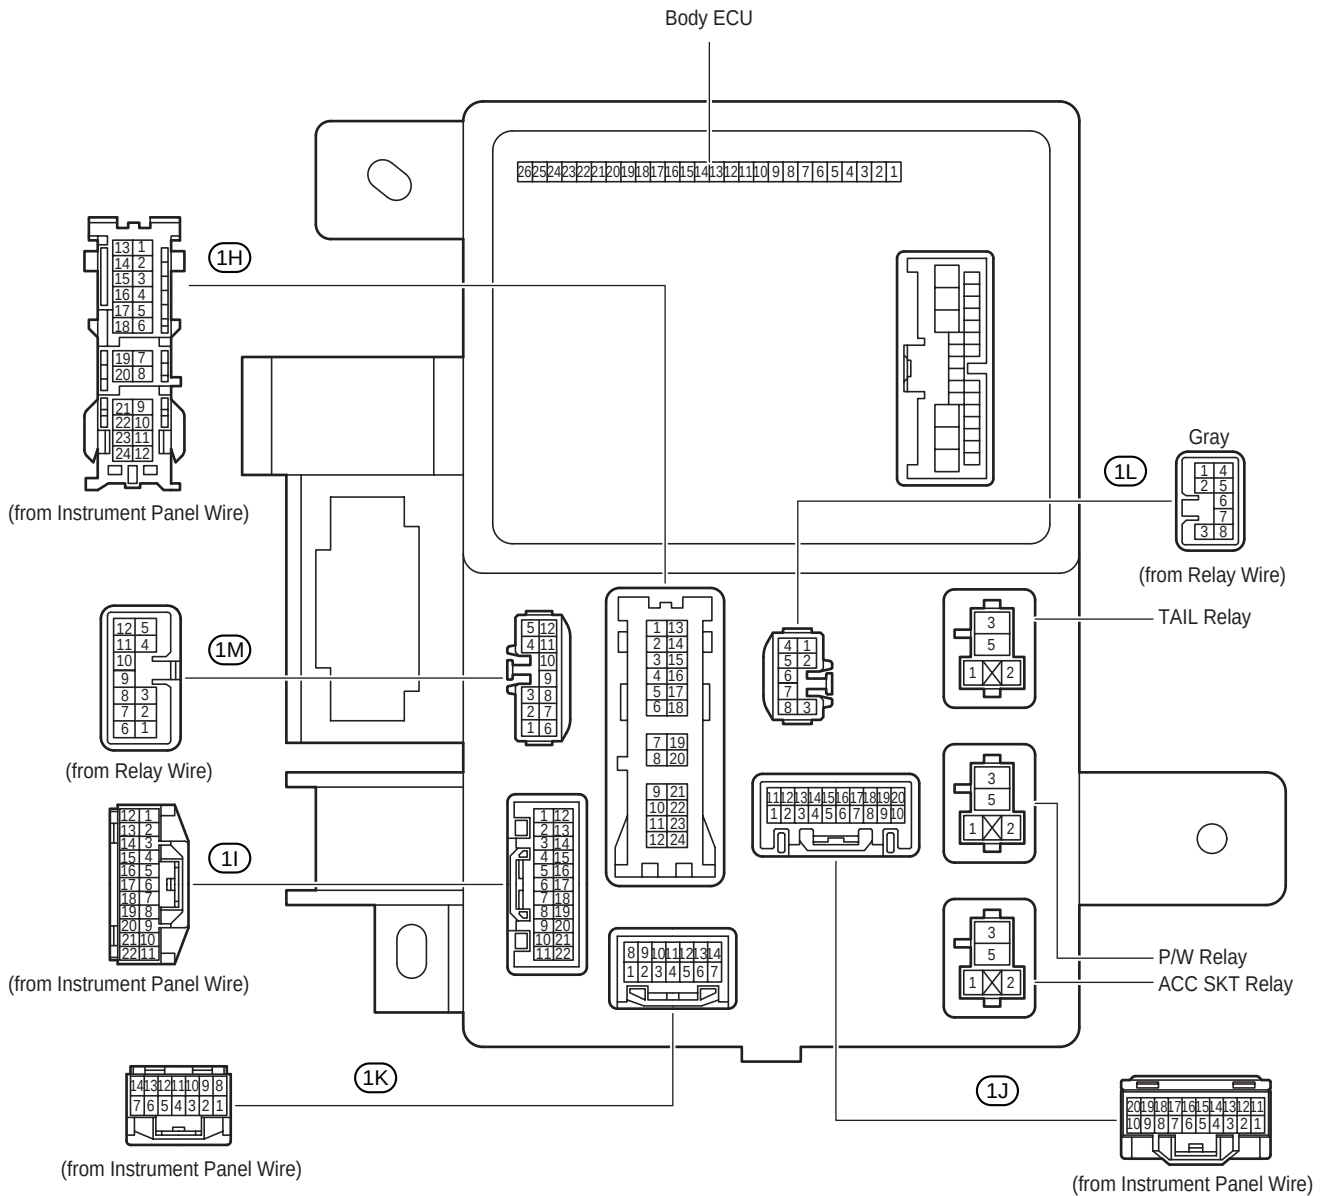


F RELAY LOCATIONS

[Driver Side J/B Inner Circuit]

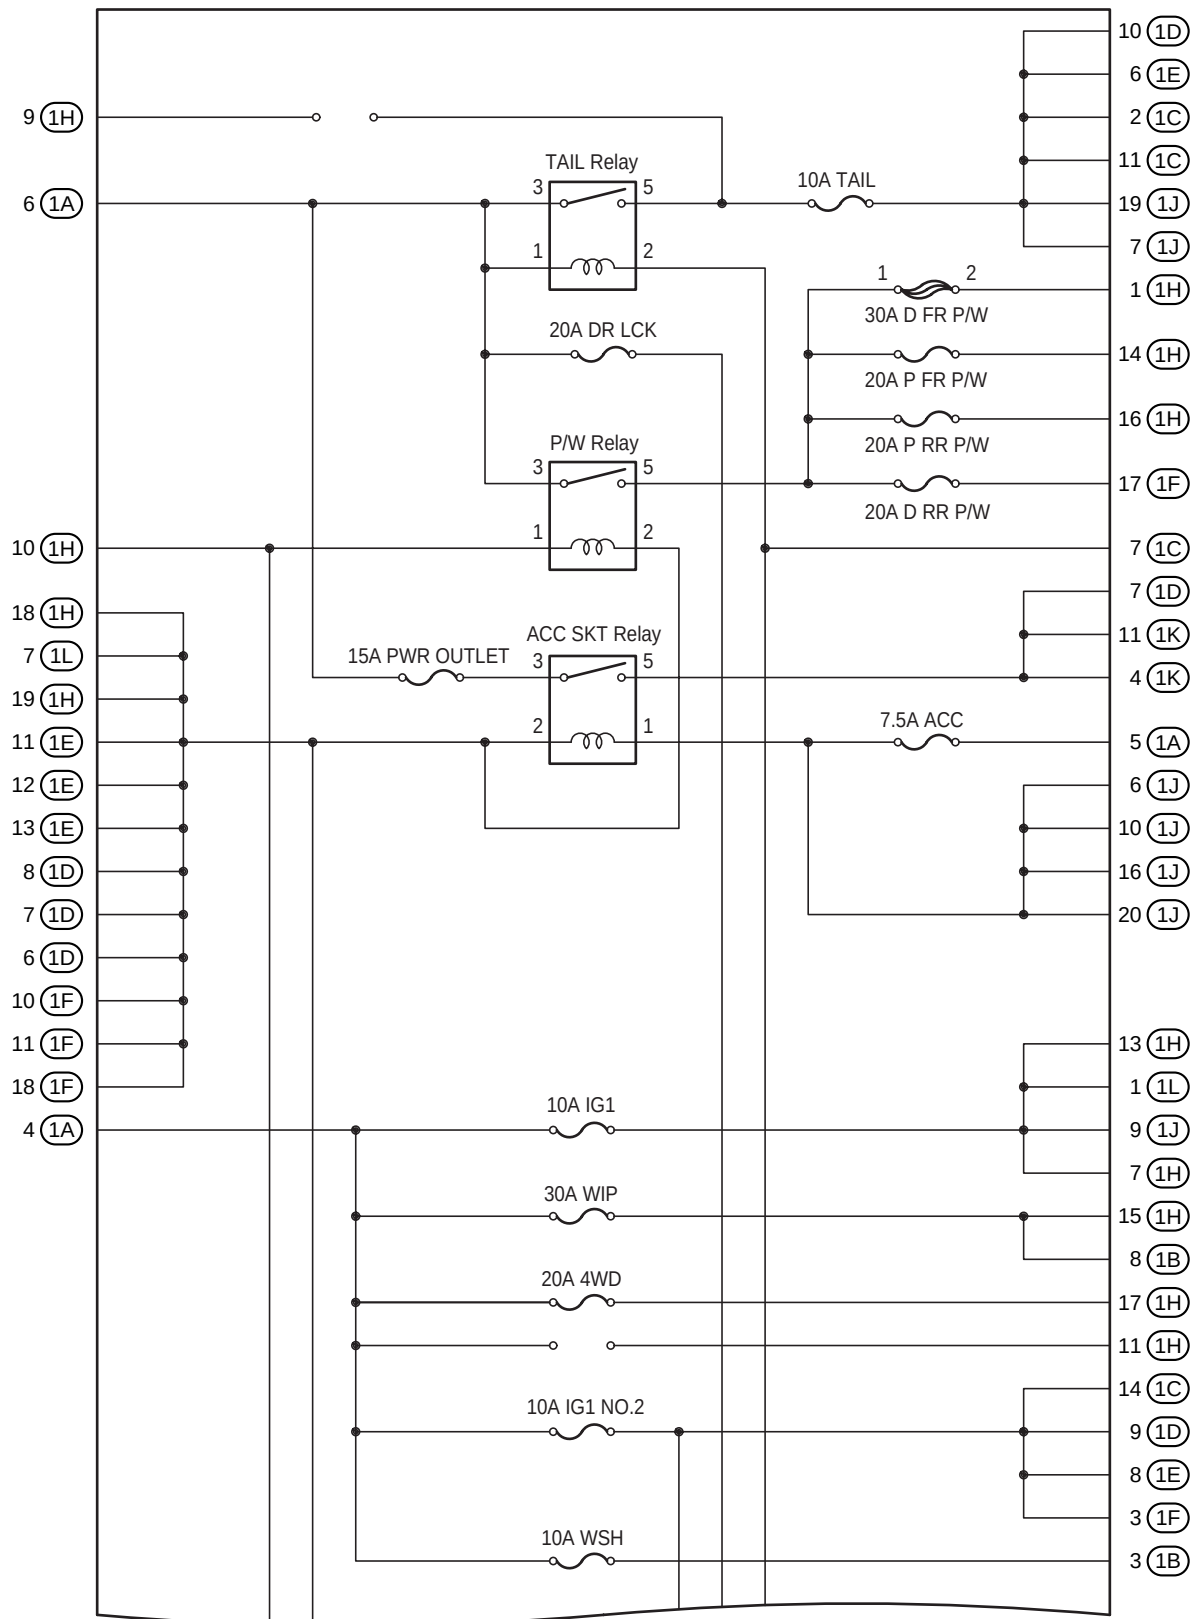

(Cont. Next Page)


(Cont'd)

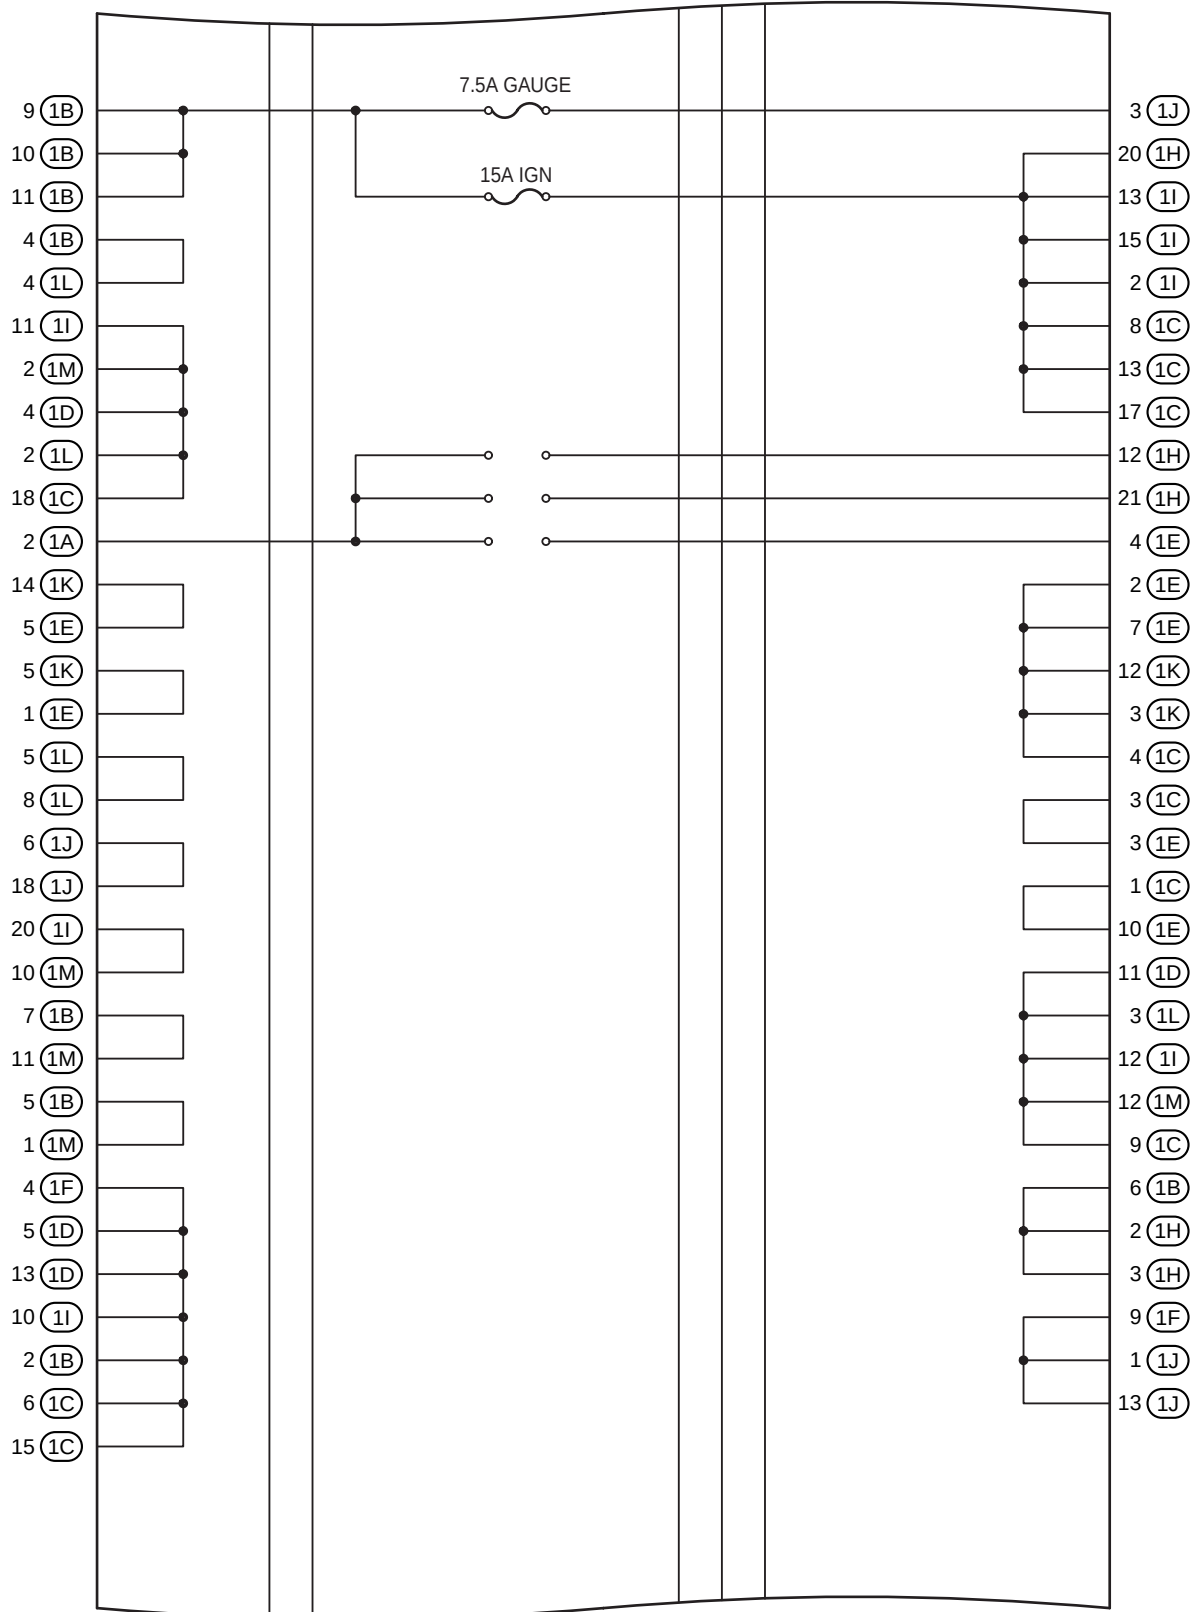

(Cont. Next Page)


F RELAY LOCATIONS

[Driver Side J/B Inner Circuit]

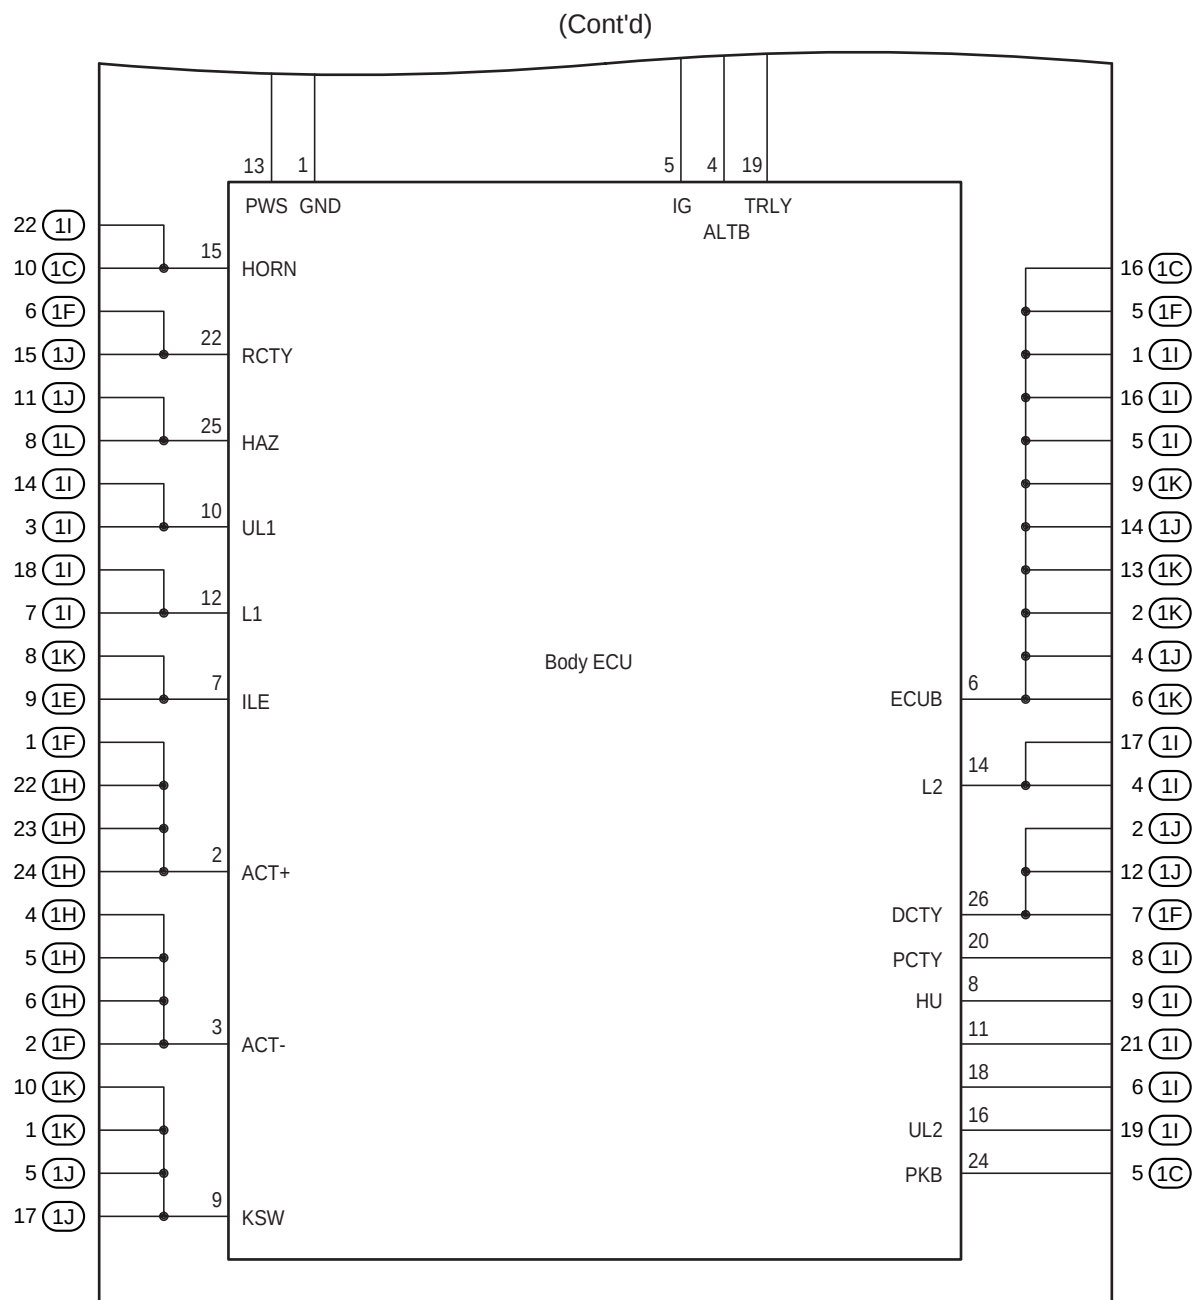


F RELAY LOCATIONS

 : Instrument Panel J/B No.1 Left Kick Panel (See Page 20)

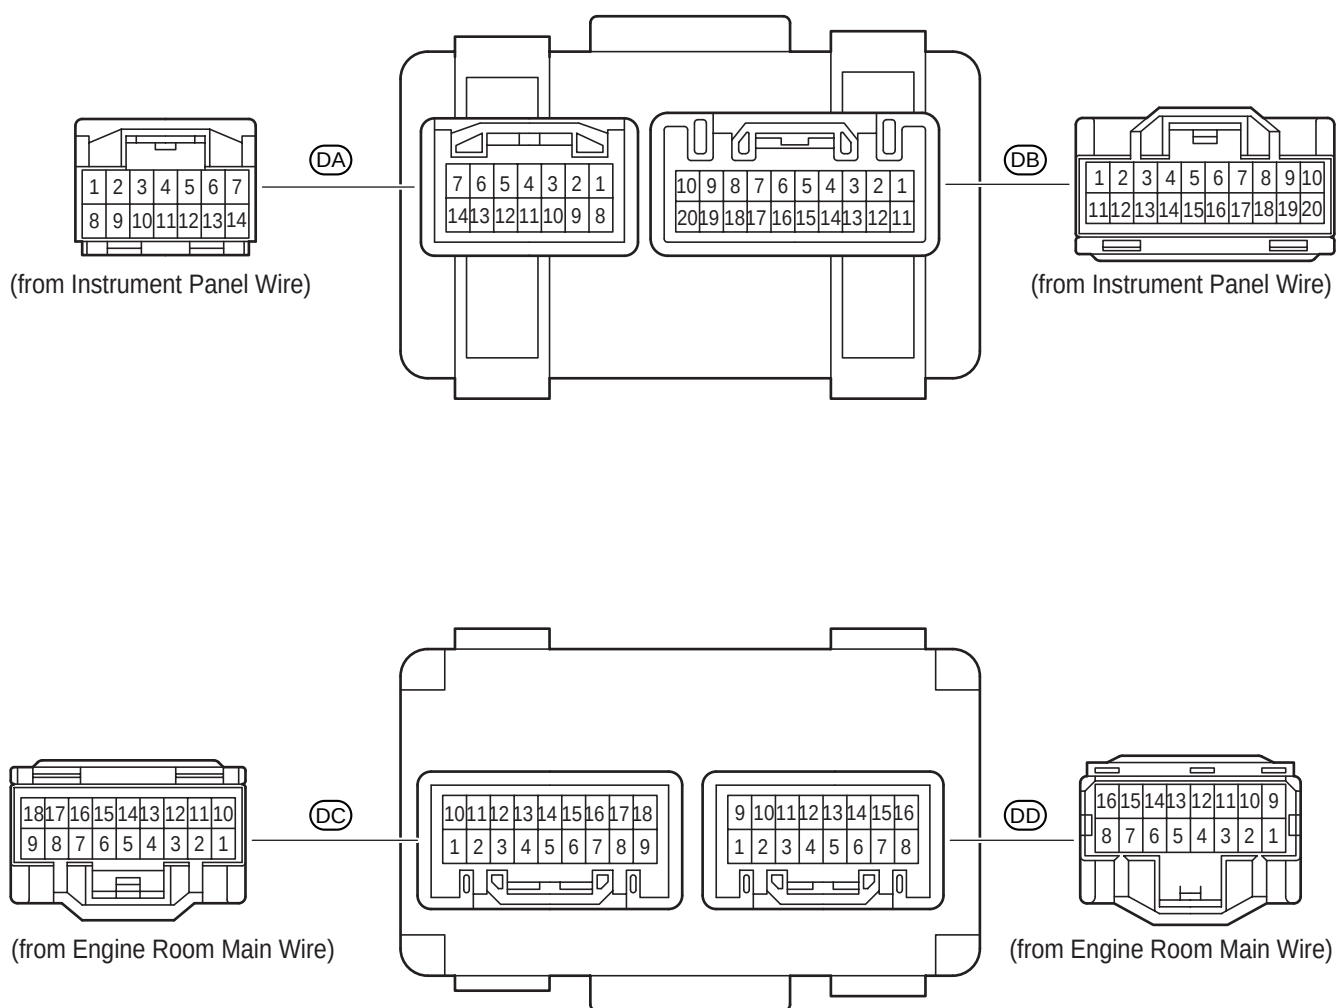


[Instrument Panel J/B No.1 Inner Circuit]

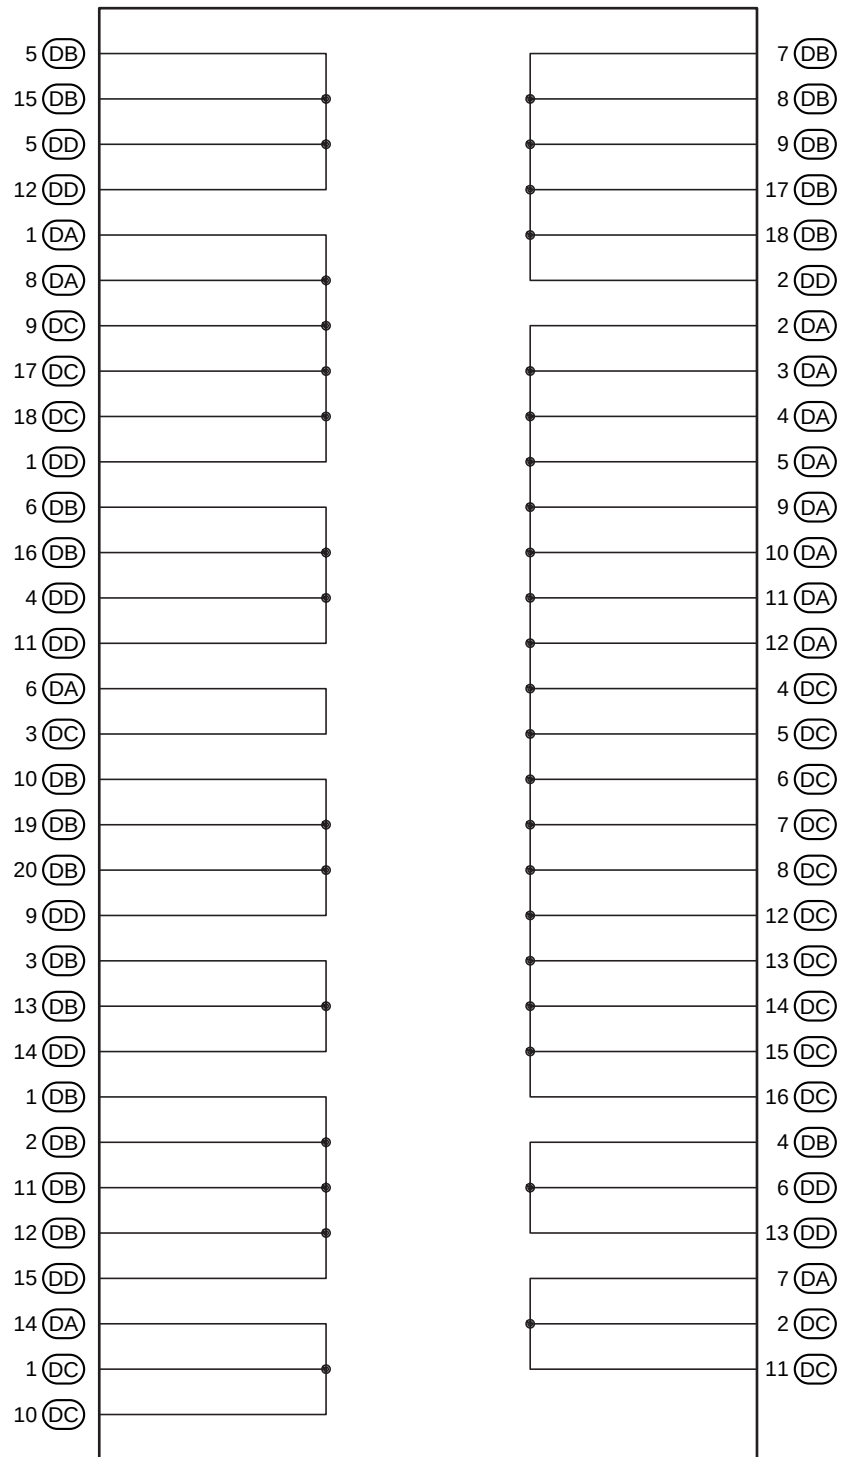


F RELAY LOCATIONS

○ : Instrument Panel J/B No.2 Right Side of Glove Box (See Page 20)

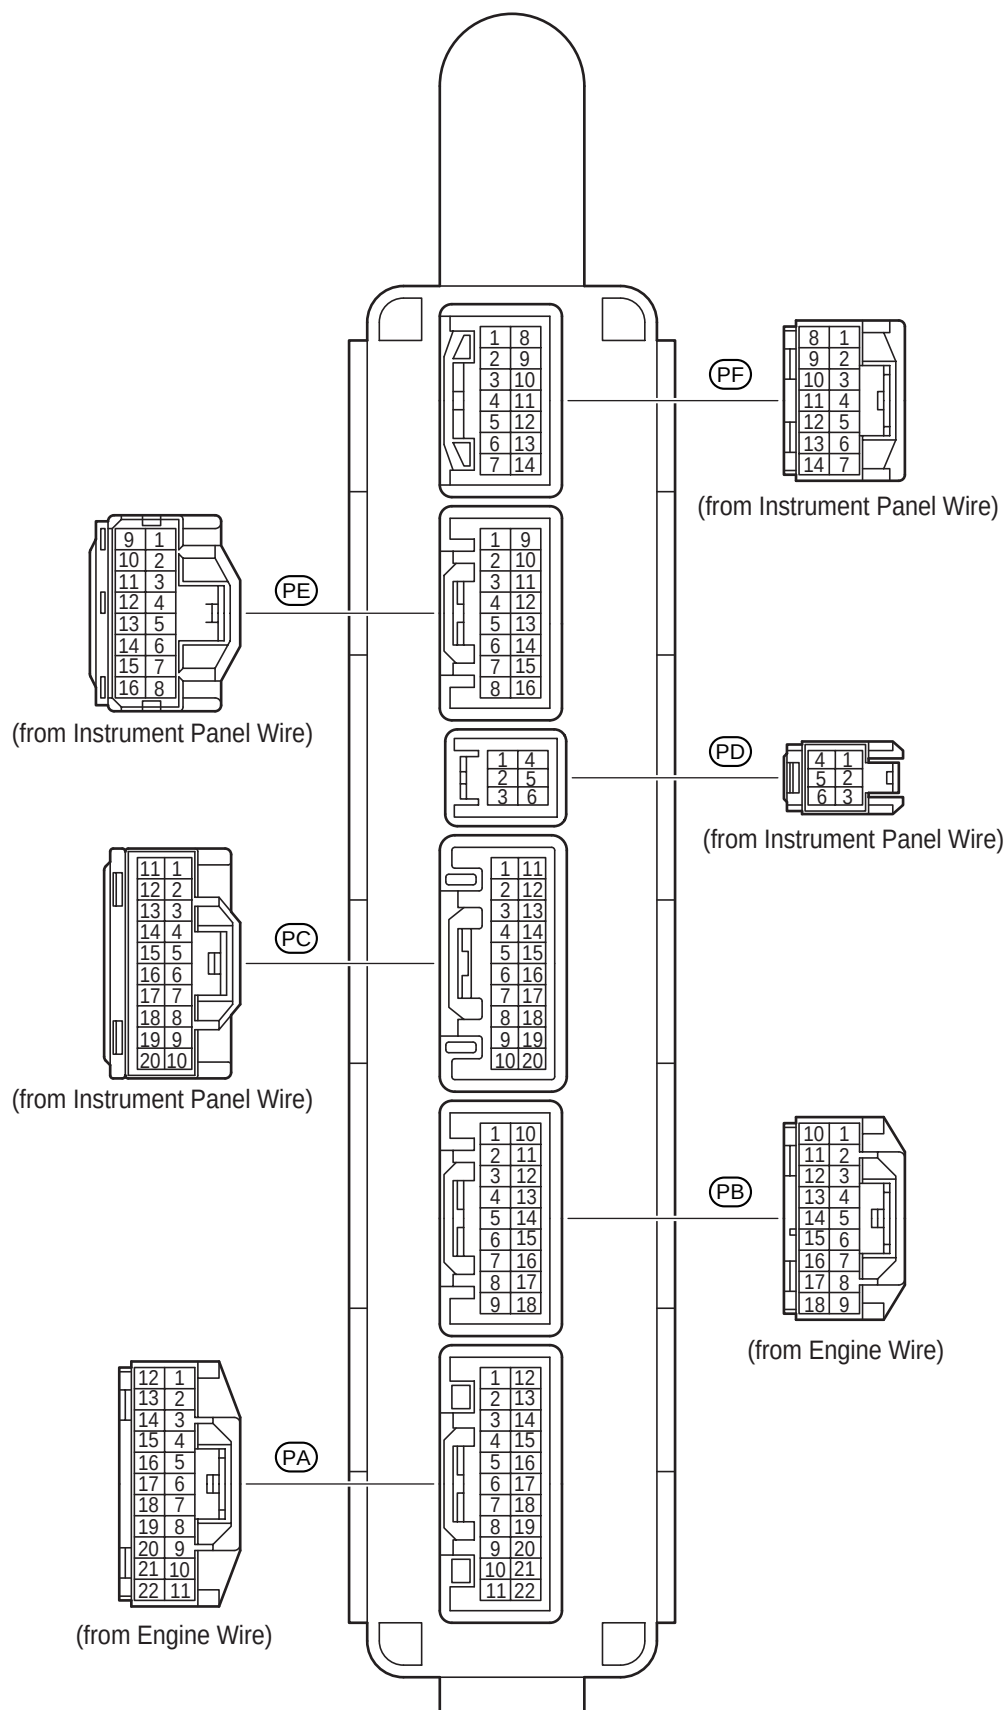

F RELAY LOCATIONS

[Instrument Panel J/B No.2 Inner Circuit]

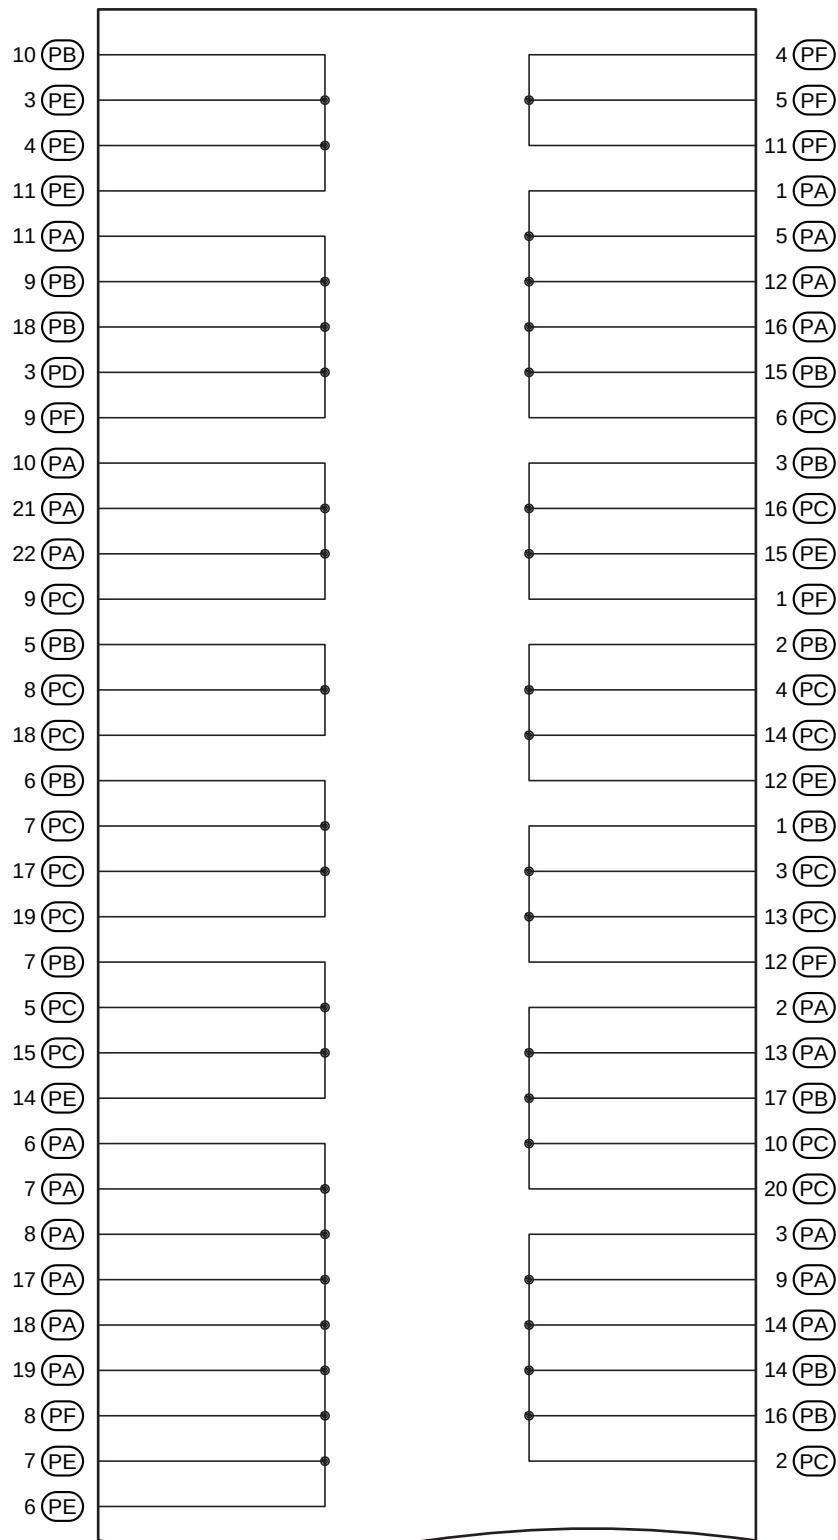

(Cont. Next Page)

(Cont'd)

