


Last Modified: 3-10-2010	6.4 K	From: 200901
Model Year: 2010	Model: Corolla	Doc ID: RM0000010C100YX
Title: CRUISE CONTROL: CLUTCH SWITCH: COMPONENTS (2010 Corolla)		

COMPONENTS

ILLUSTRATION

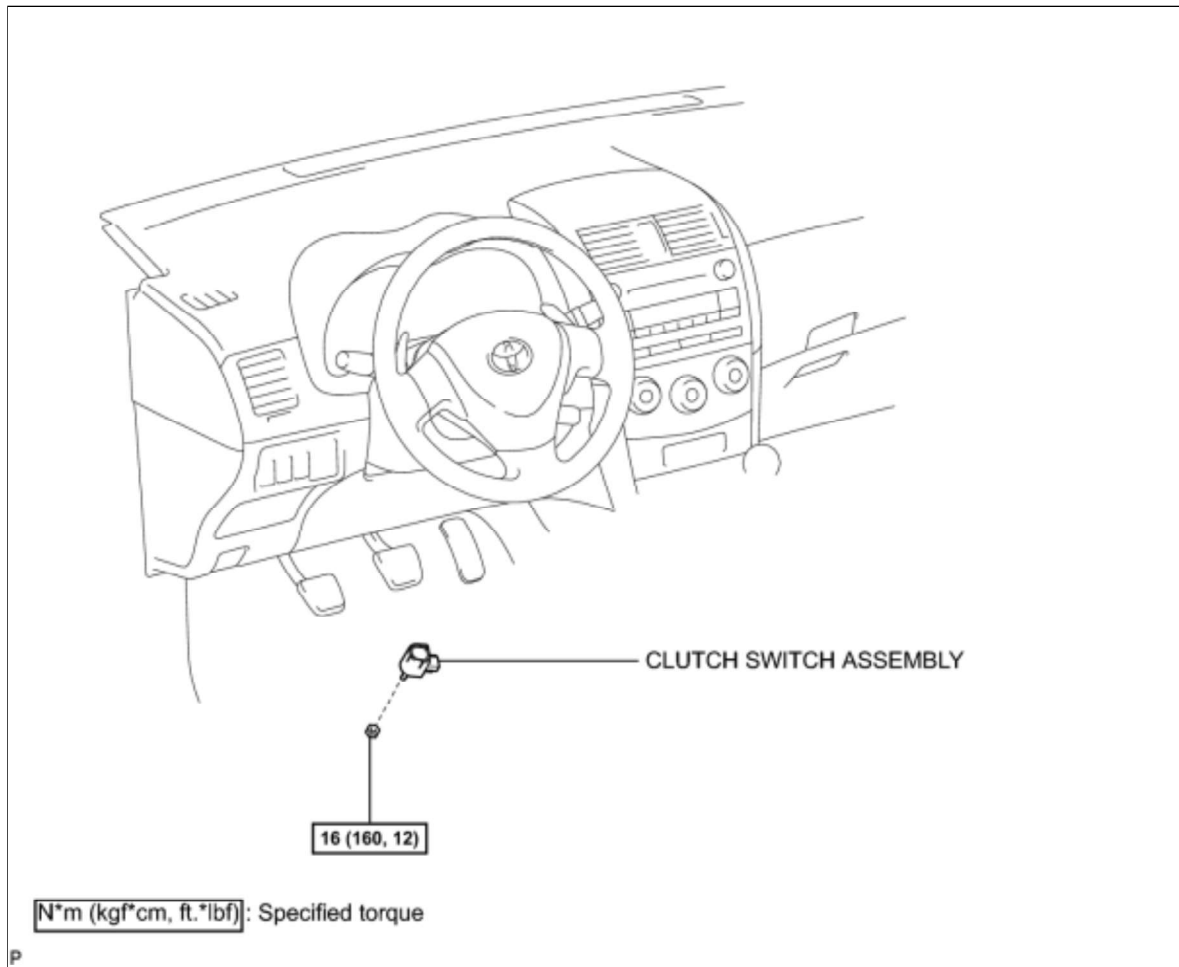

Last Modified: 3-10-2010	6.4 A	From: 200901
Model Year: 2010	Model: Corolla	Doc ID: RM0000010C200ZX
Title: CRUISE CONTROL: CLUTCH SWITCH: REMOVAL (2010 Corolla)		

REMOVAL

1. REMOVE CLUTCH SWITCH ASSEMBLY


- (a) Disconnect the connector.
- (b) Loosen the nut and remove the clutch switch assembly.



Last Modified: 3-10-2010	6.4 G	From: 200901
Model Year: 2010	Model: Corolla	Doc ID: RM000001Z6F011X
Title: CRUISE CONTROL: CLUTCH SWITCH: INSPECTION (2010 Corolla)		

INSPECTION

1. INSPECT CLUTCH SWITCH ASSEMBLY

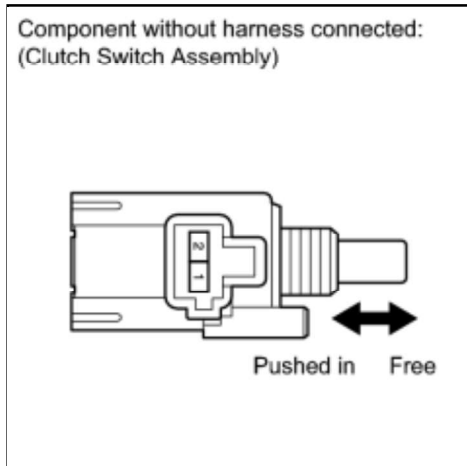

(a) Remove the clutch switch assembly [INFO](#) .

(b) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	SWITCH CONDITION	SPECIFIED CONDITION
1 - 2	Switch pin free	10 k Ω or higher
	Switch pin pushed in	Below 1 Ω

If the result is not as specified, replace the clutch switch.

Last Modified: 3-10-2010	6.4 A	From: 200901
Model Year: 2010	Model: Corolla	Doc ID: RM0000010C000ZX
Title: CRUISE CONTROL: CLUTCH SWITCH: INSTALLATION (2010 Corolla)		

INSTALLATION

1. INSTALL CLUTCH SWITCH ASSEMBLY

- (a) Temporarily install the clutch switch assembly with the nut.
- (b) Engage the pin and tighten the nut.

Torque: 16 N·m (160 kgf·cm, 12ft·lbf)

- (c) Connect the connector.

