


TOYOTA TACOMA (EM03N0U)



TOYOTA TACOMA (EM03N0U)

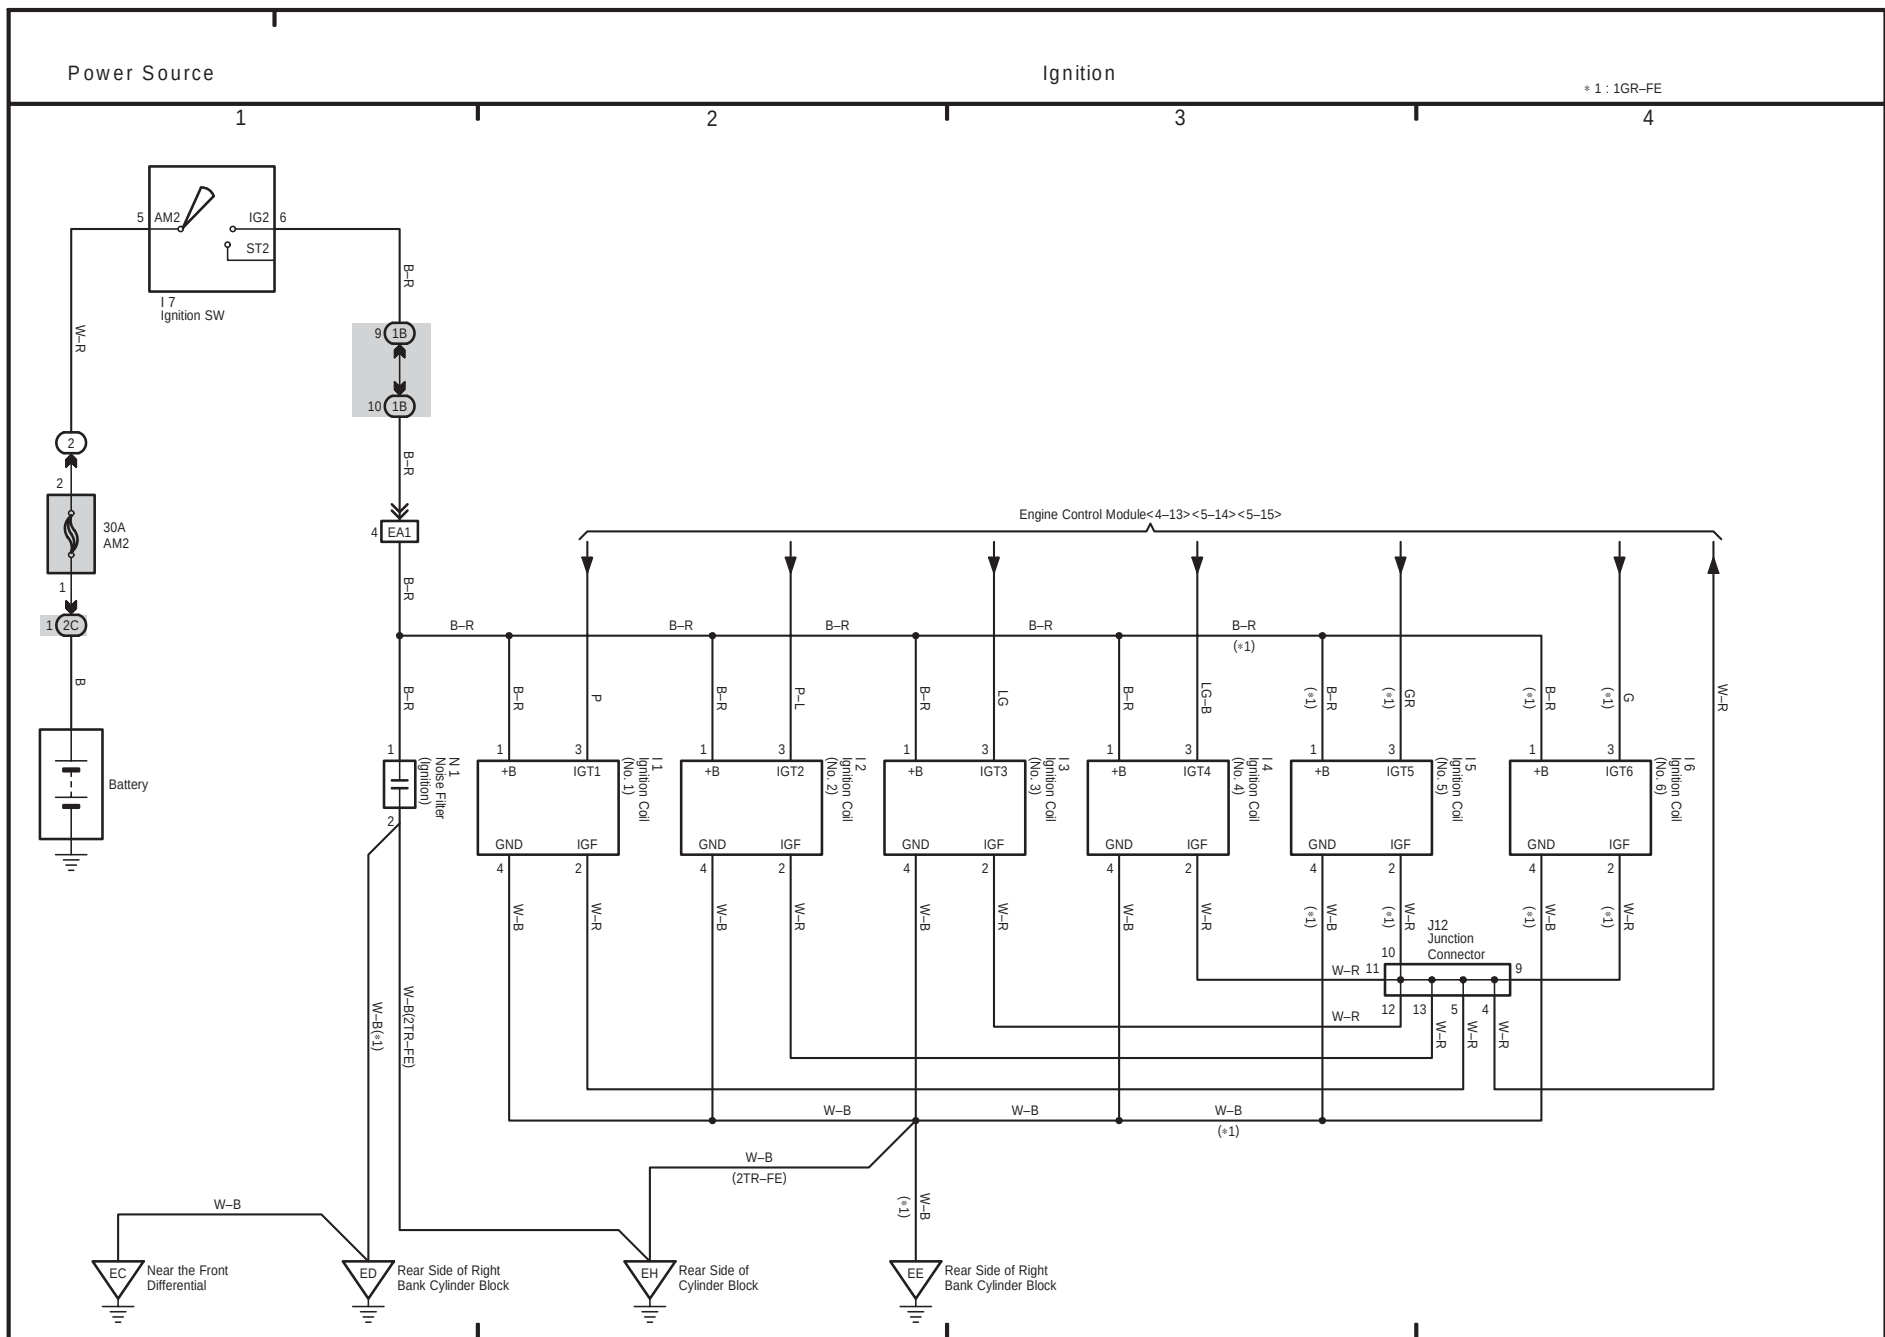


TOYOTA TACOMA (EM03N0U)




(Cont. next page)

4 TOYOTA TACOMA

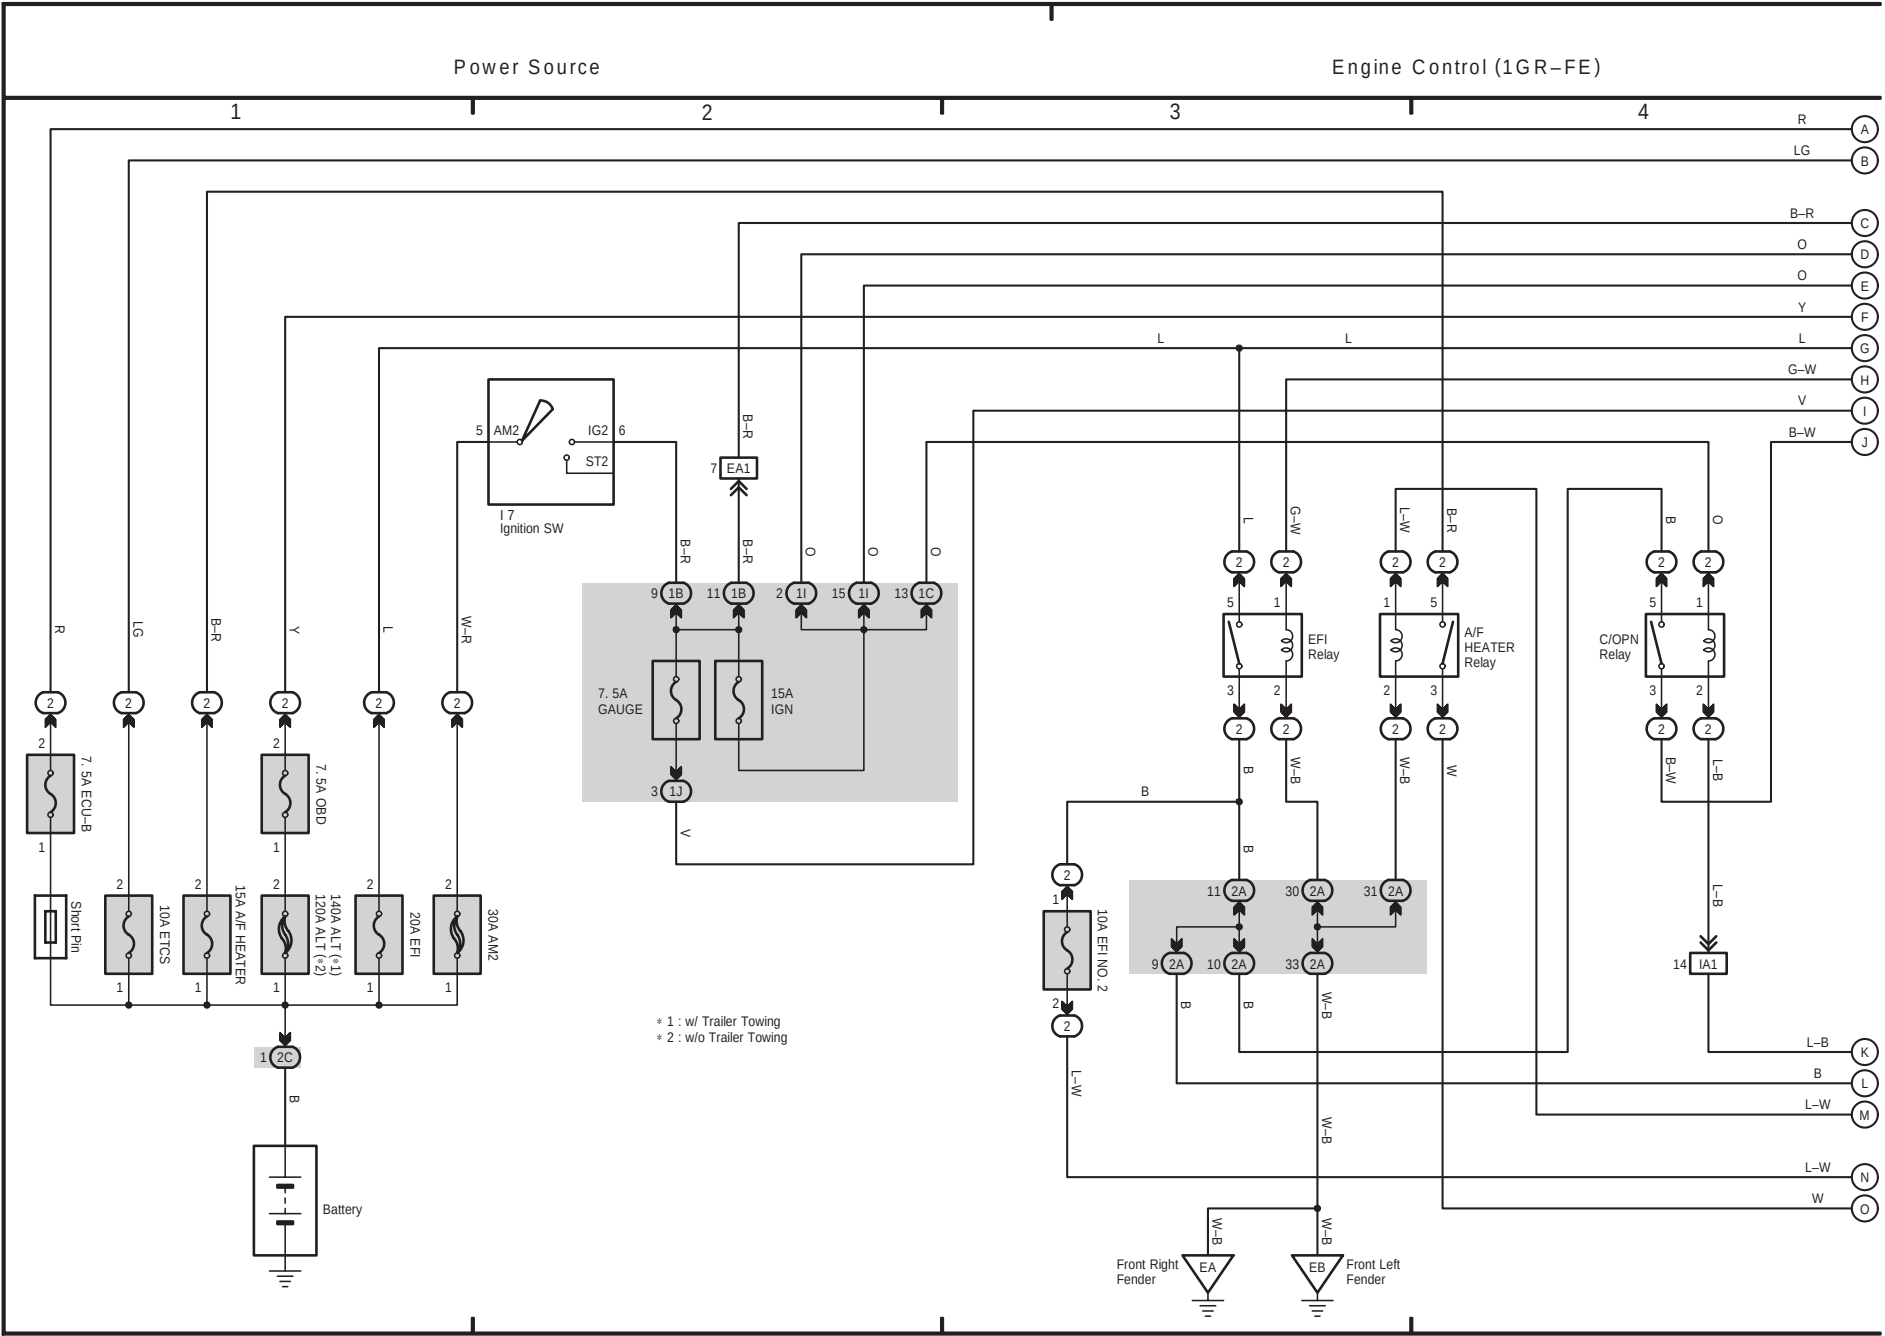


Engine Control (1GR-FE)


* 3 : Malfunction Indicator Lamp

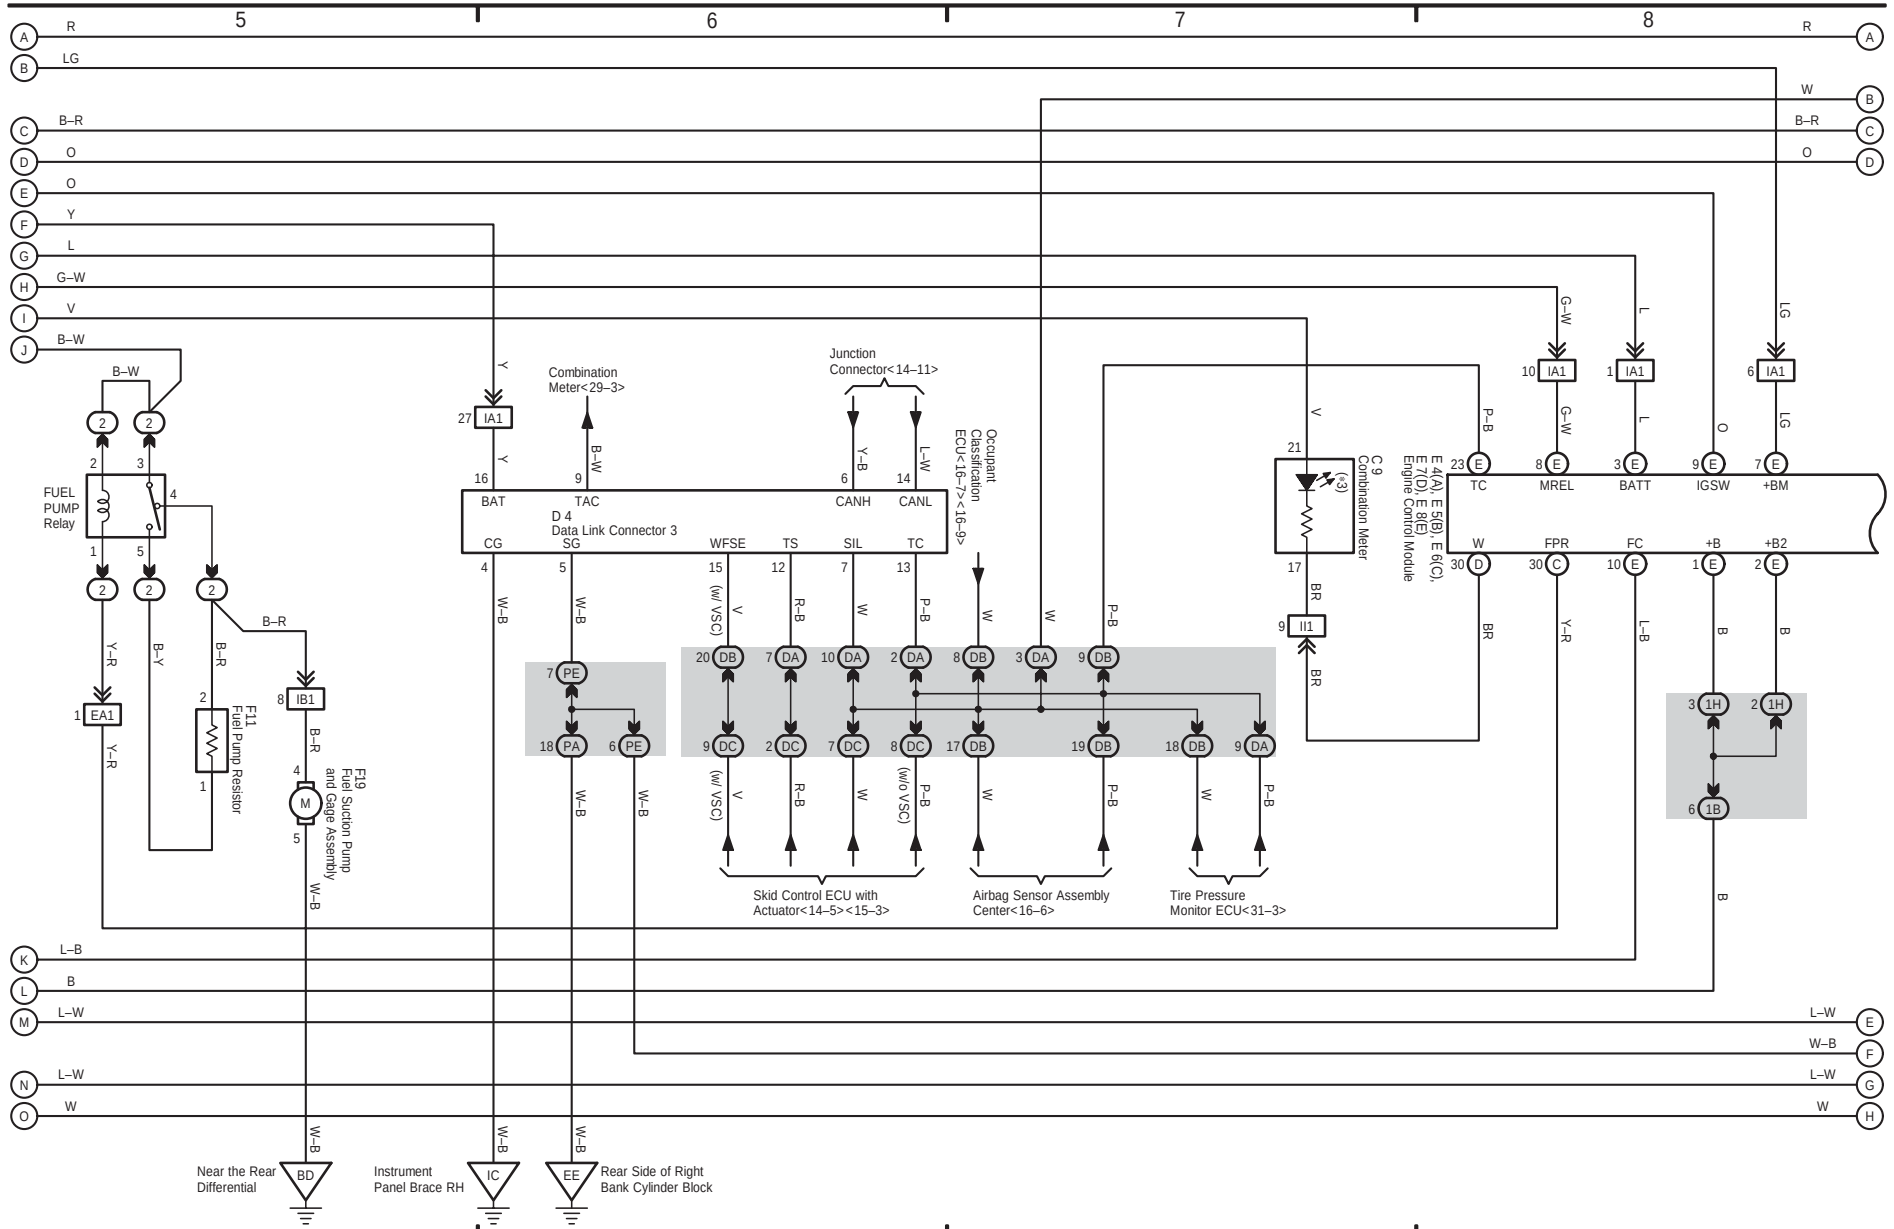

(Cont. next page)


4 TOYOTA TACOMA (Cont' d)

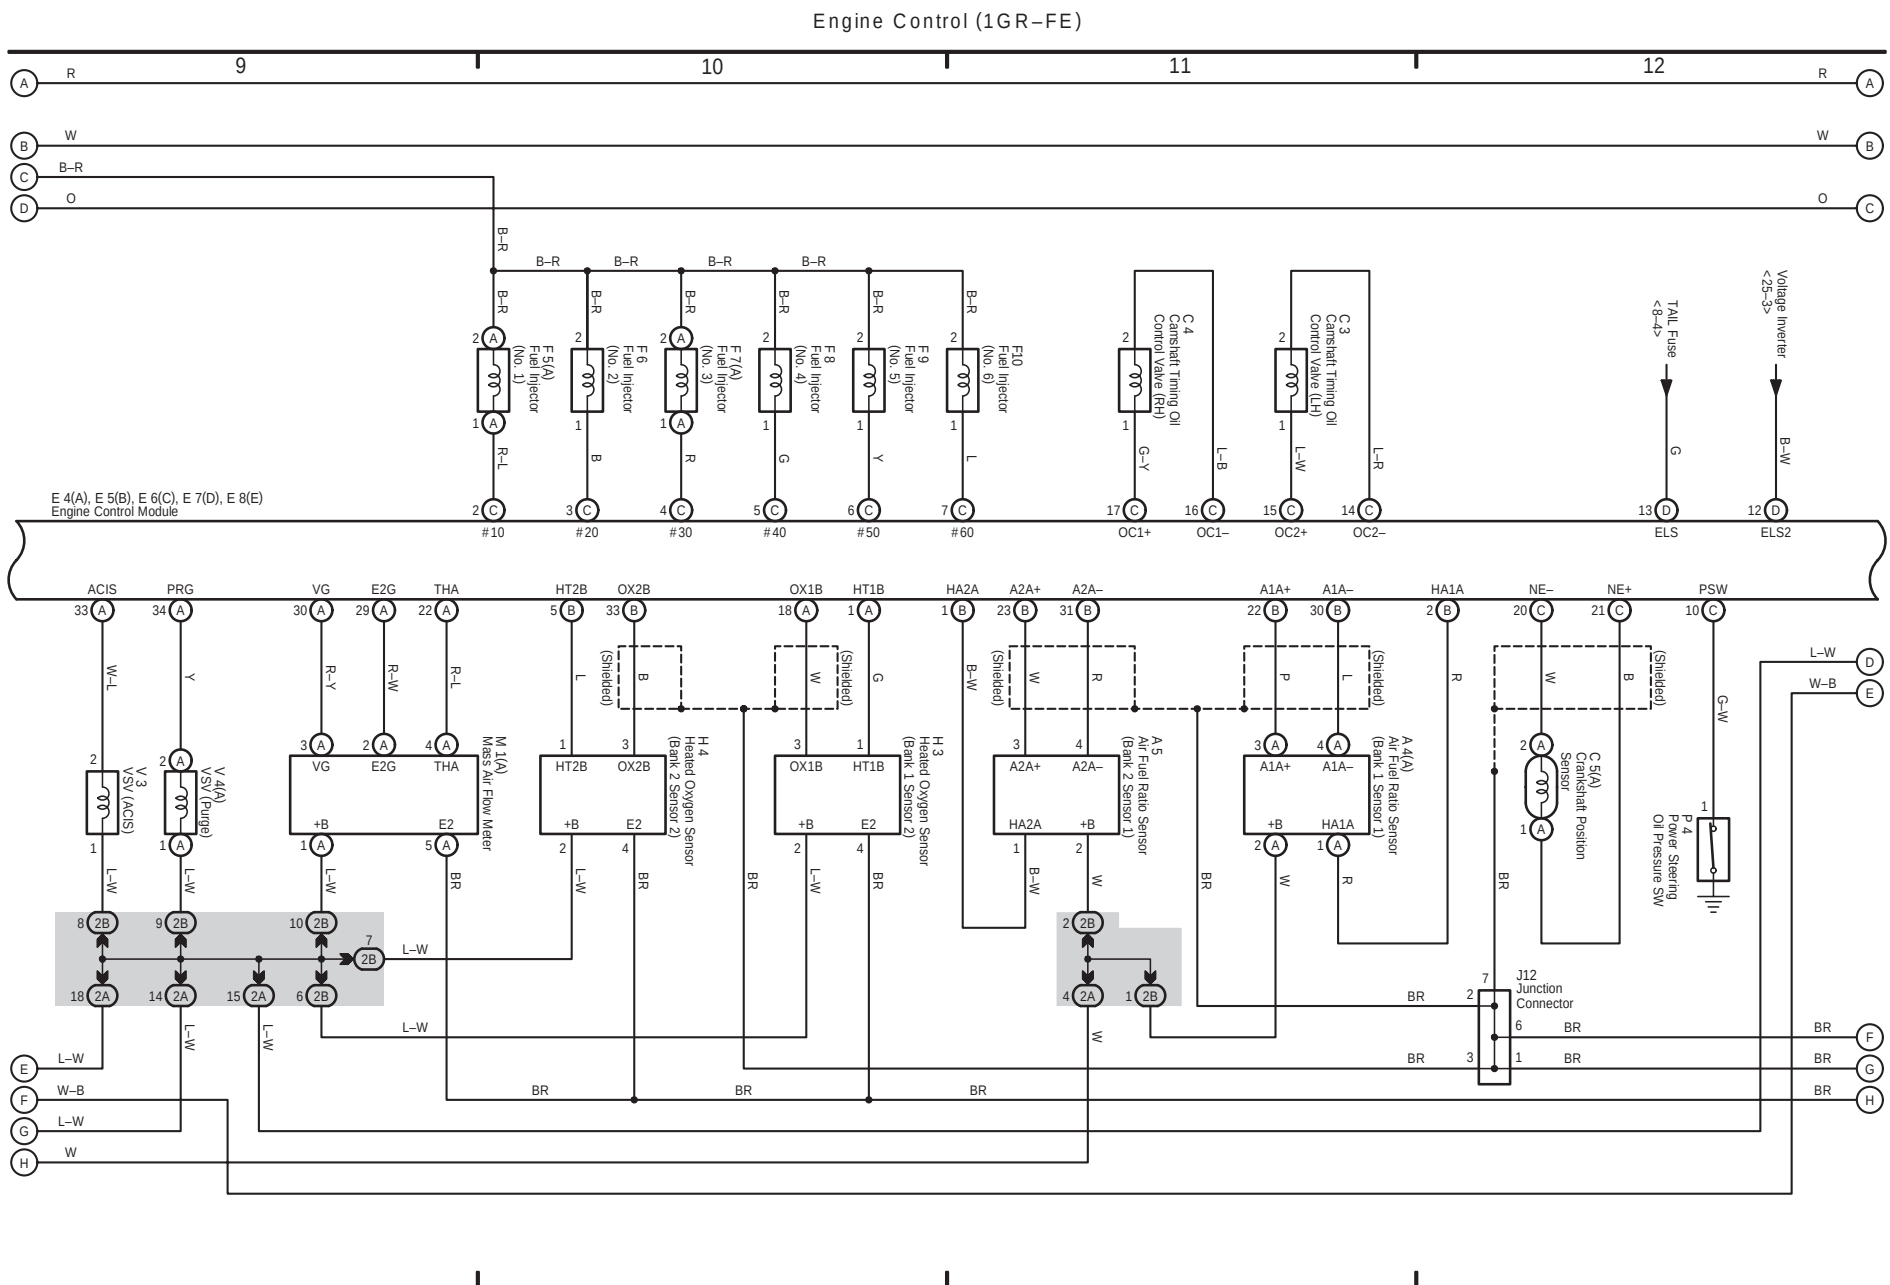

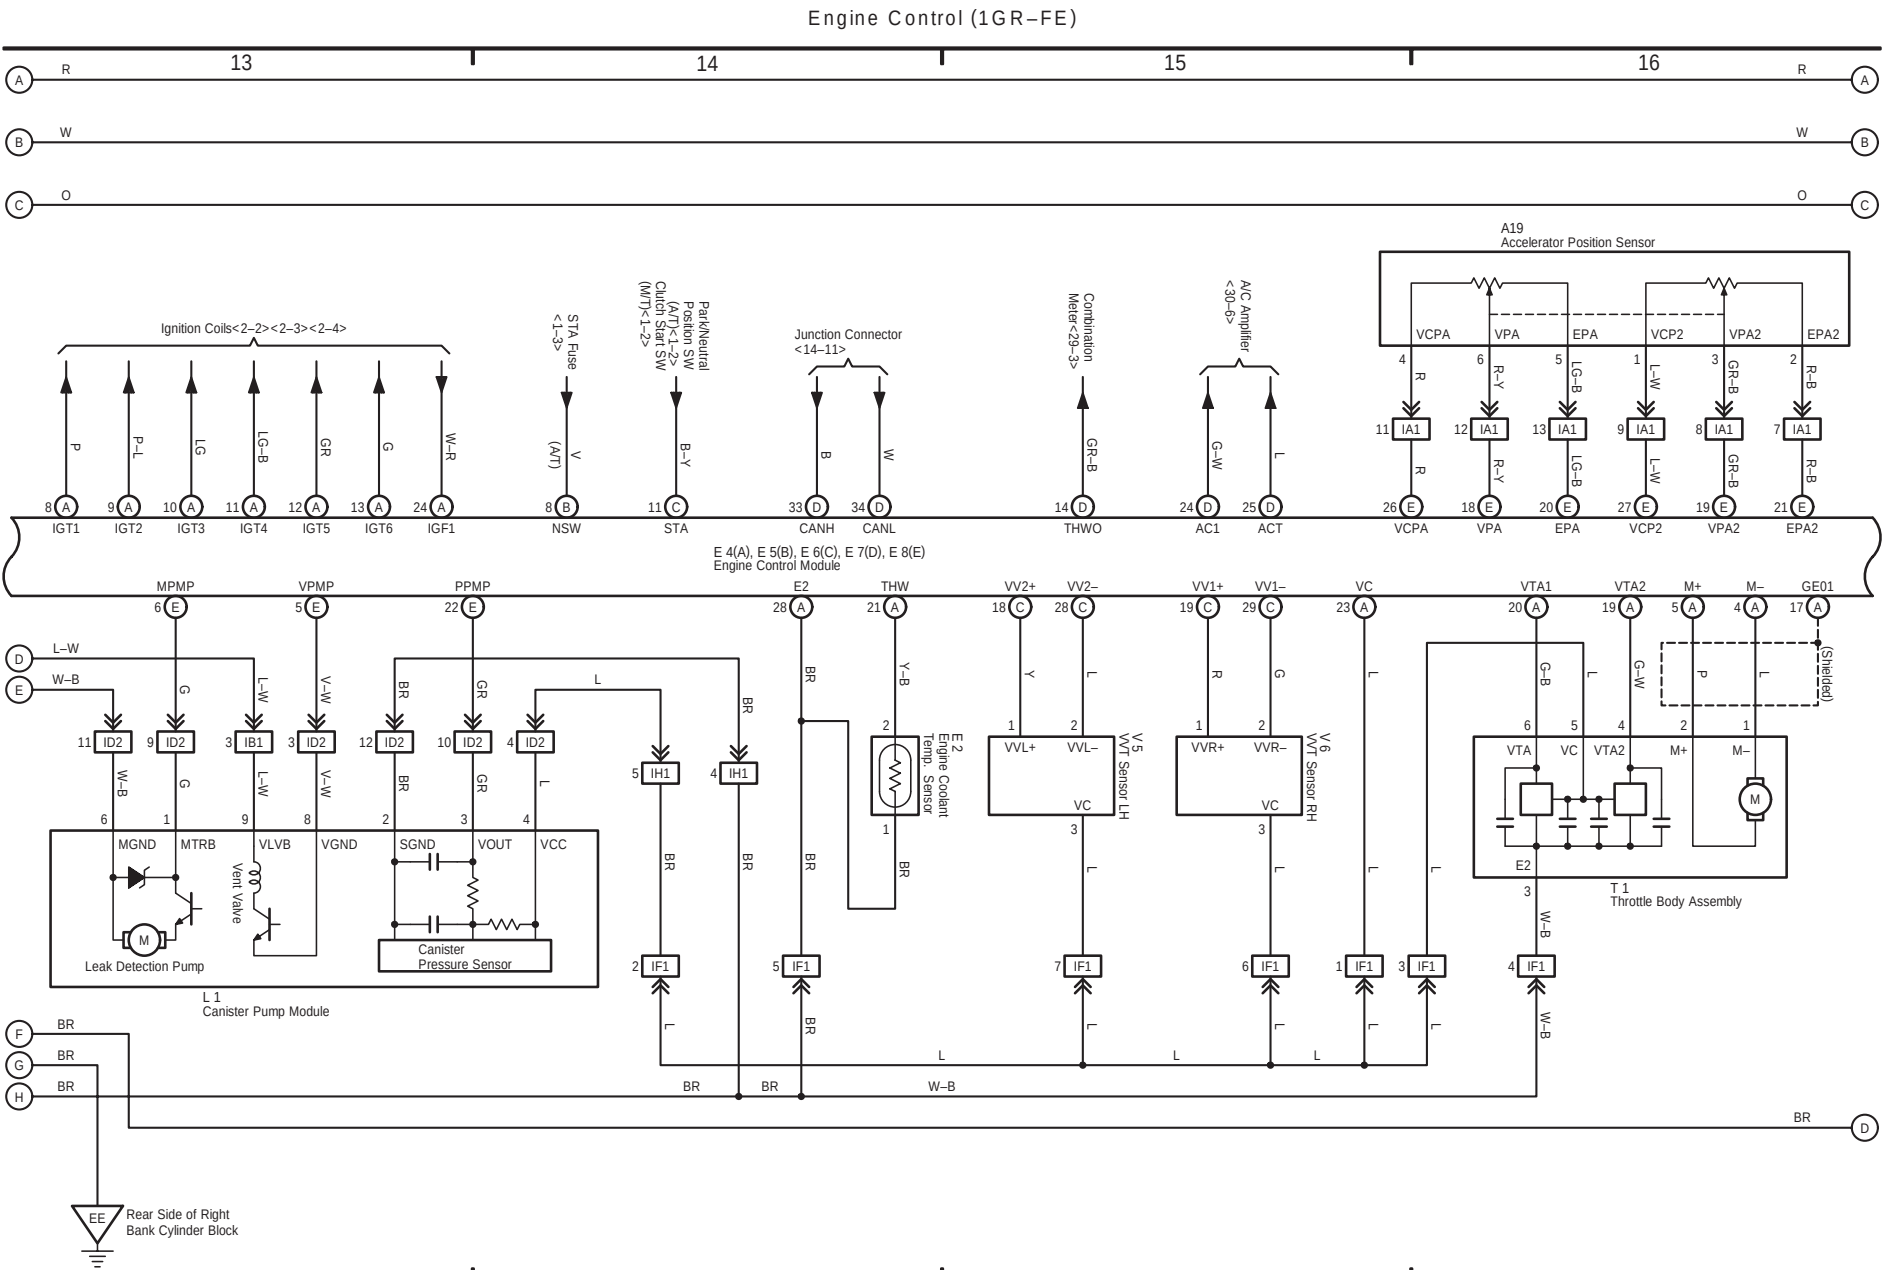


TOYOTA TACOMA (EM03N0U)

4 TOYOTA TACOMA (Cont' d)

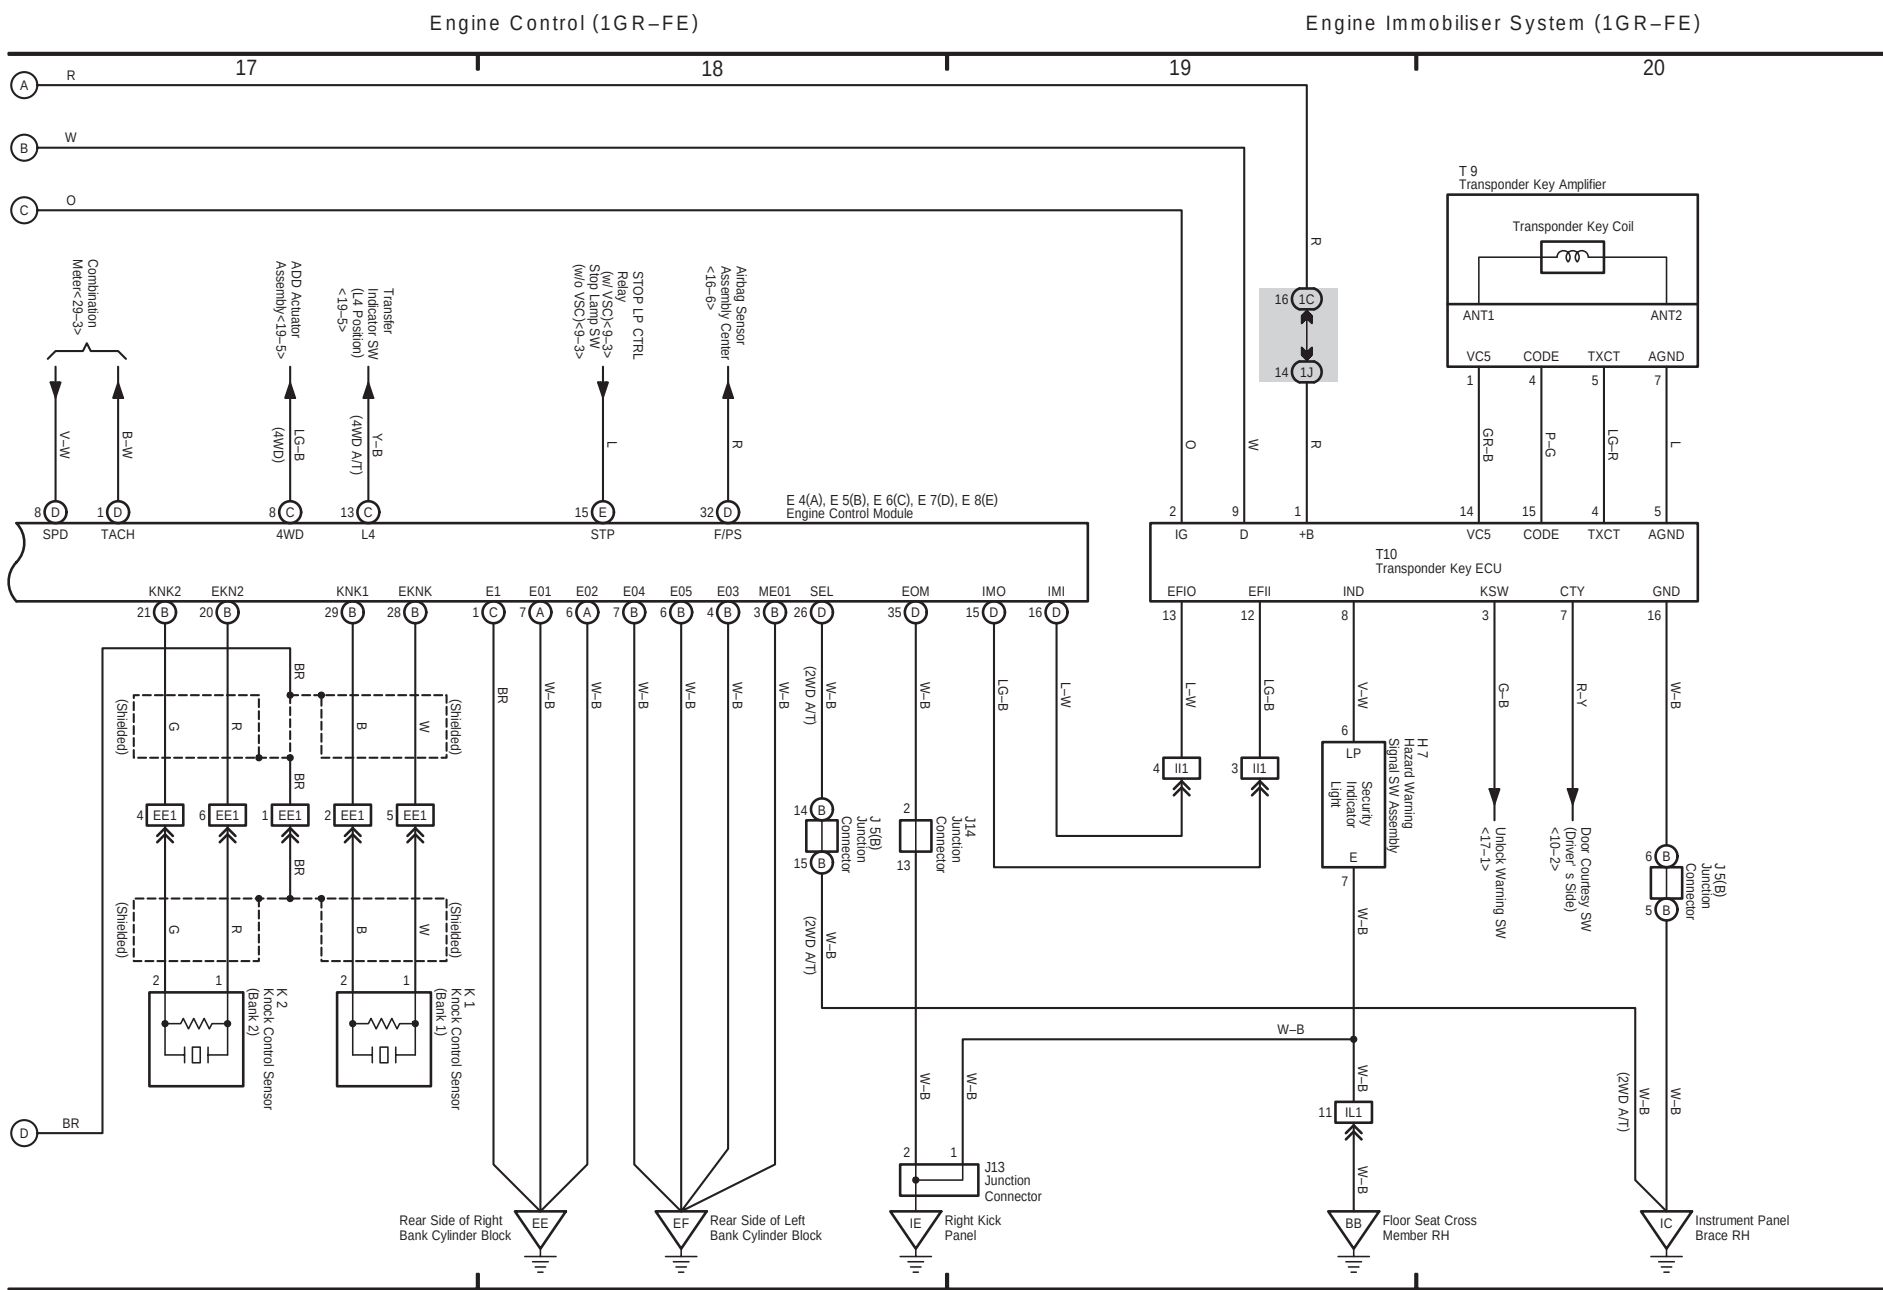


(Cont. next page)

5 TOYOTA TACOMA

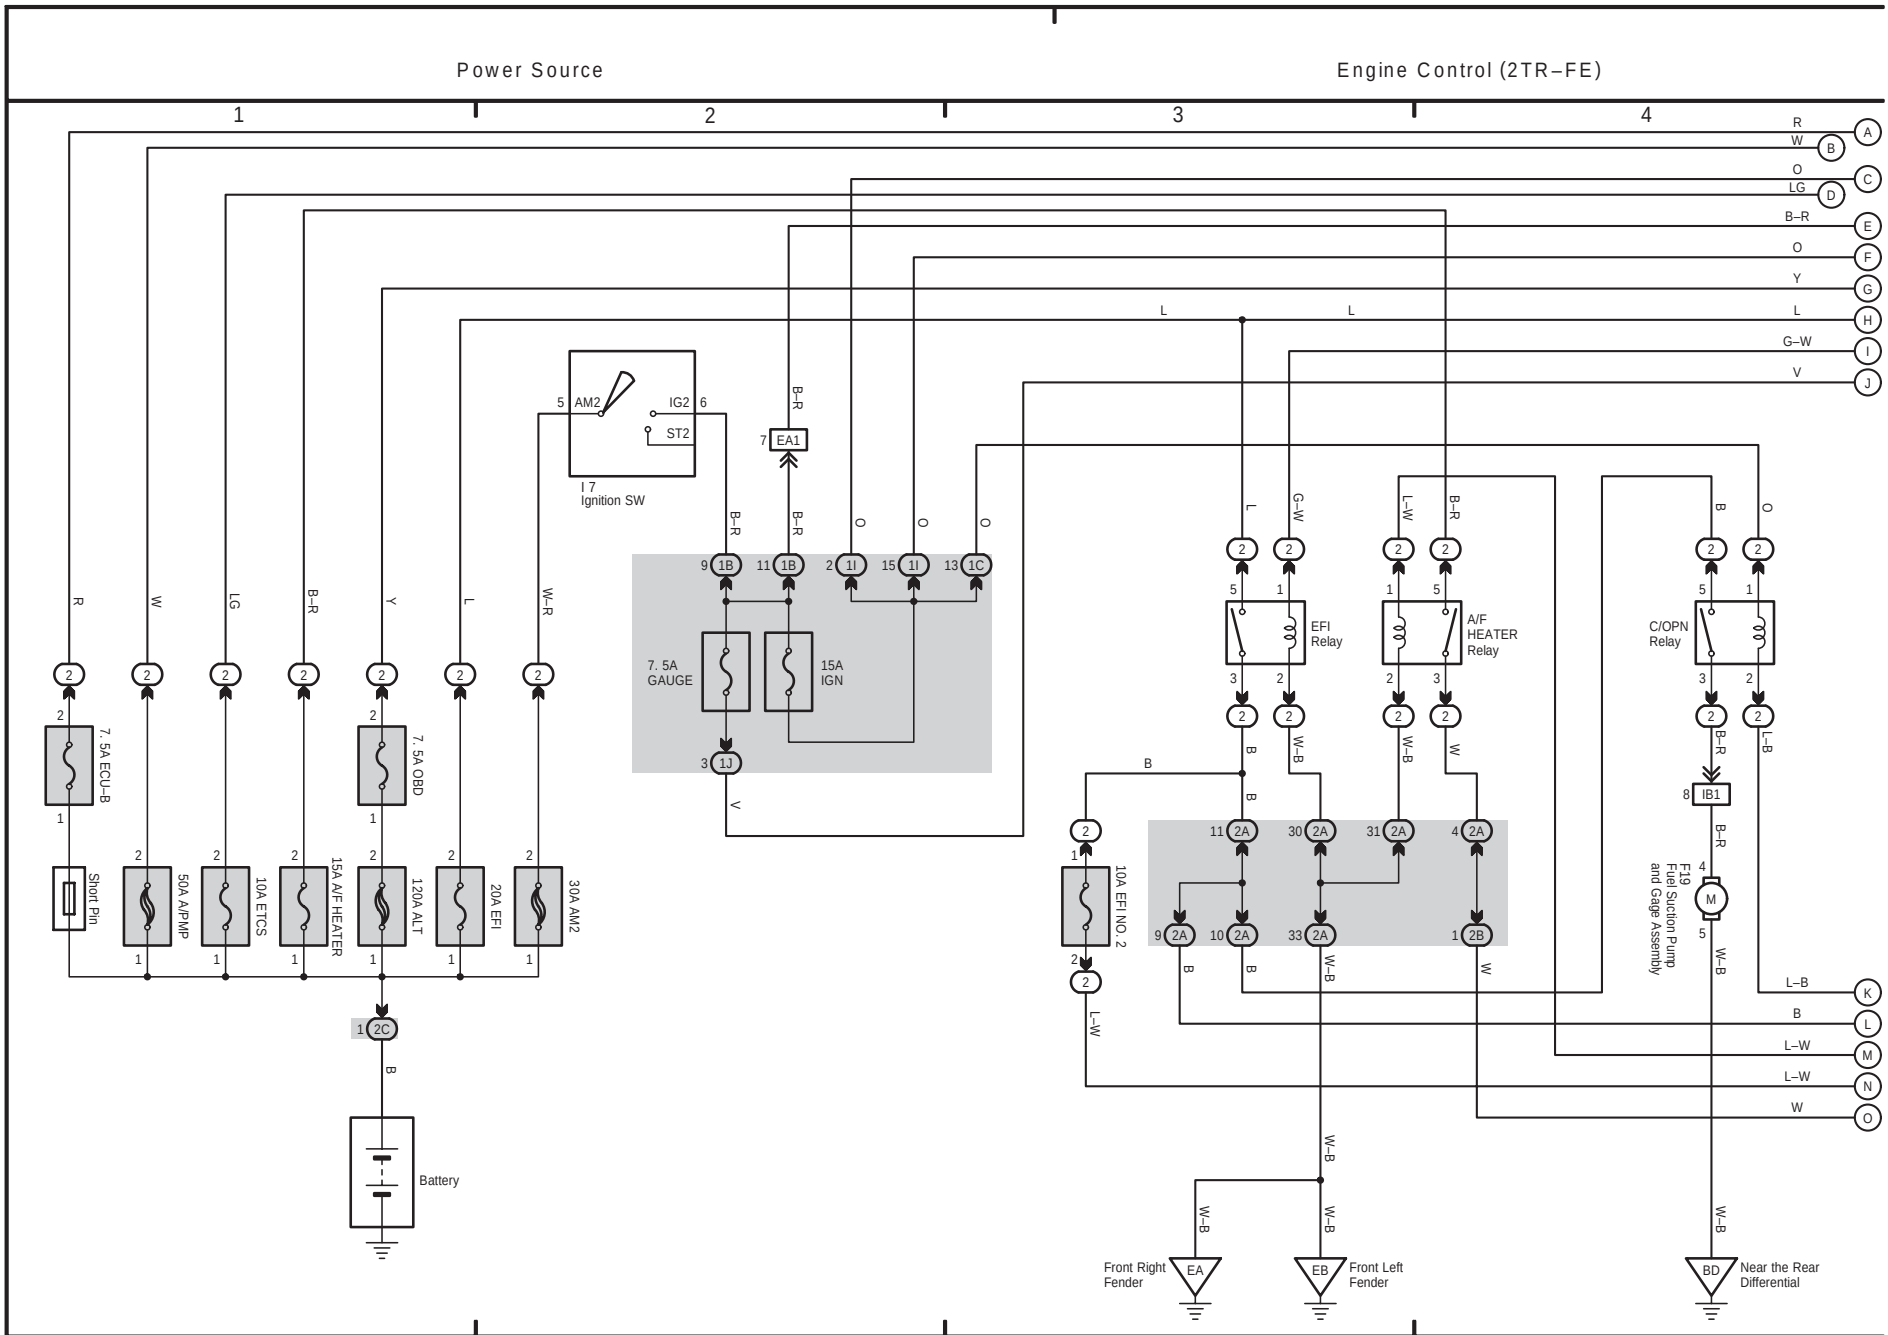

Engine Control (2TR-FE)


* 1 : Malfunction Indicator Lamp

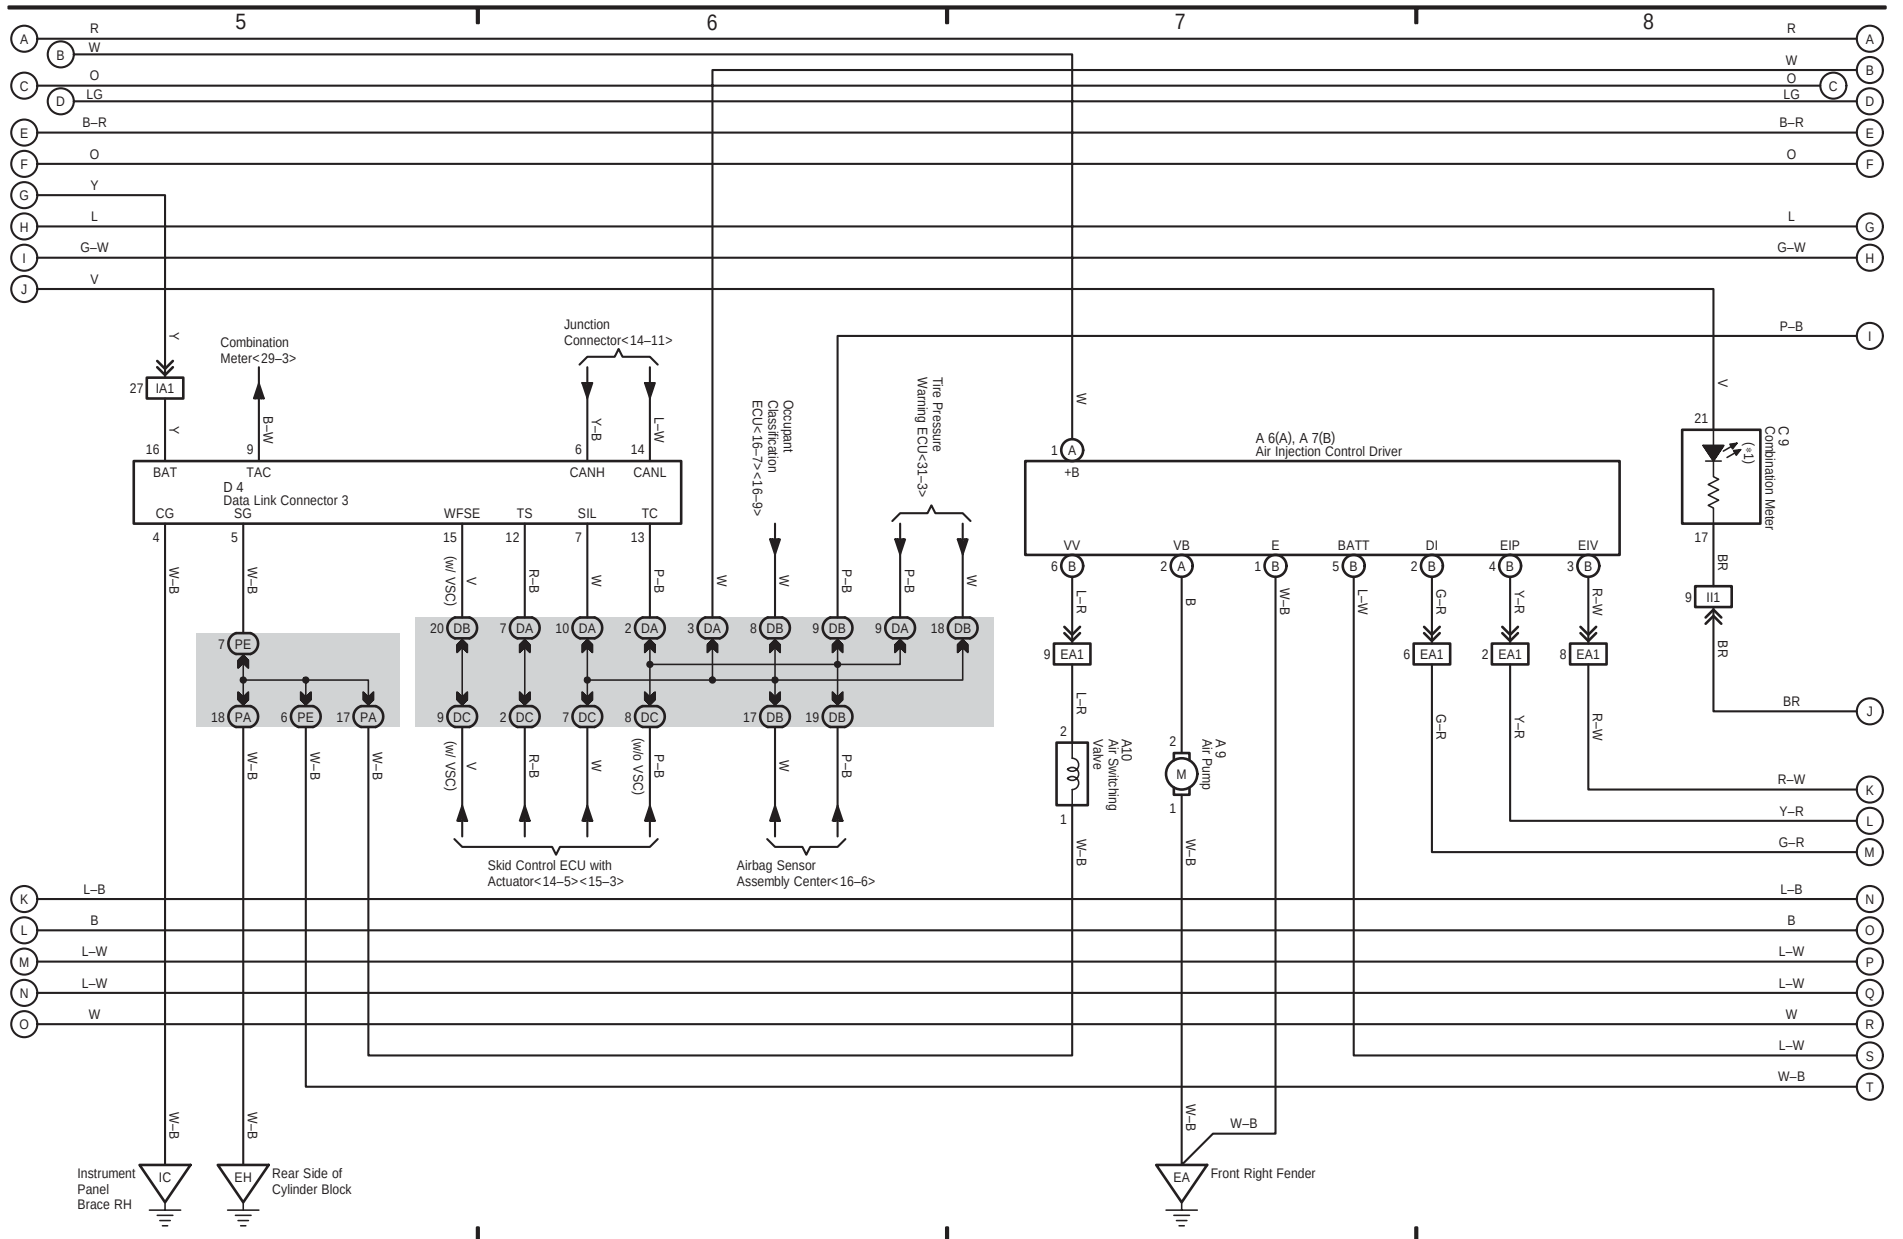


(Cont. next page)

5 TOYOTA TACOMA (Cont' d)


Engine Control (2TR-FE)

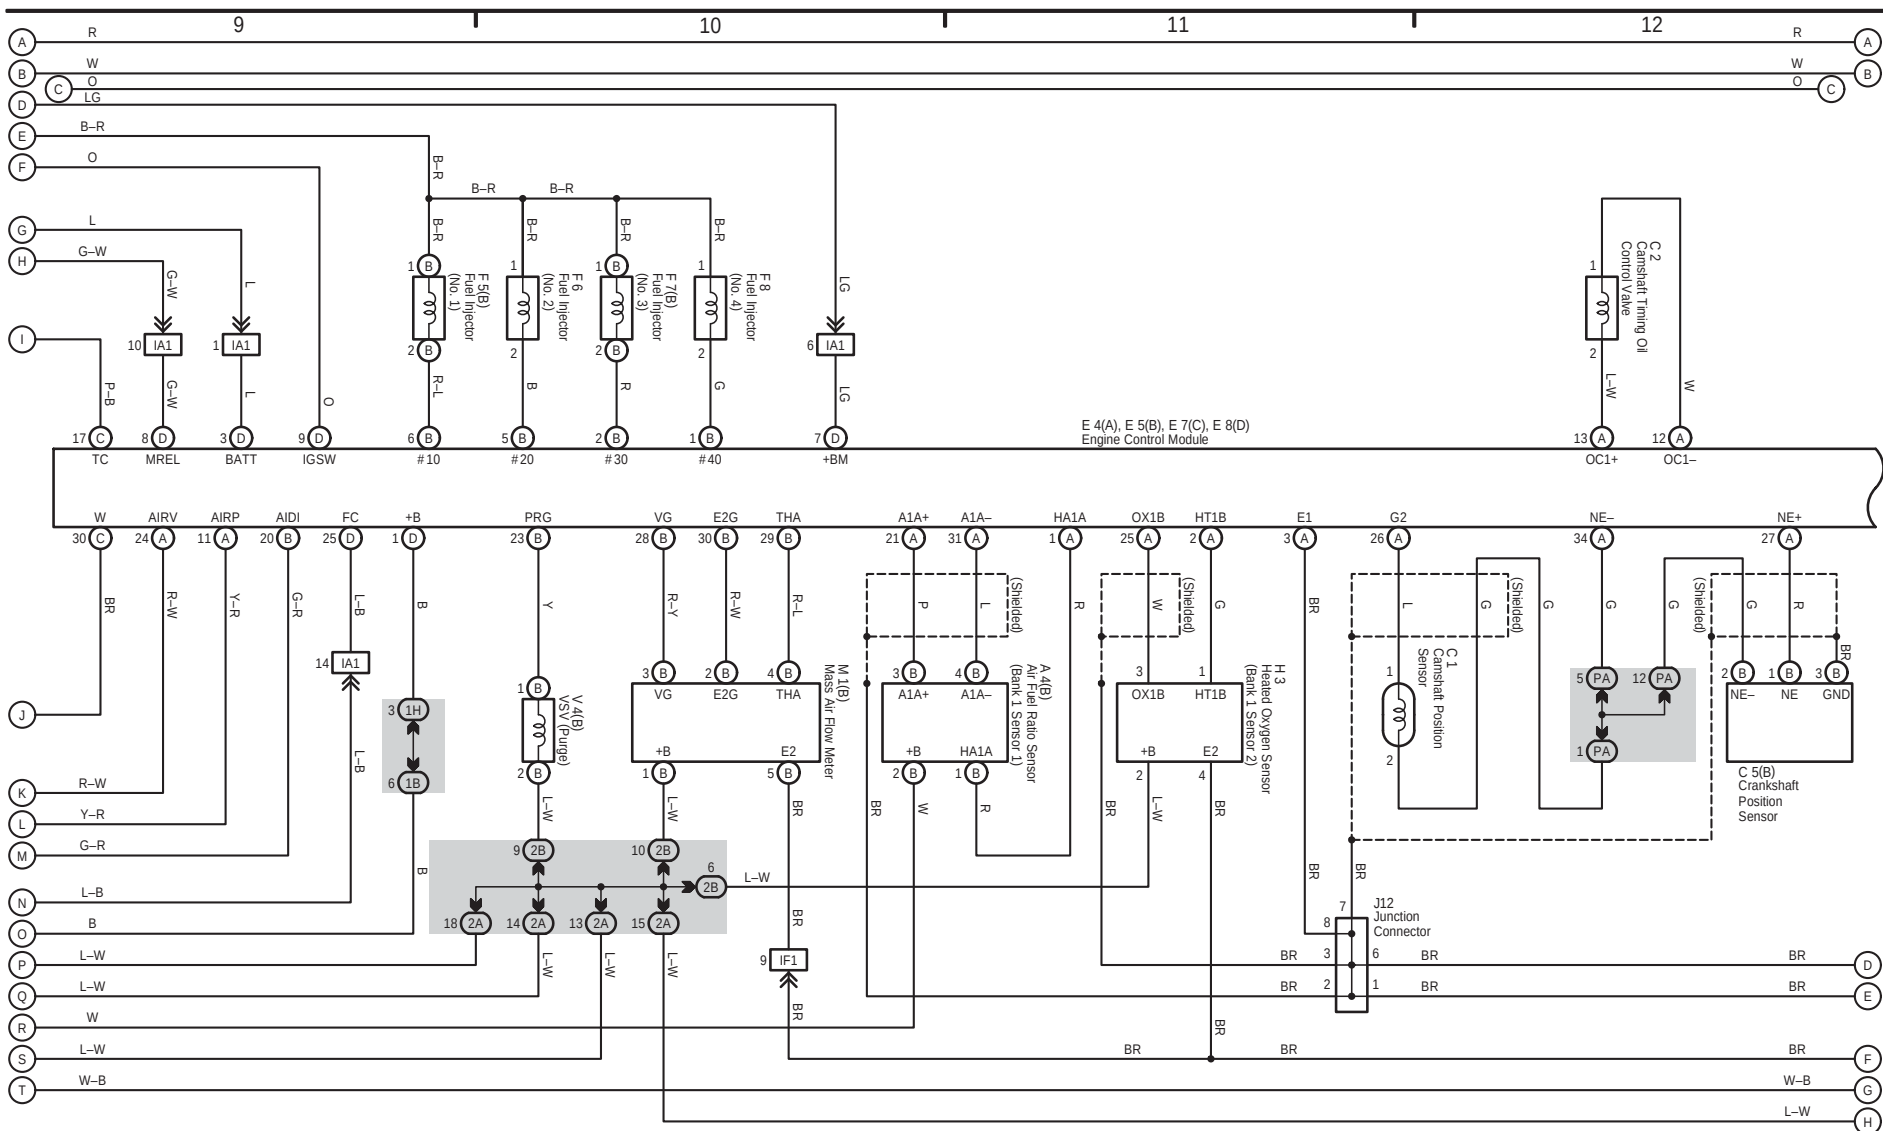

TOYOTA TACOMA (EM03N0U)

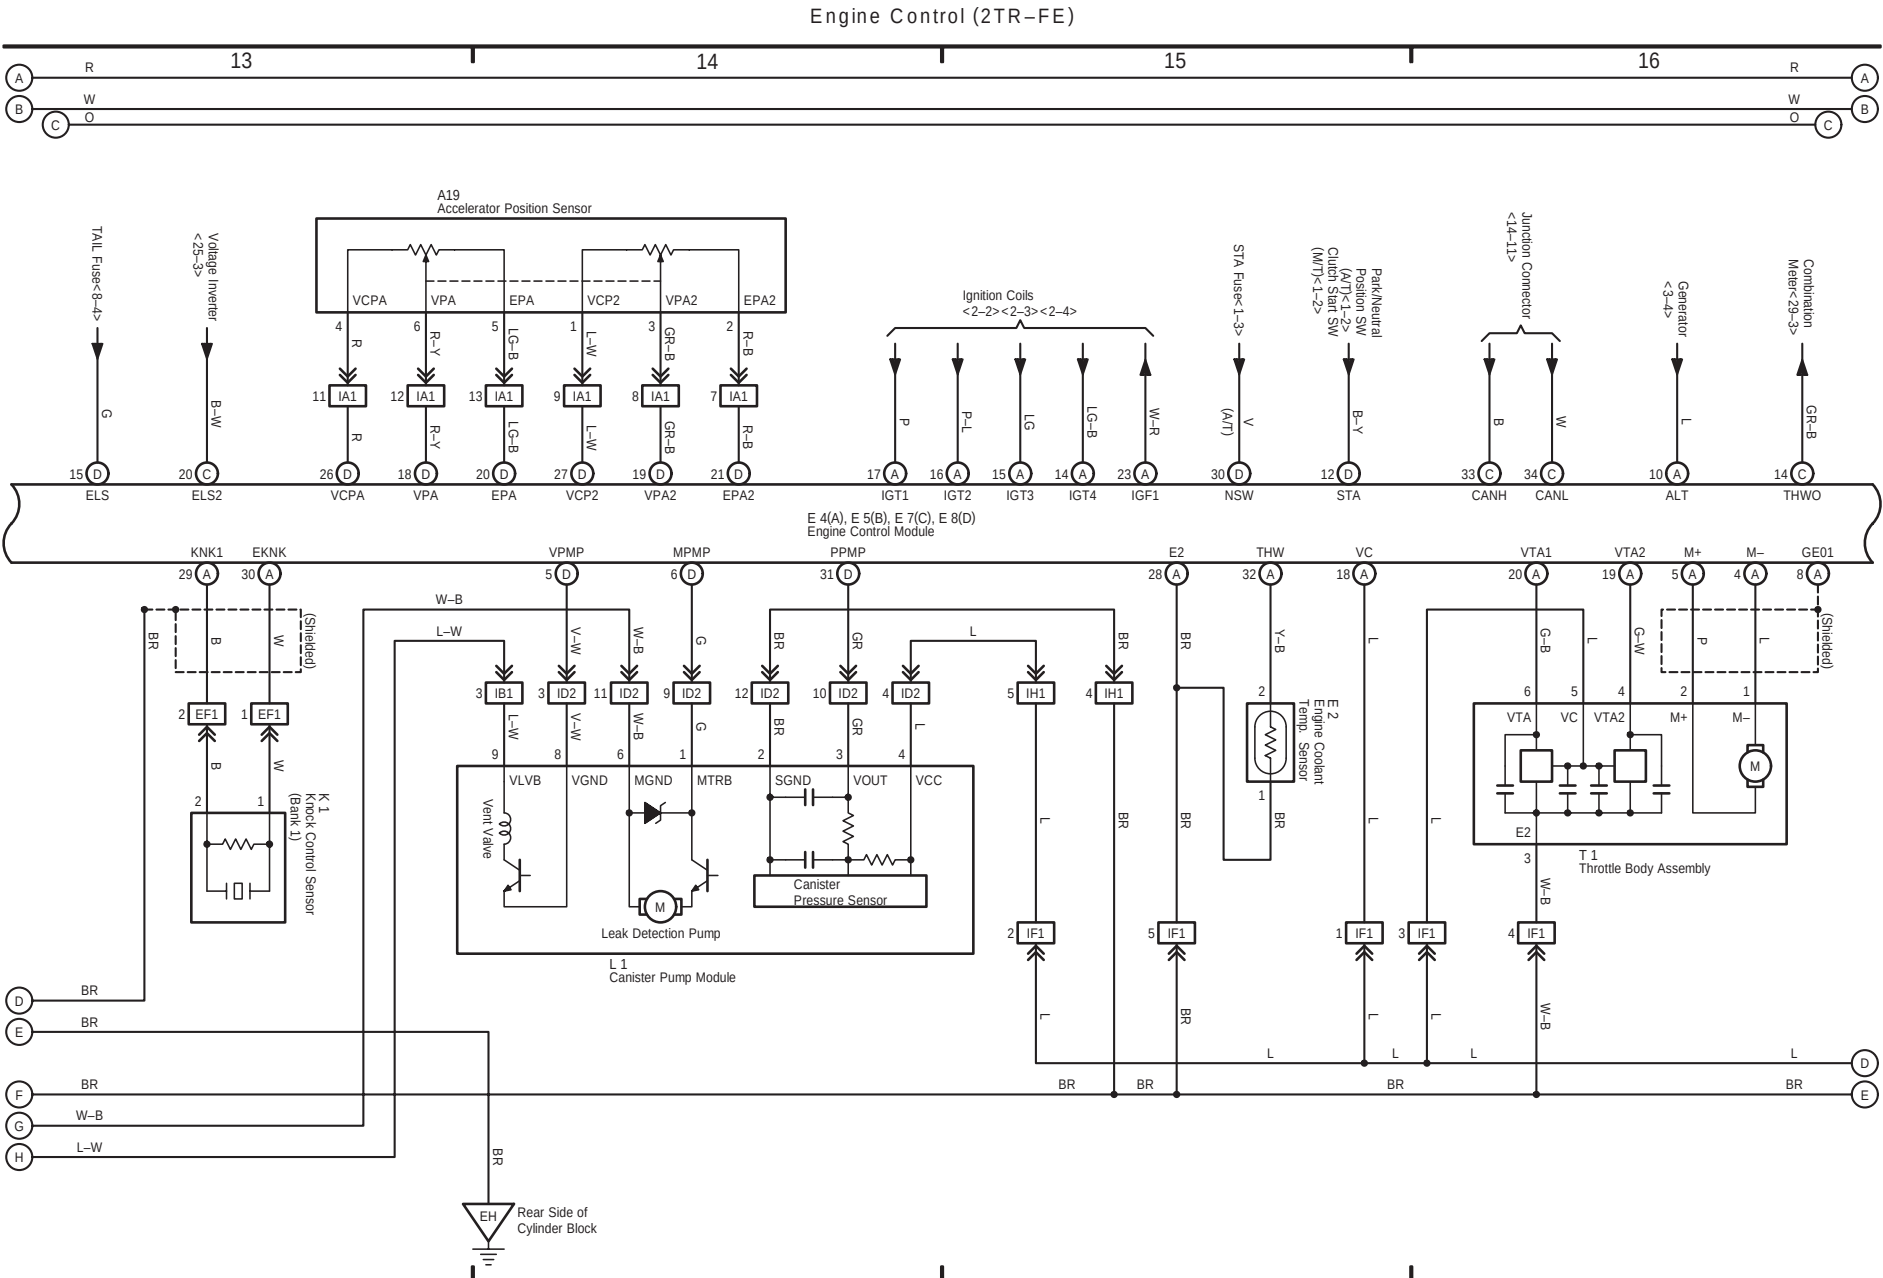



5 TOYOTA TACOMA (Cont' d)

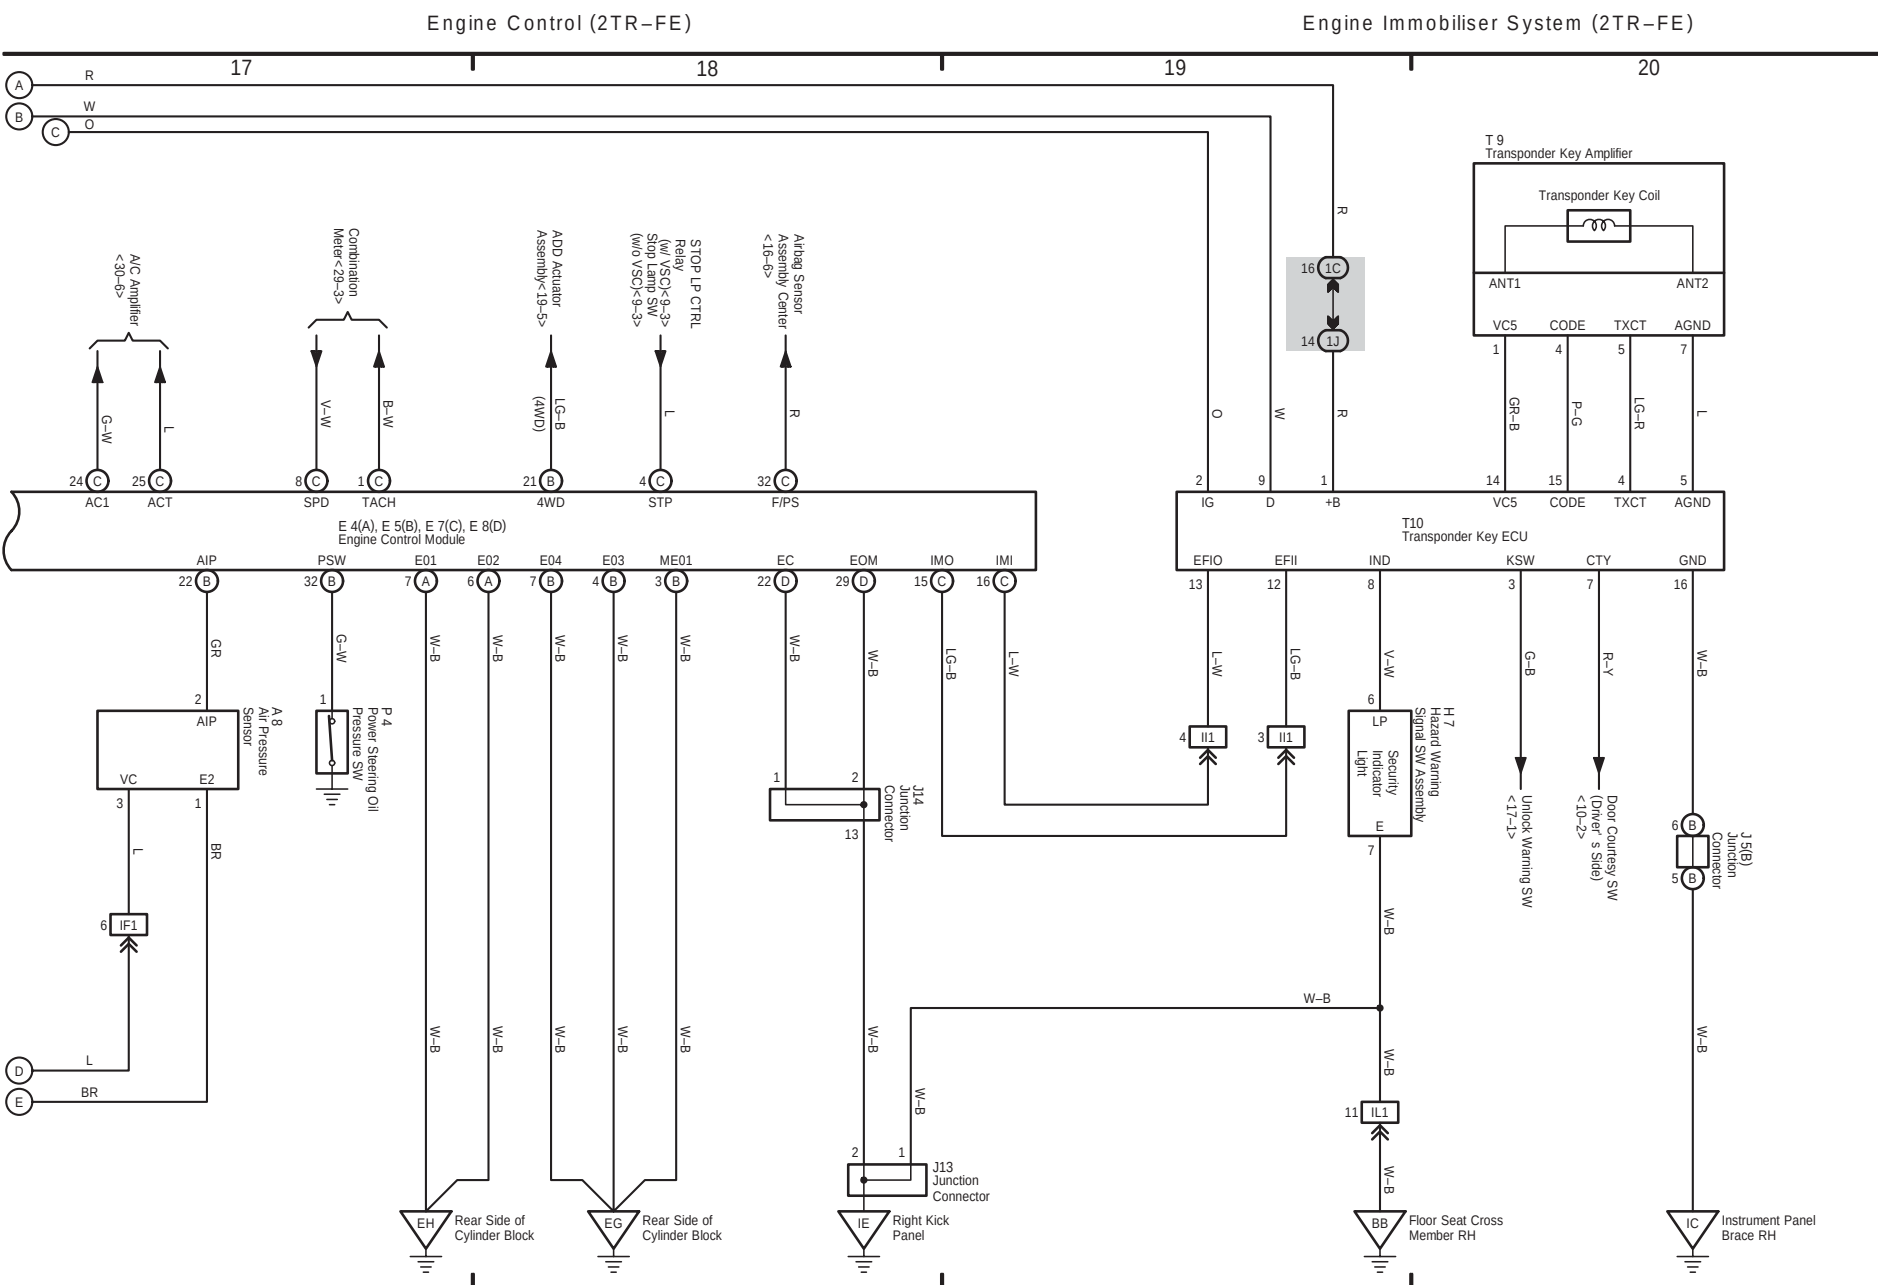


TOYOTA TACOMA (EM03N0U)



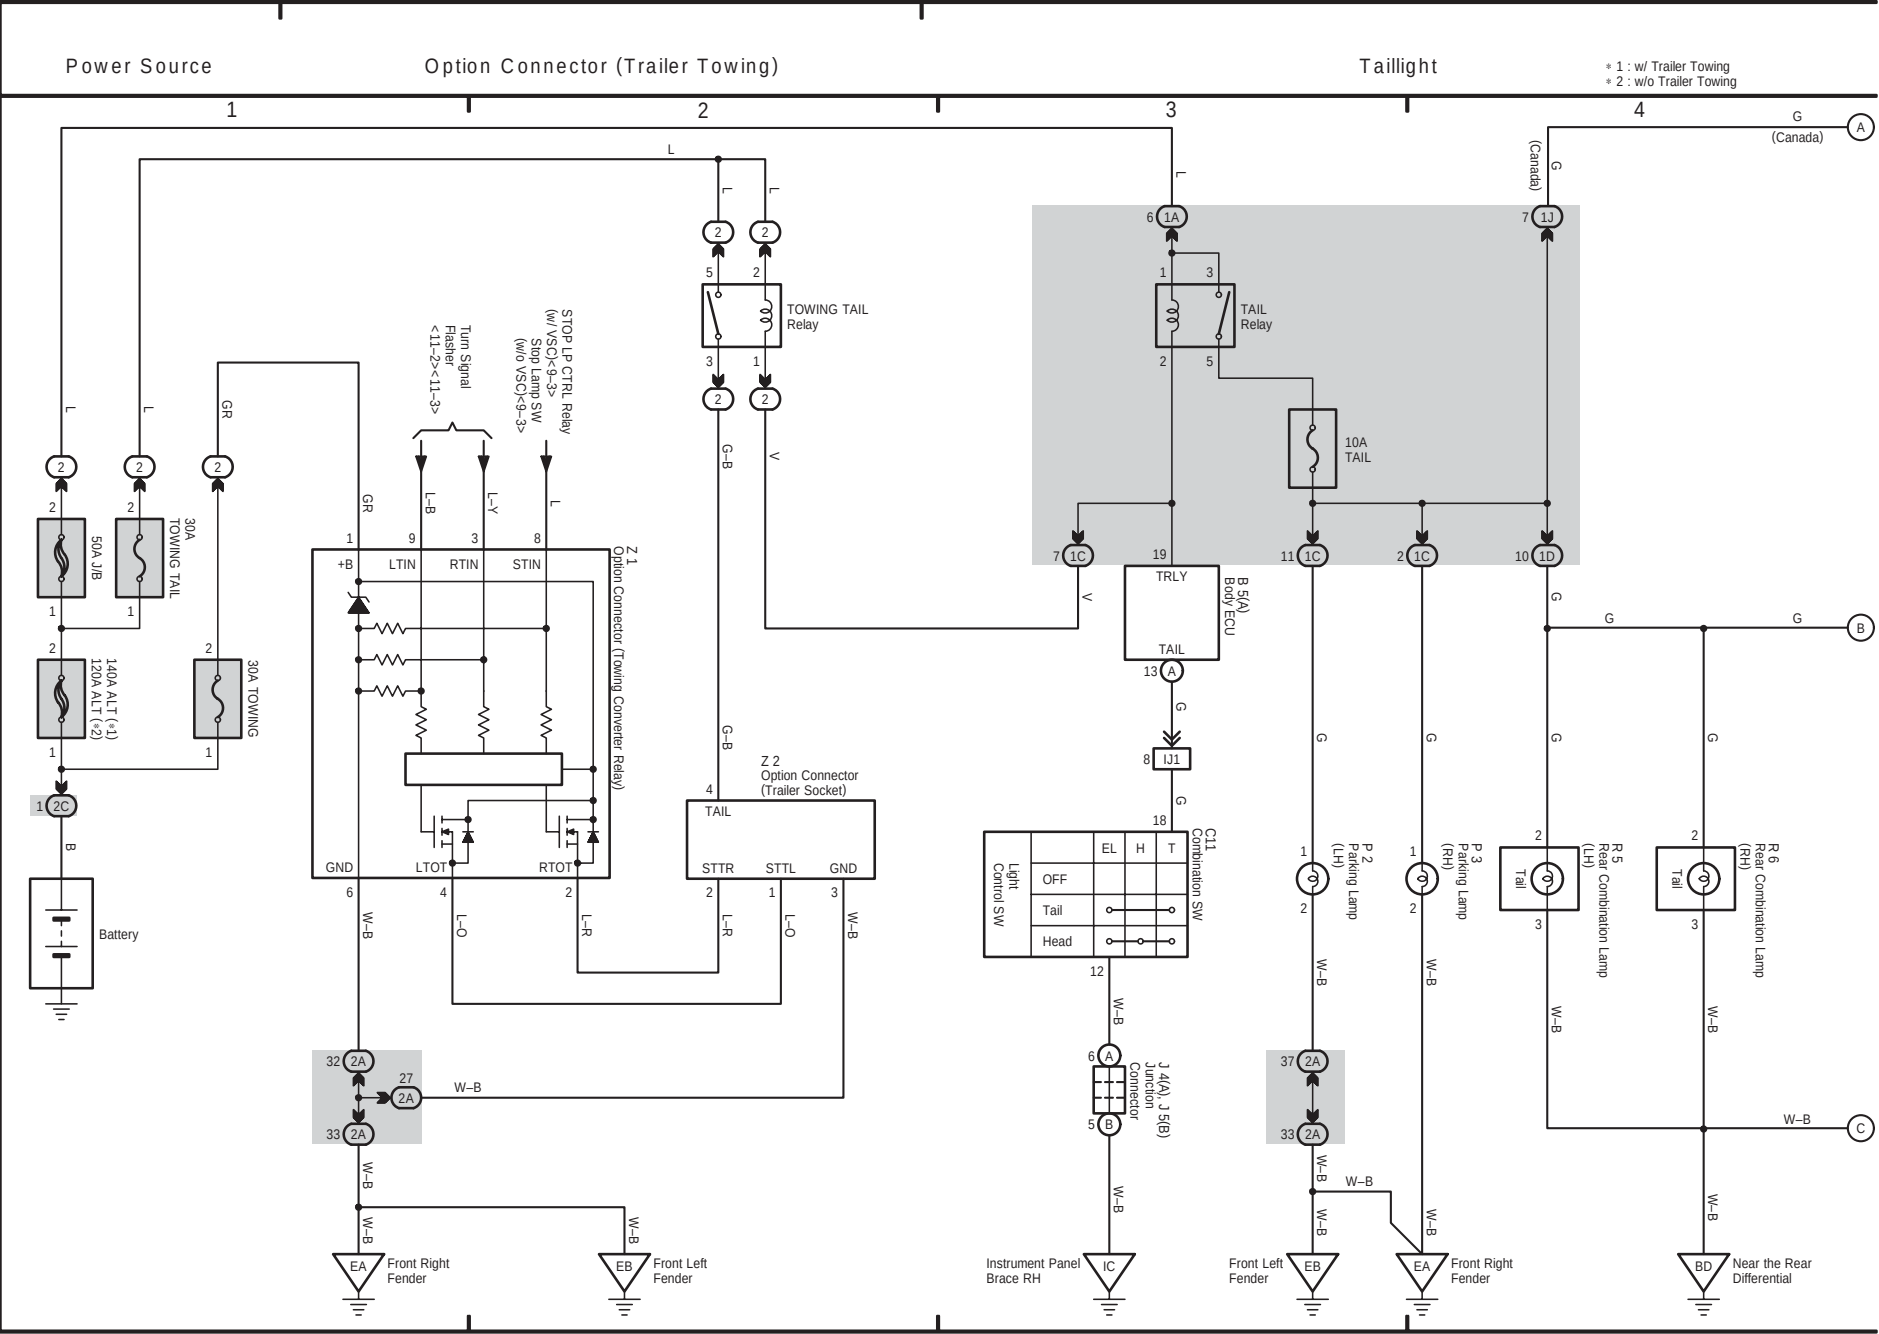


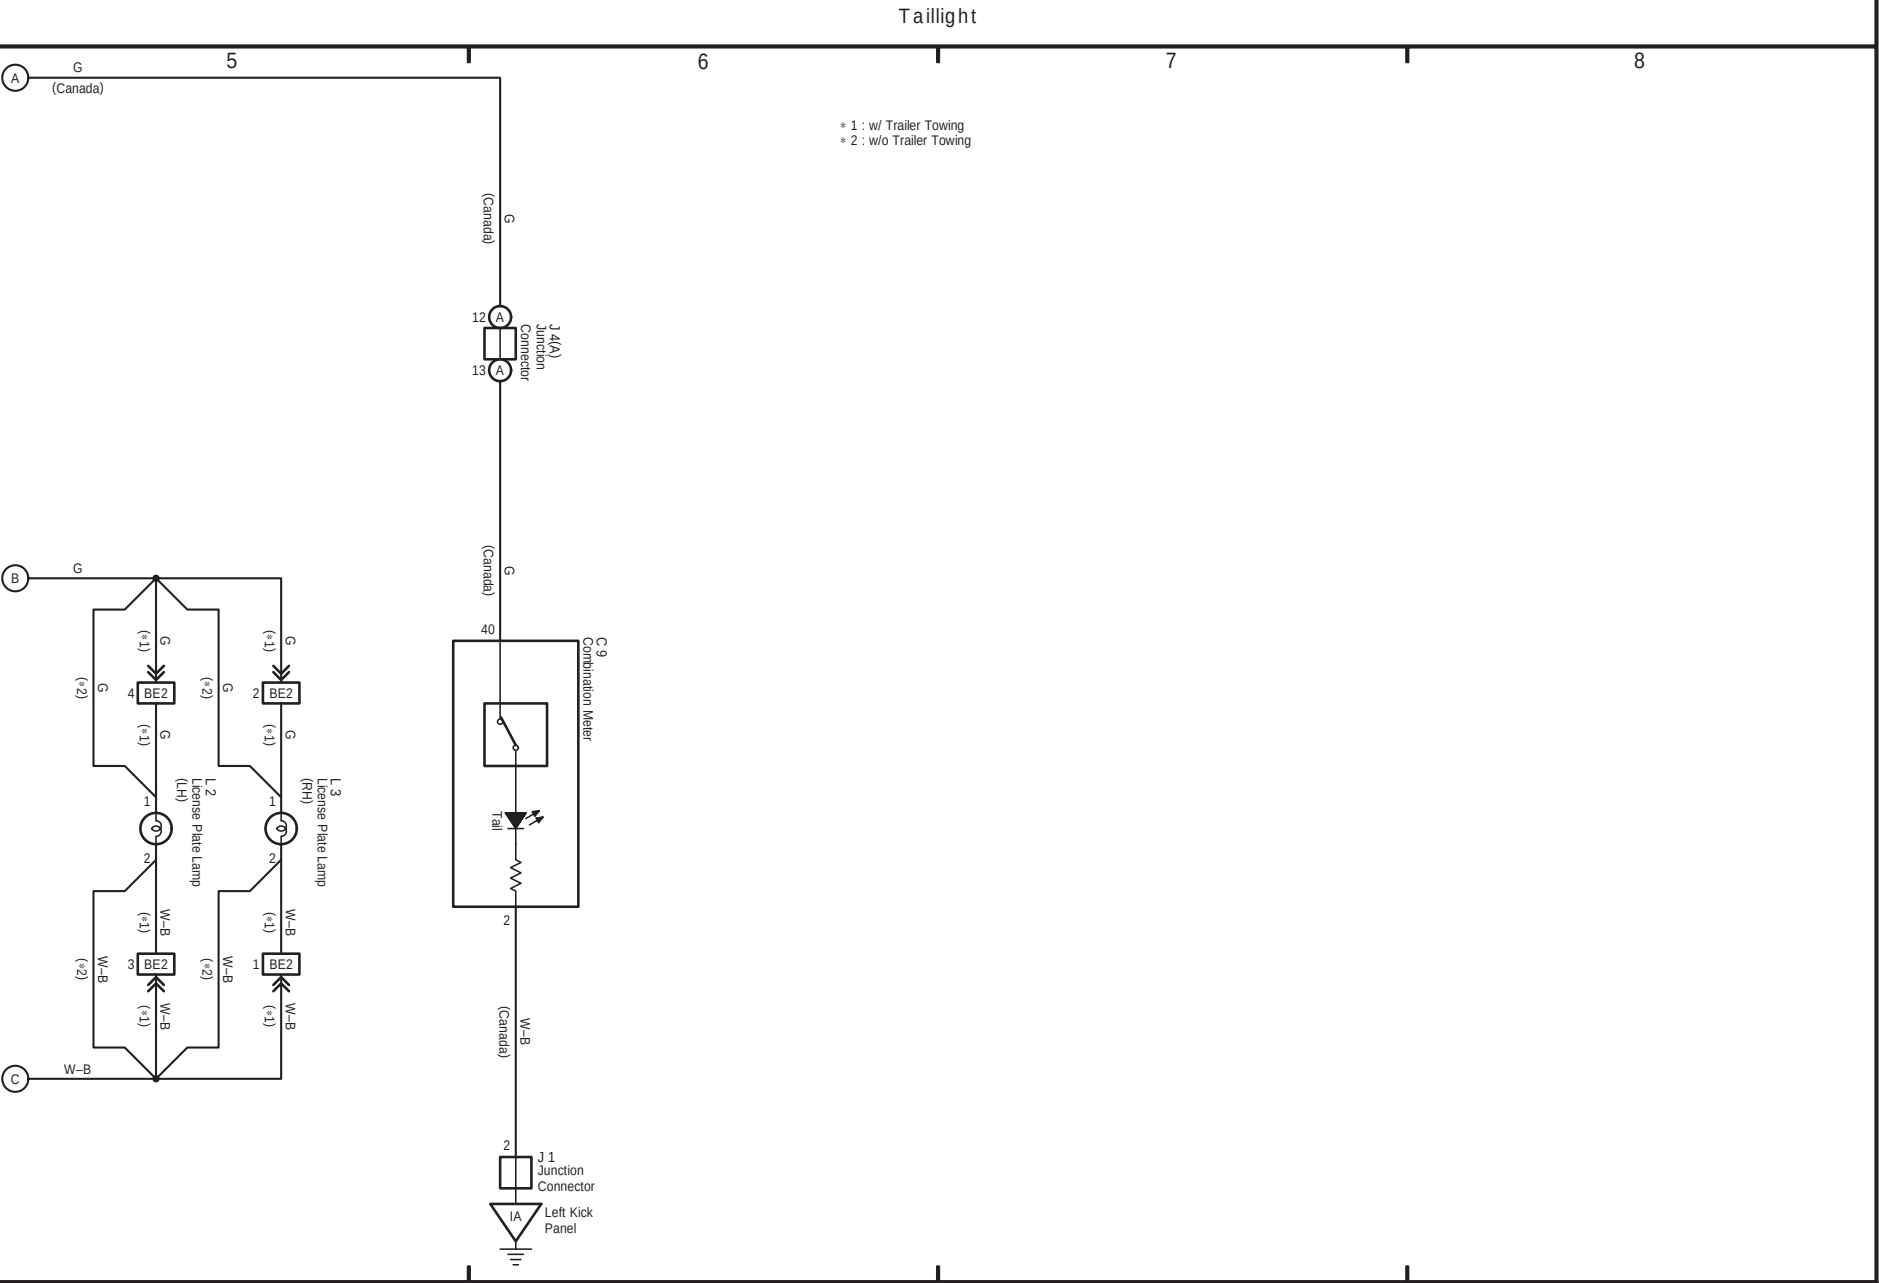


TOYOTA TACOMA (EM03N0U)

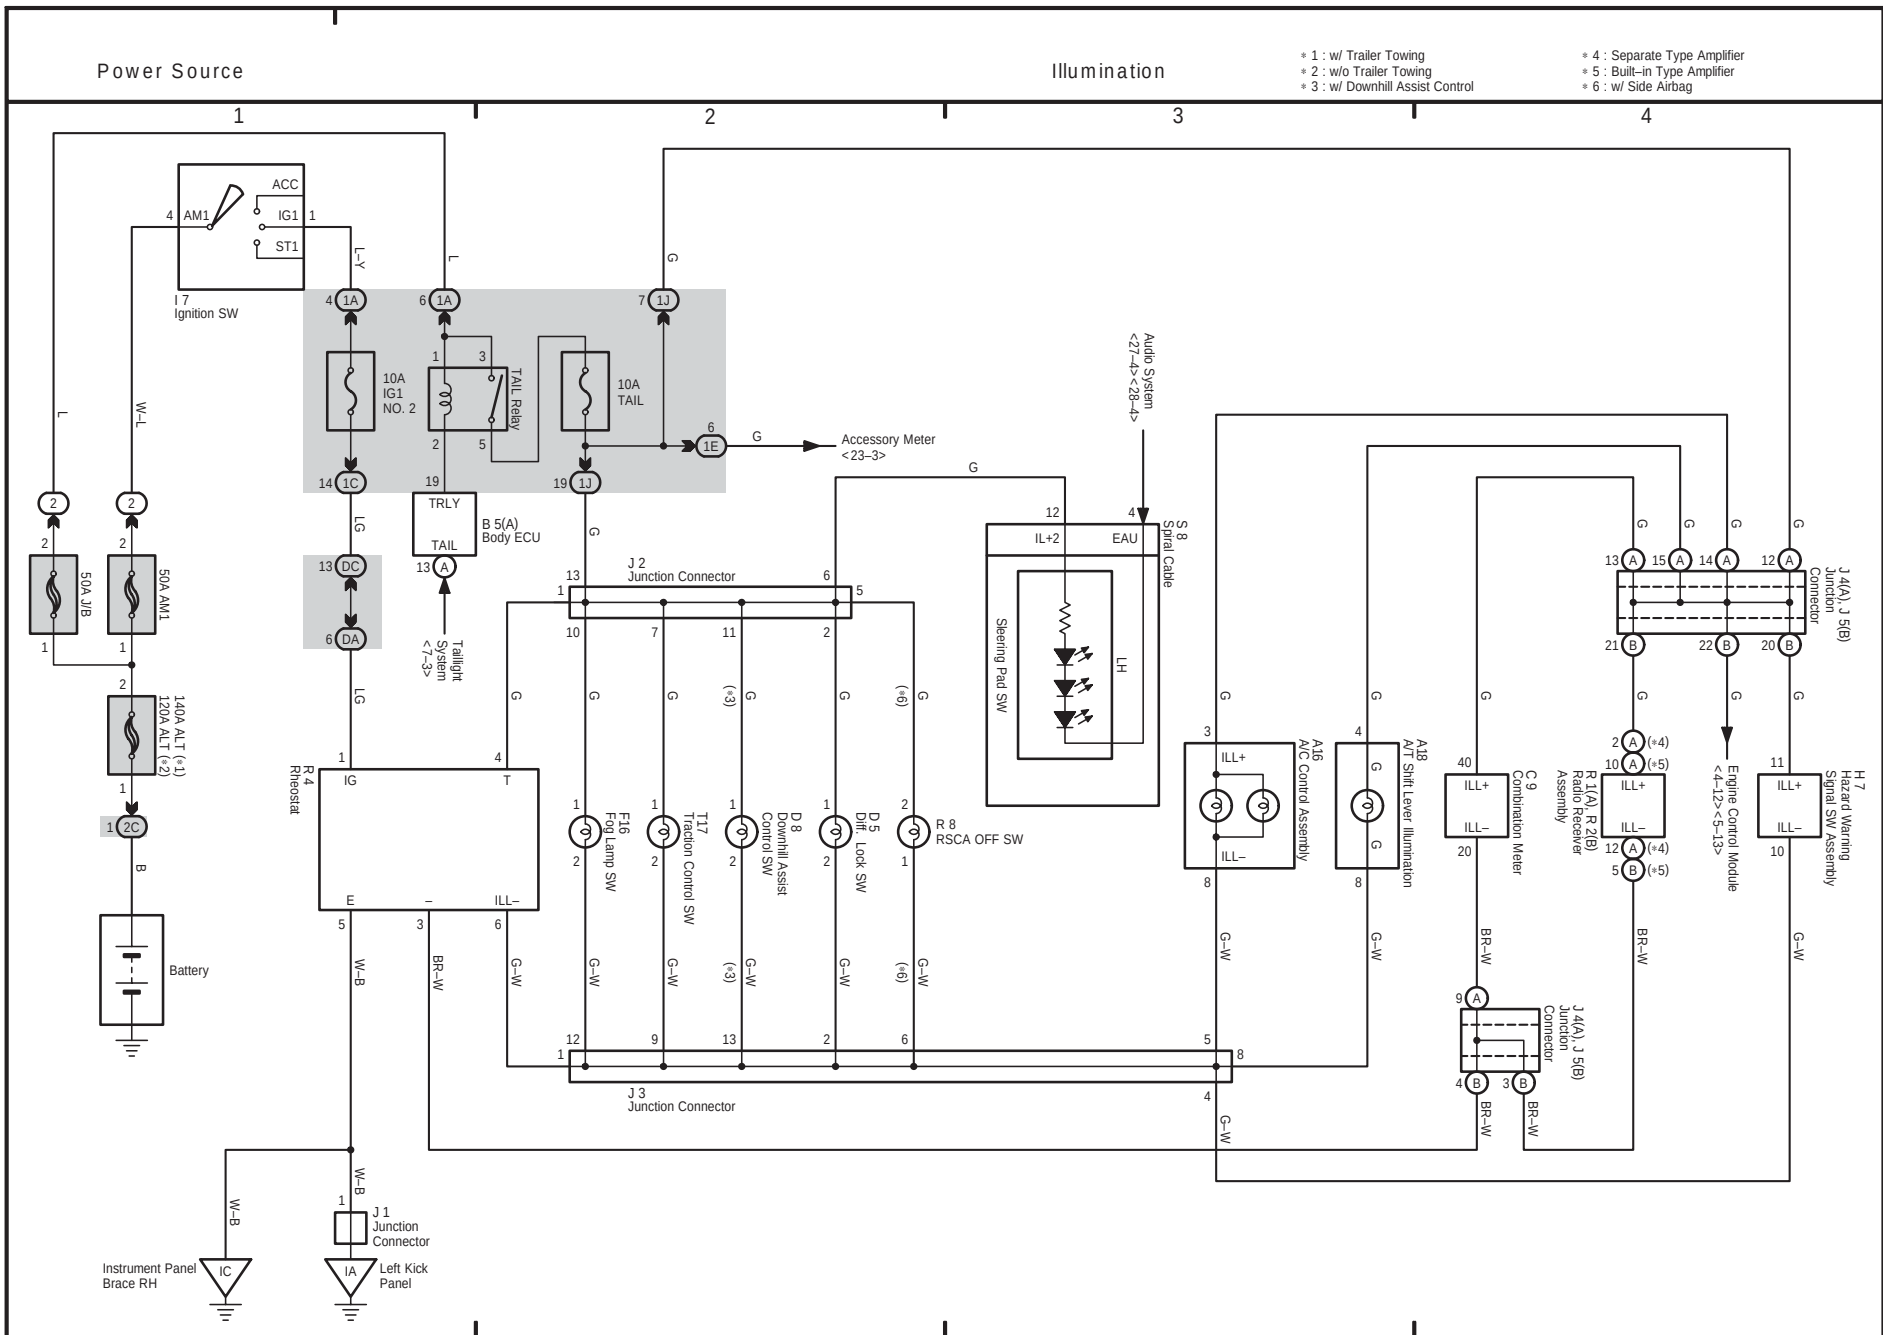

9 TOYOTA TACOMA

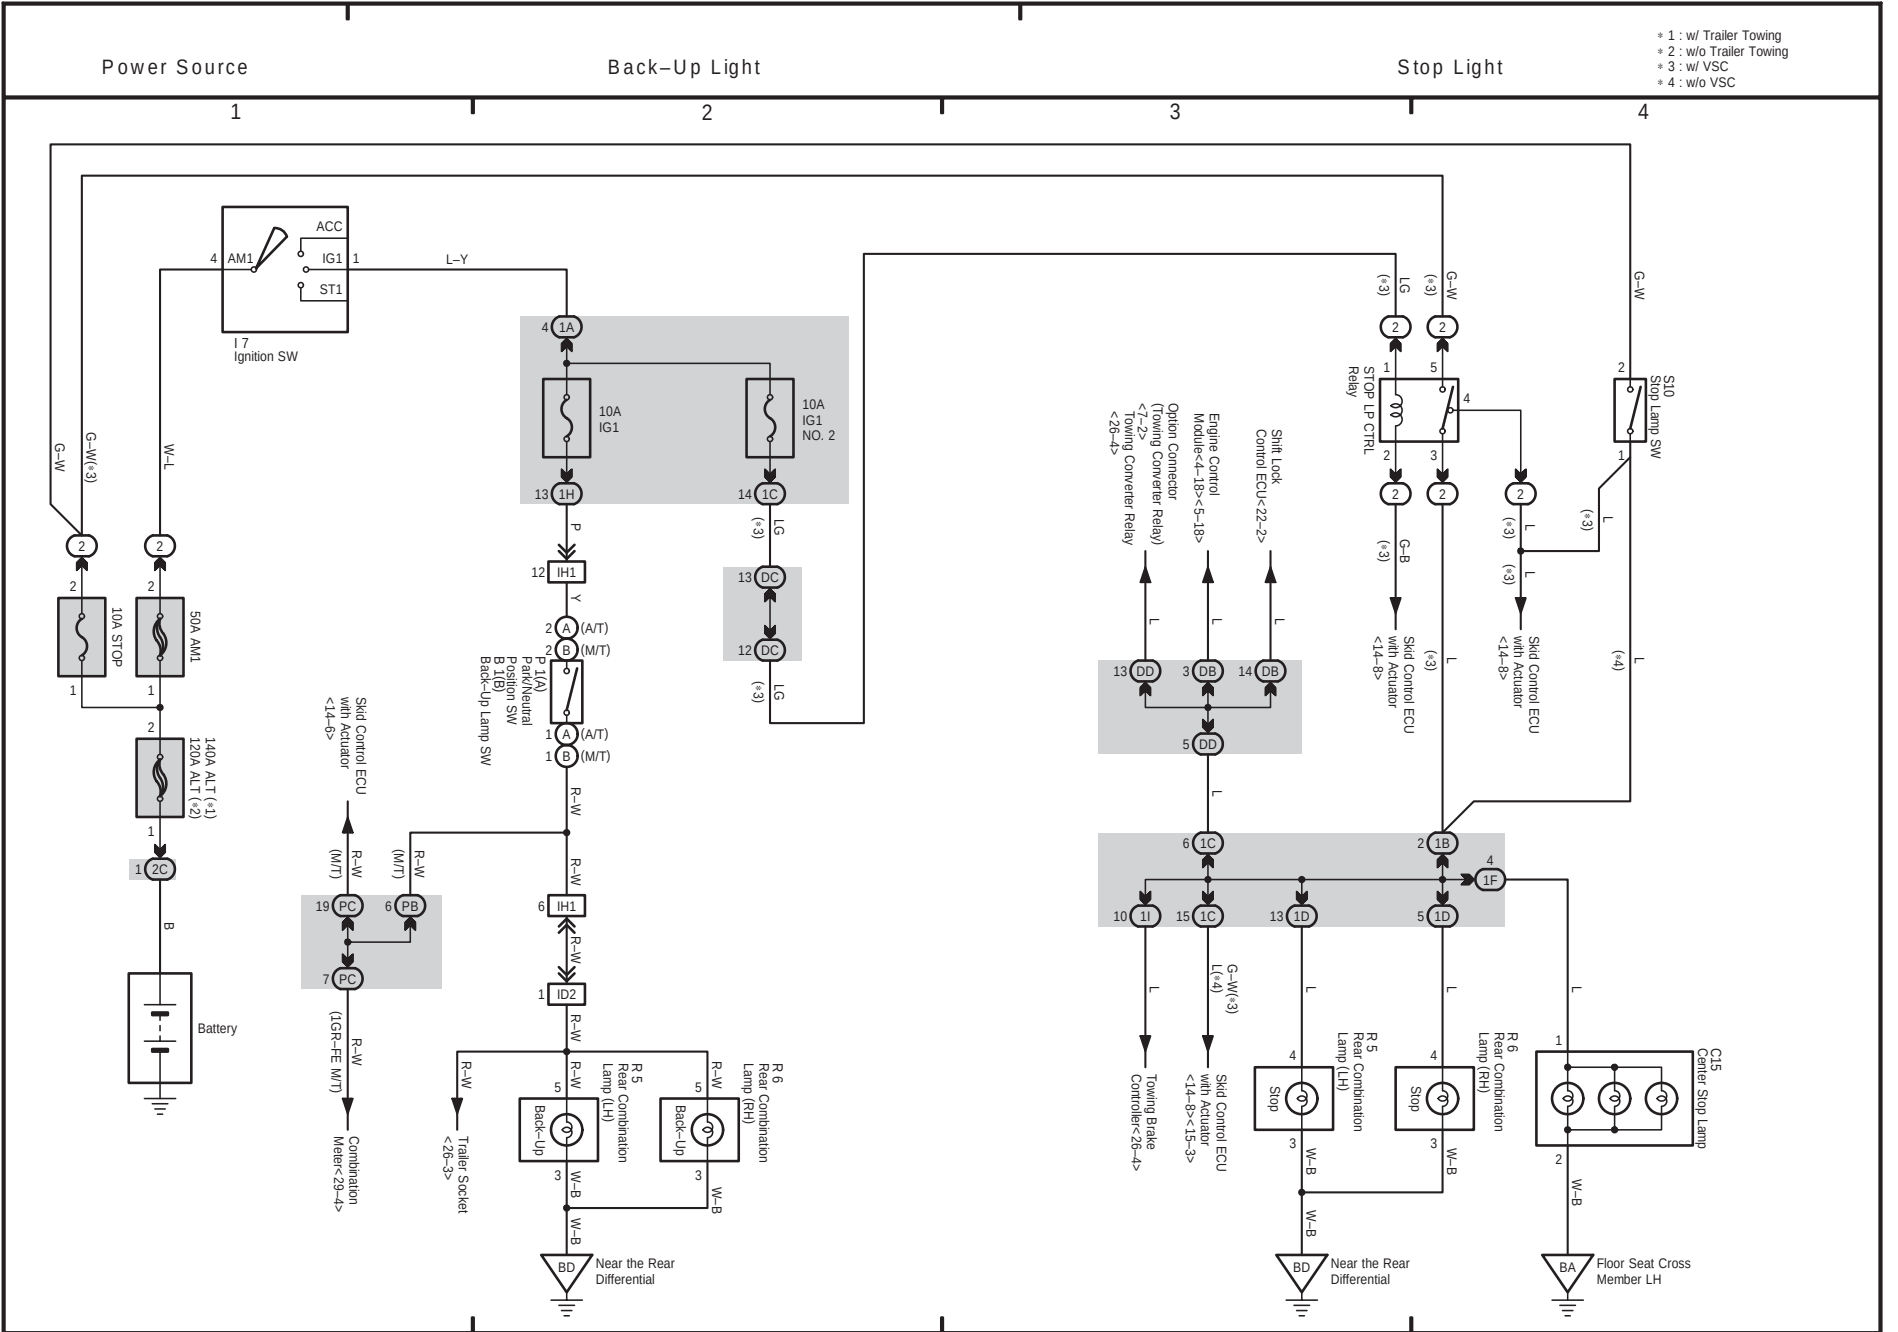


10 TOYOTA TACOMA

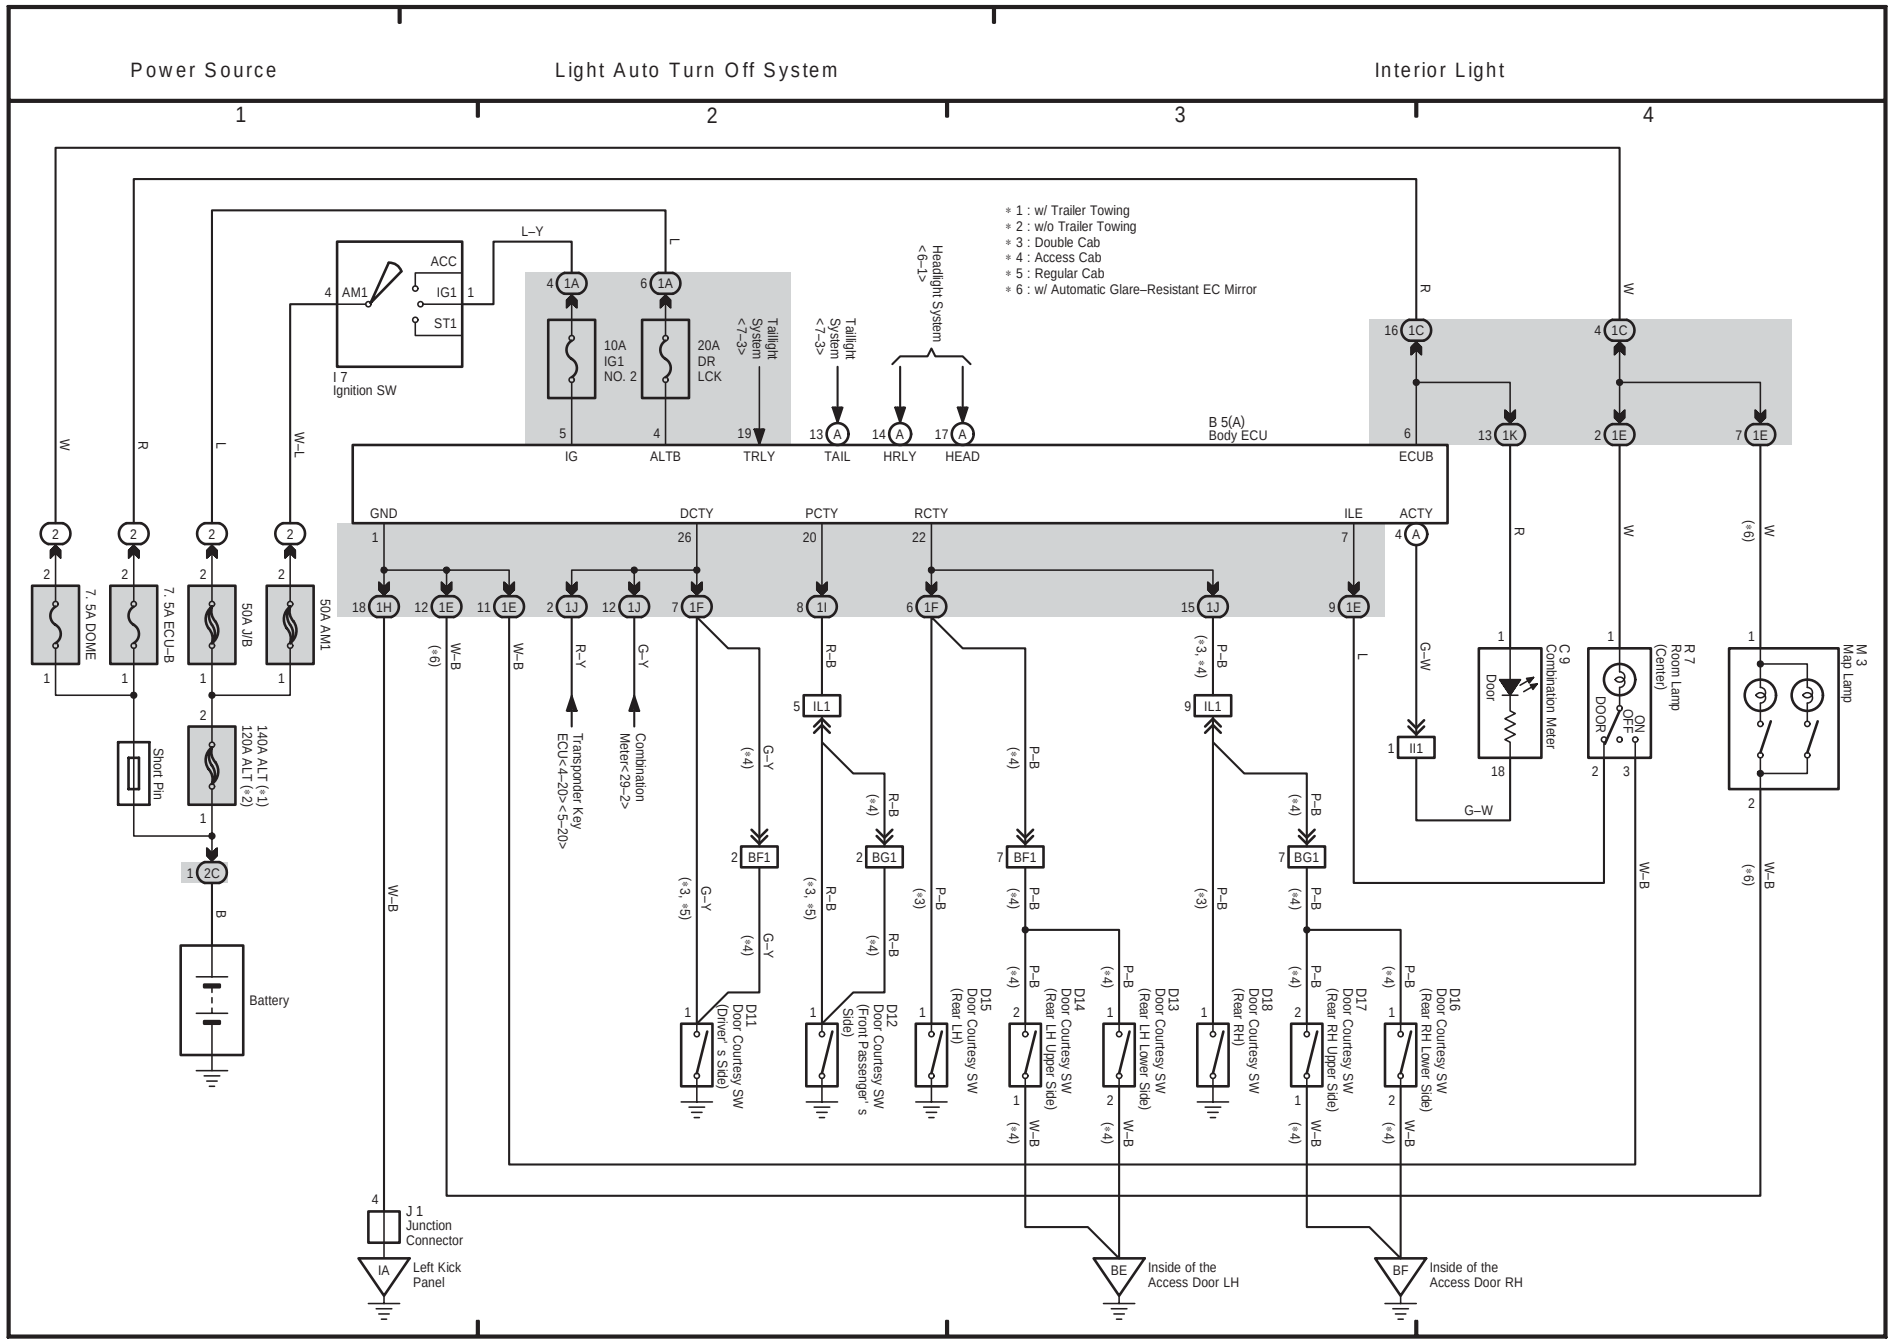


TOYOTA TACOMA (EM03N0U)




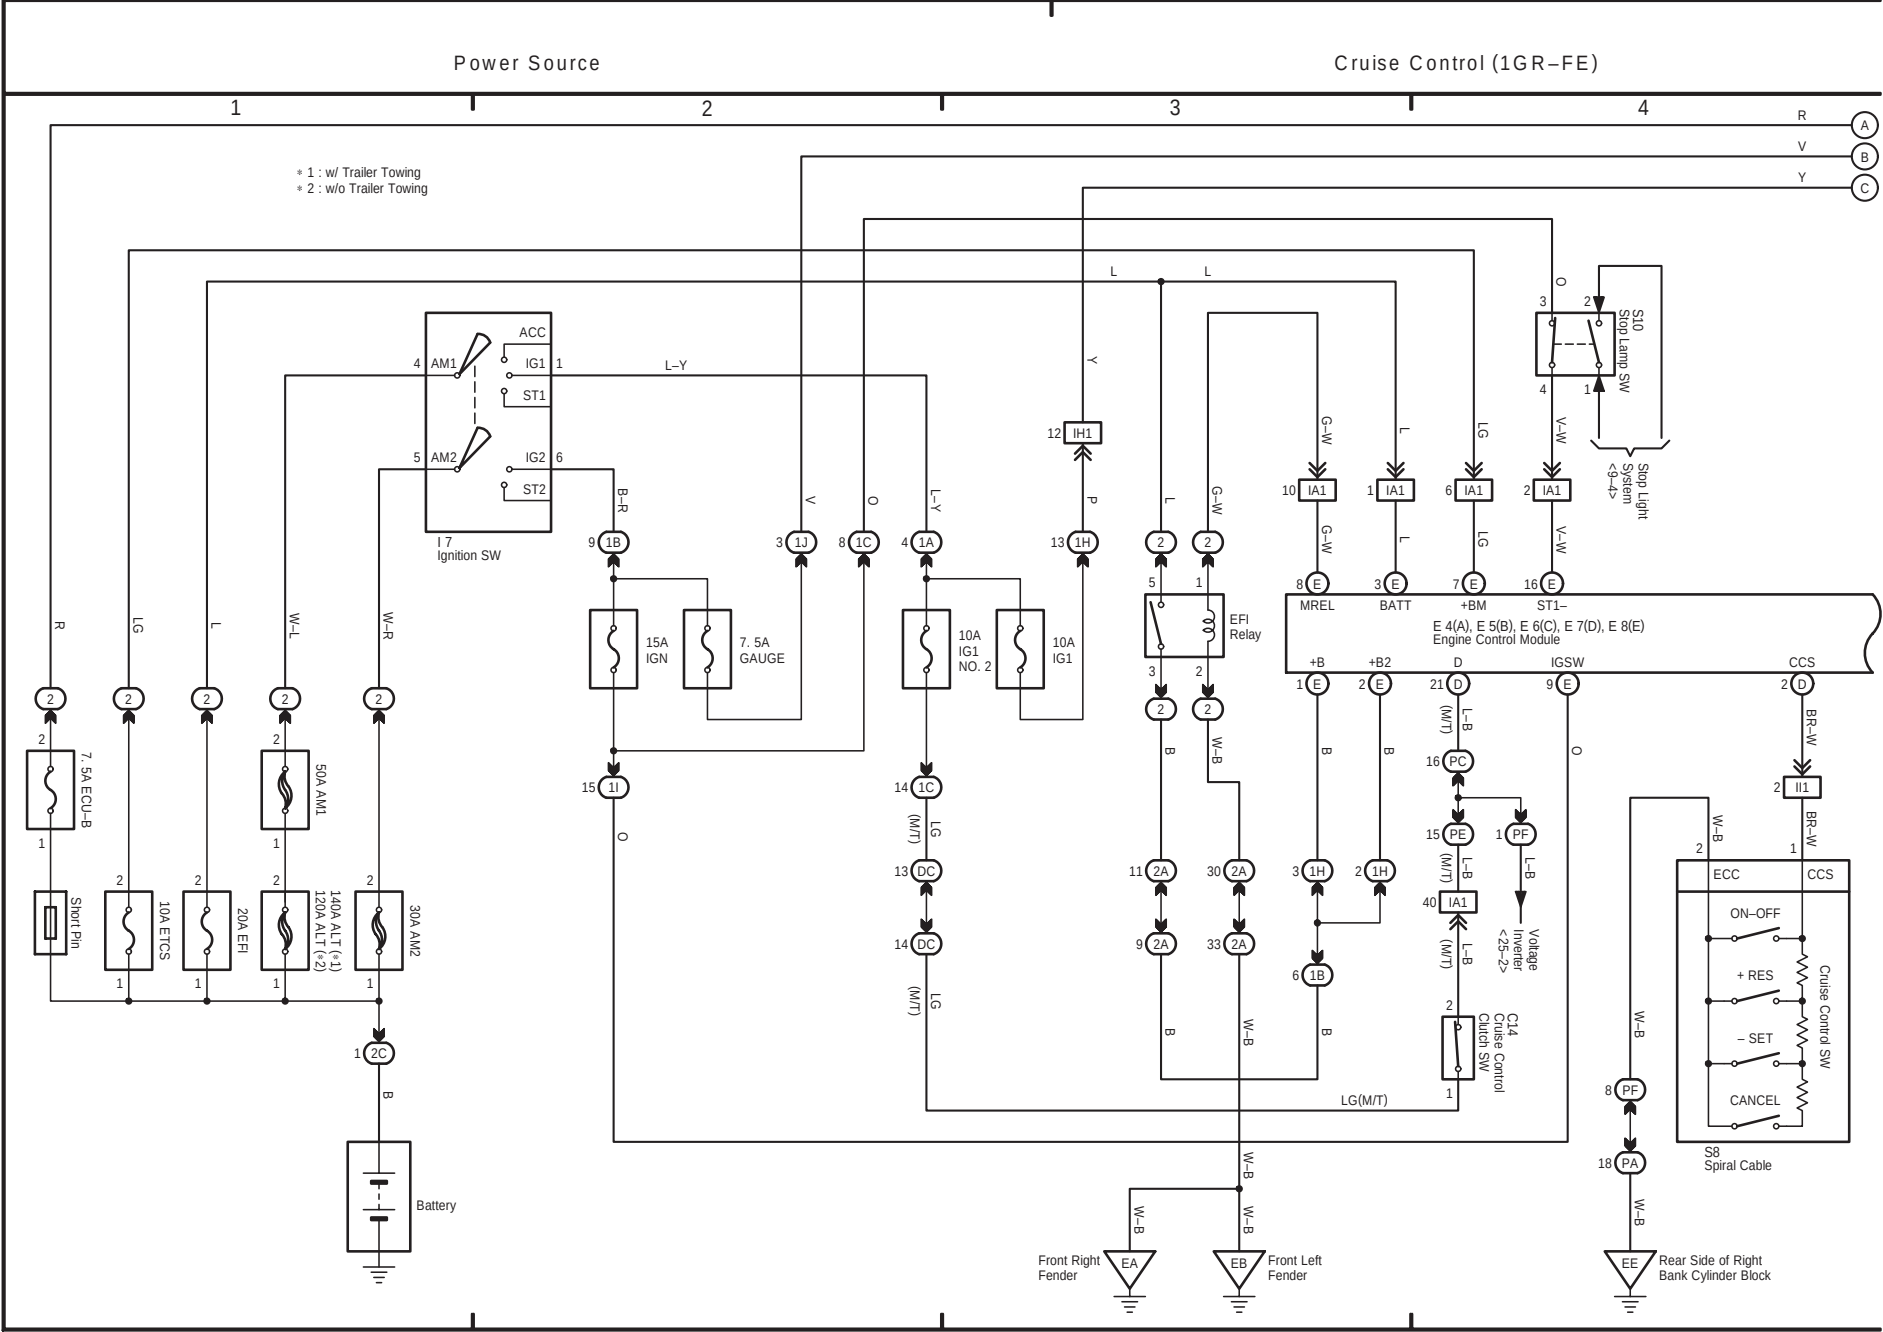


Electronically Controlled Transmission and A/T Indicator (1GR-FE)

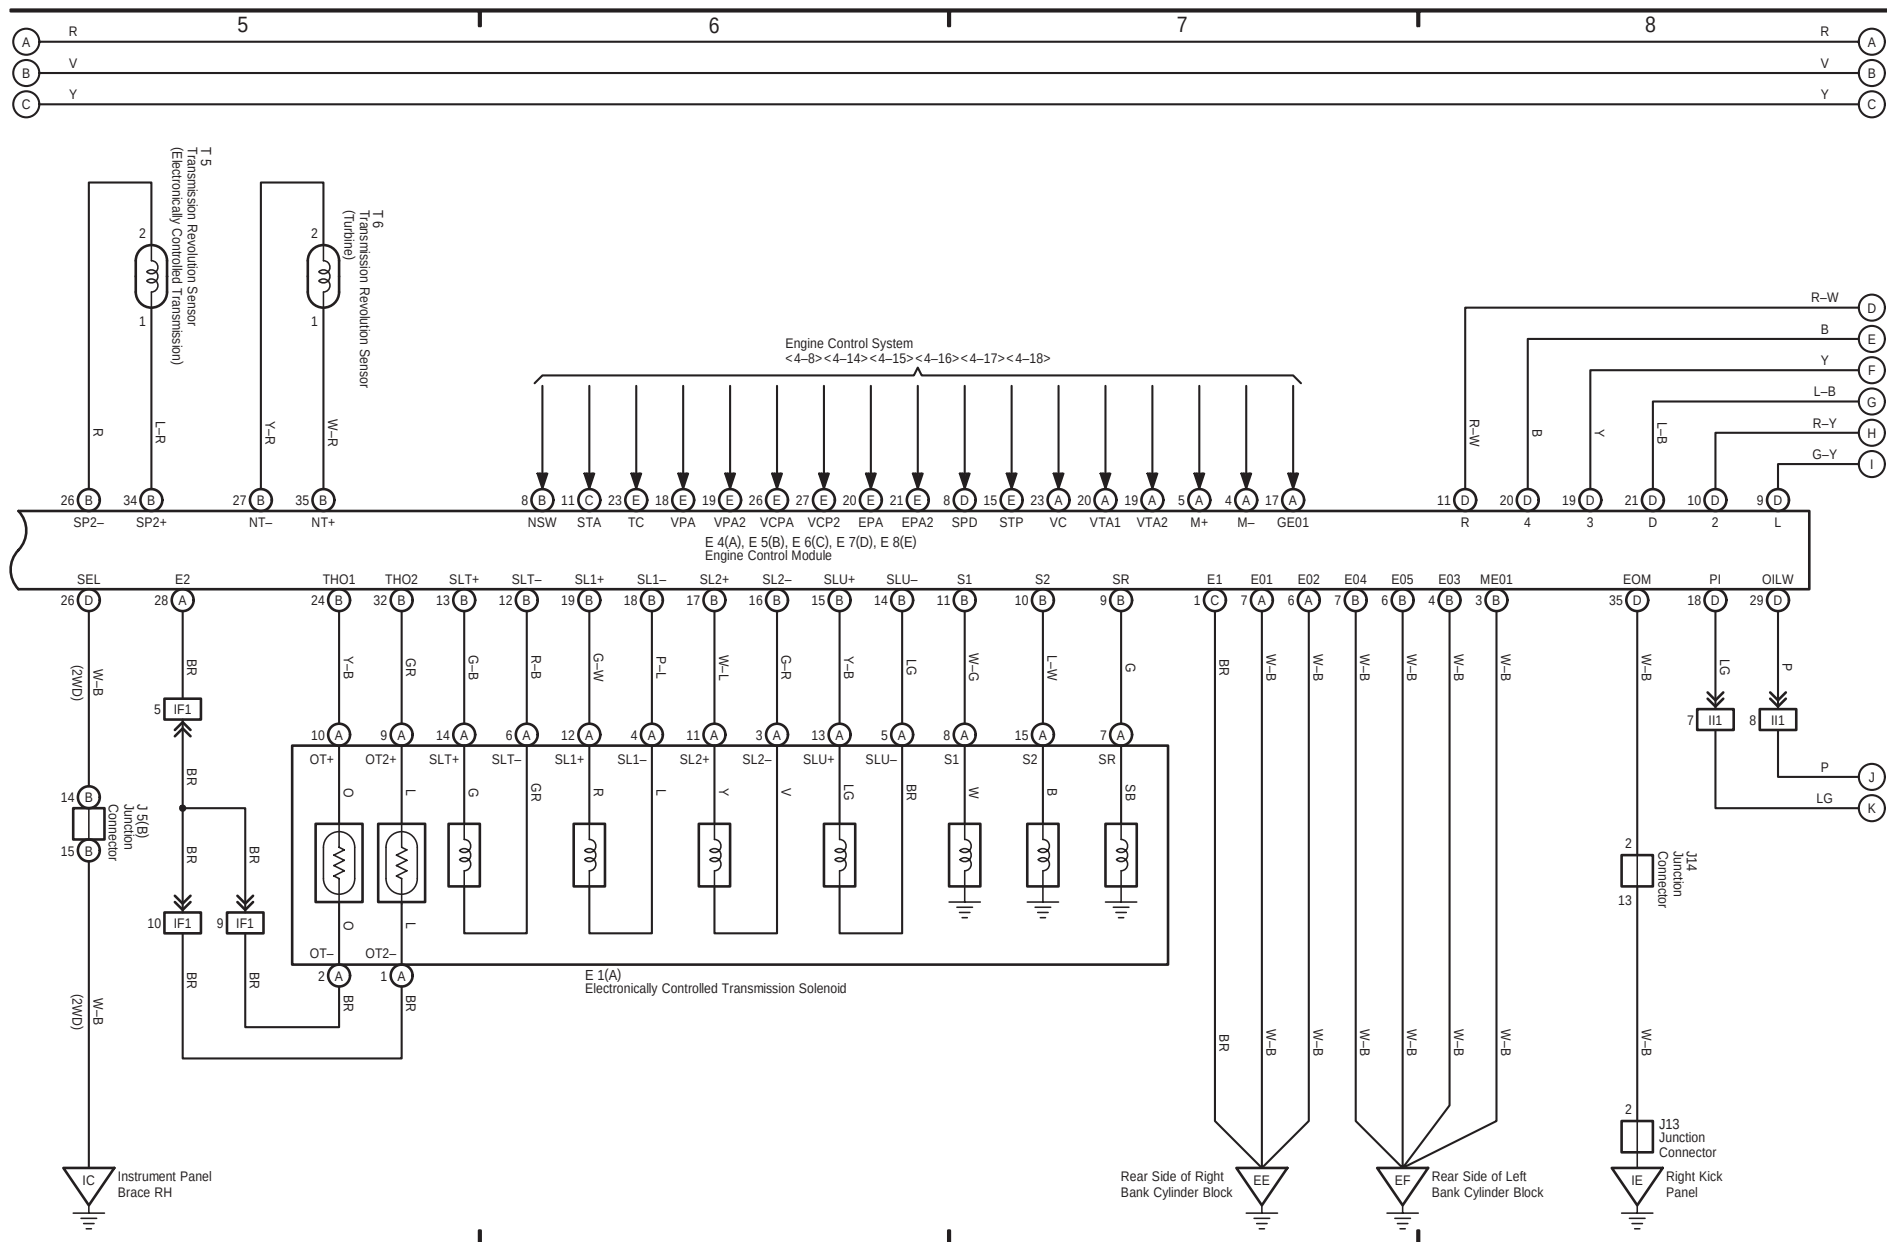


TOYOTA TACOMA (EM03N0U)

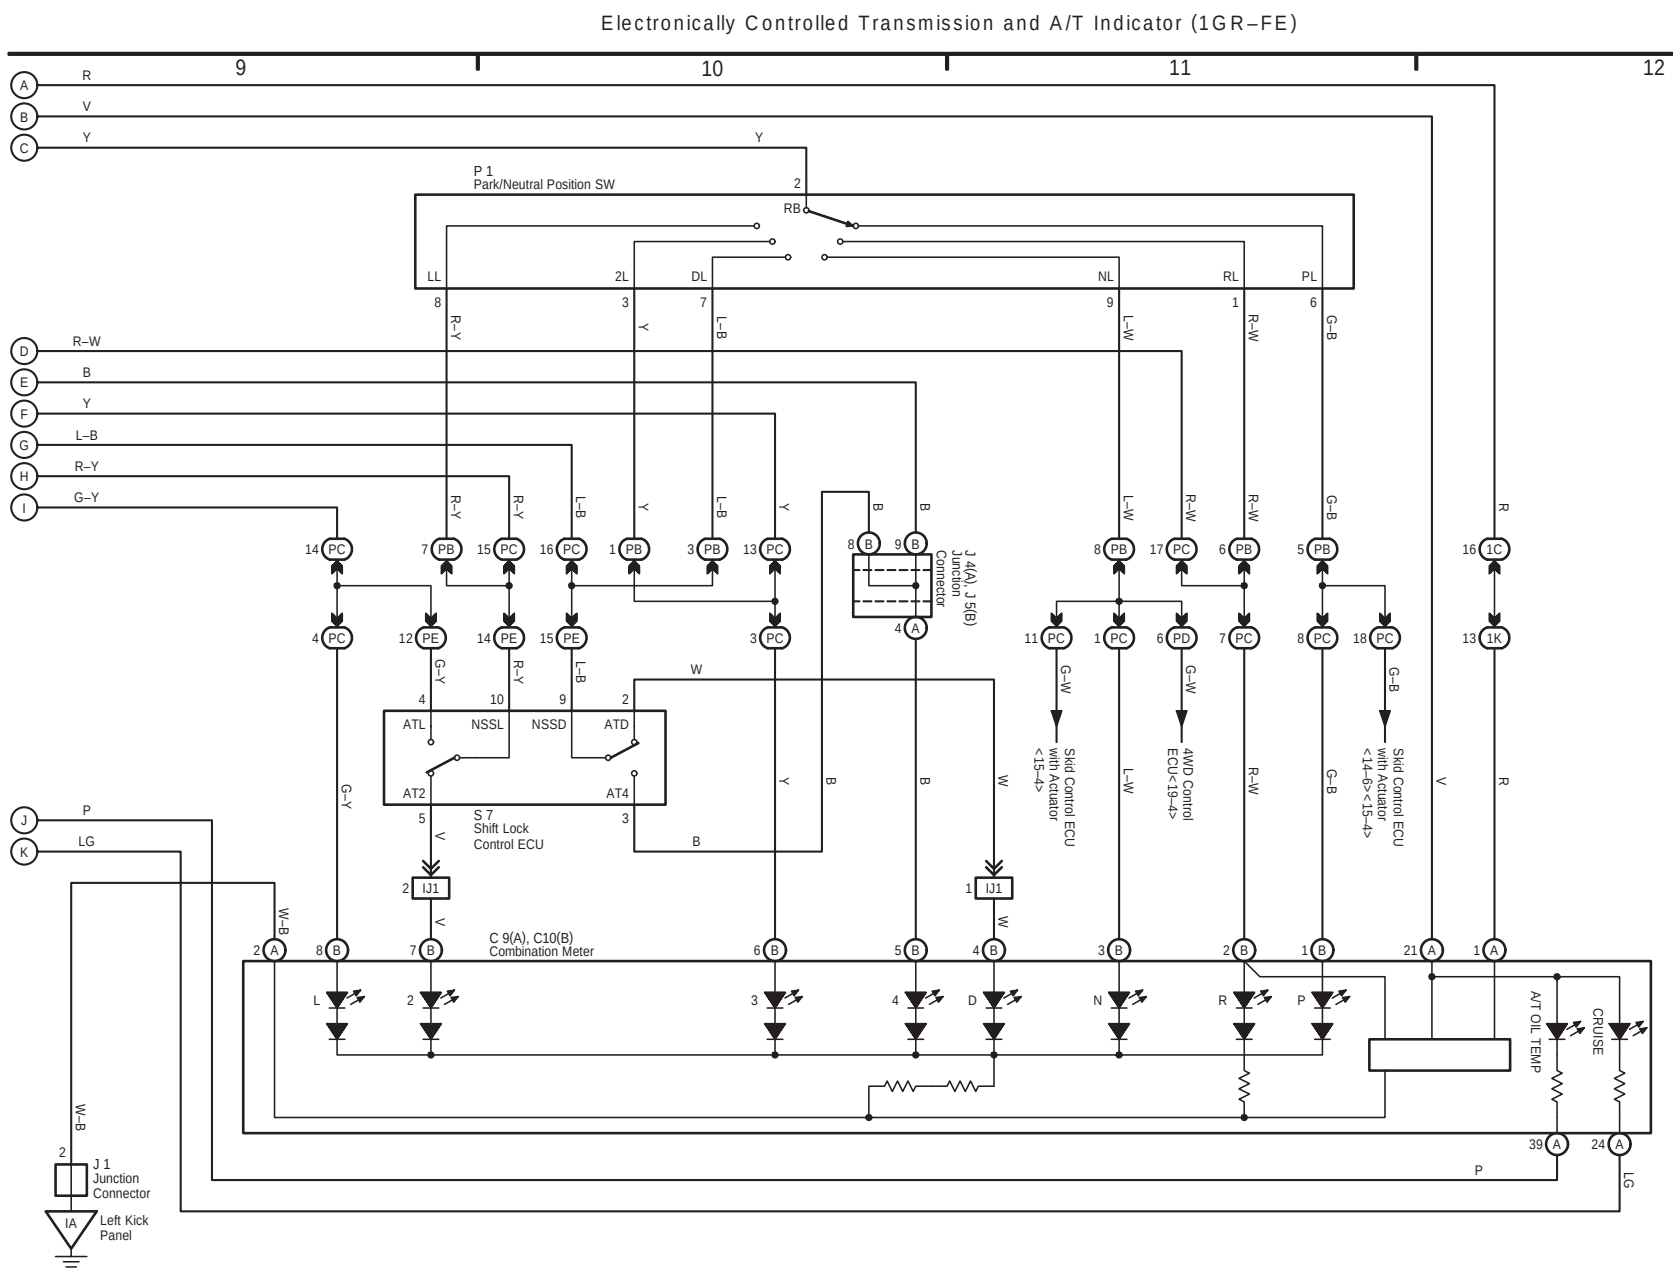

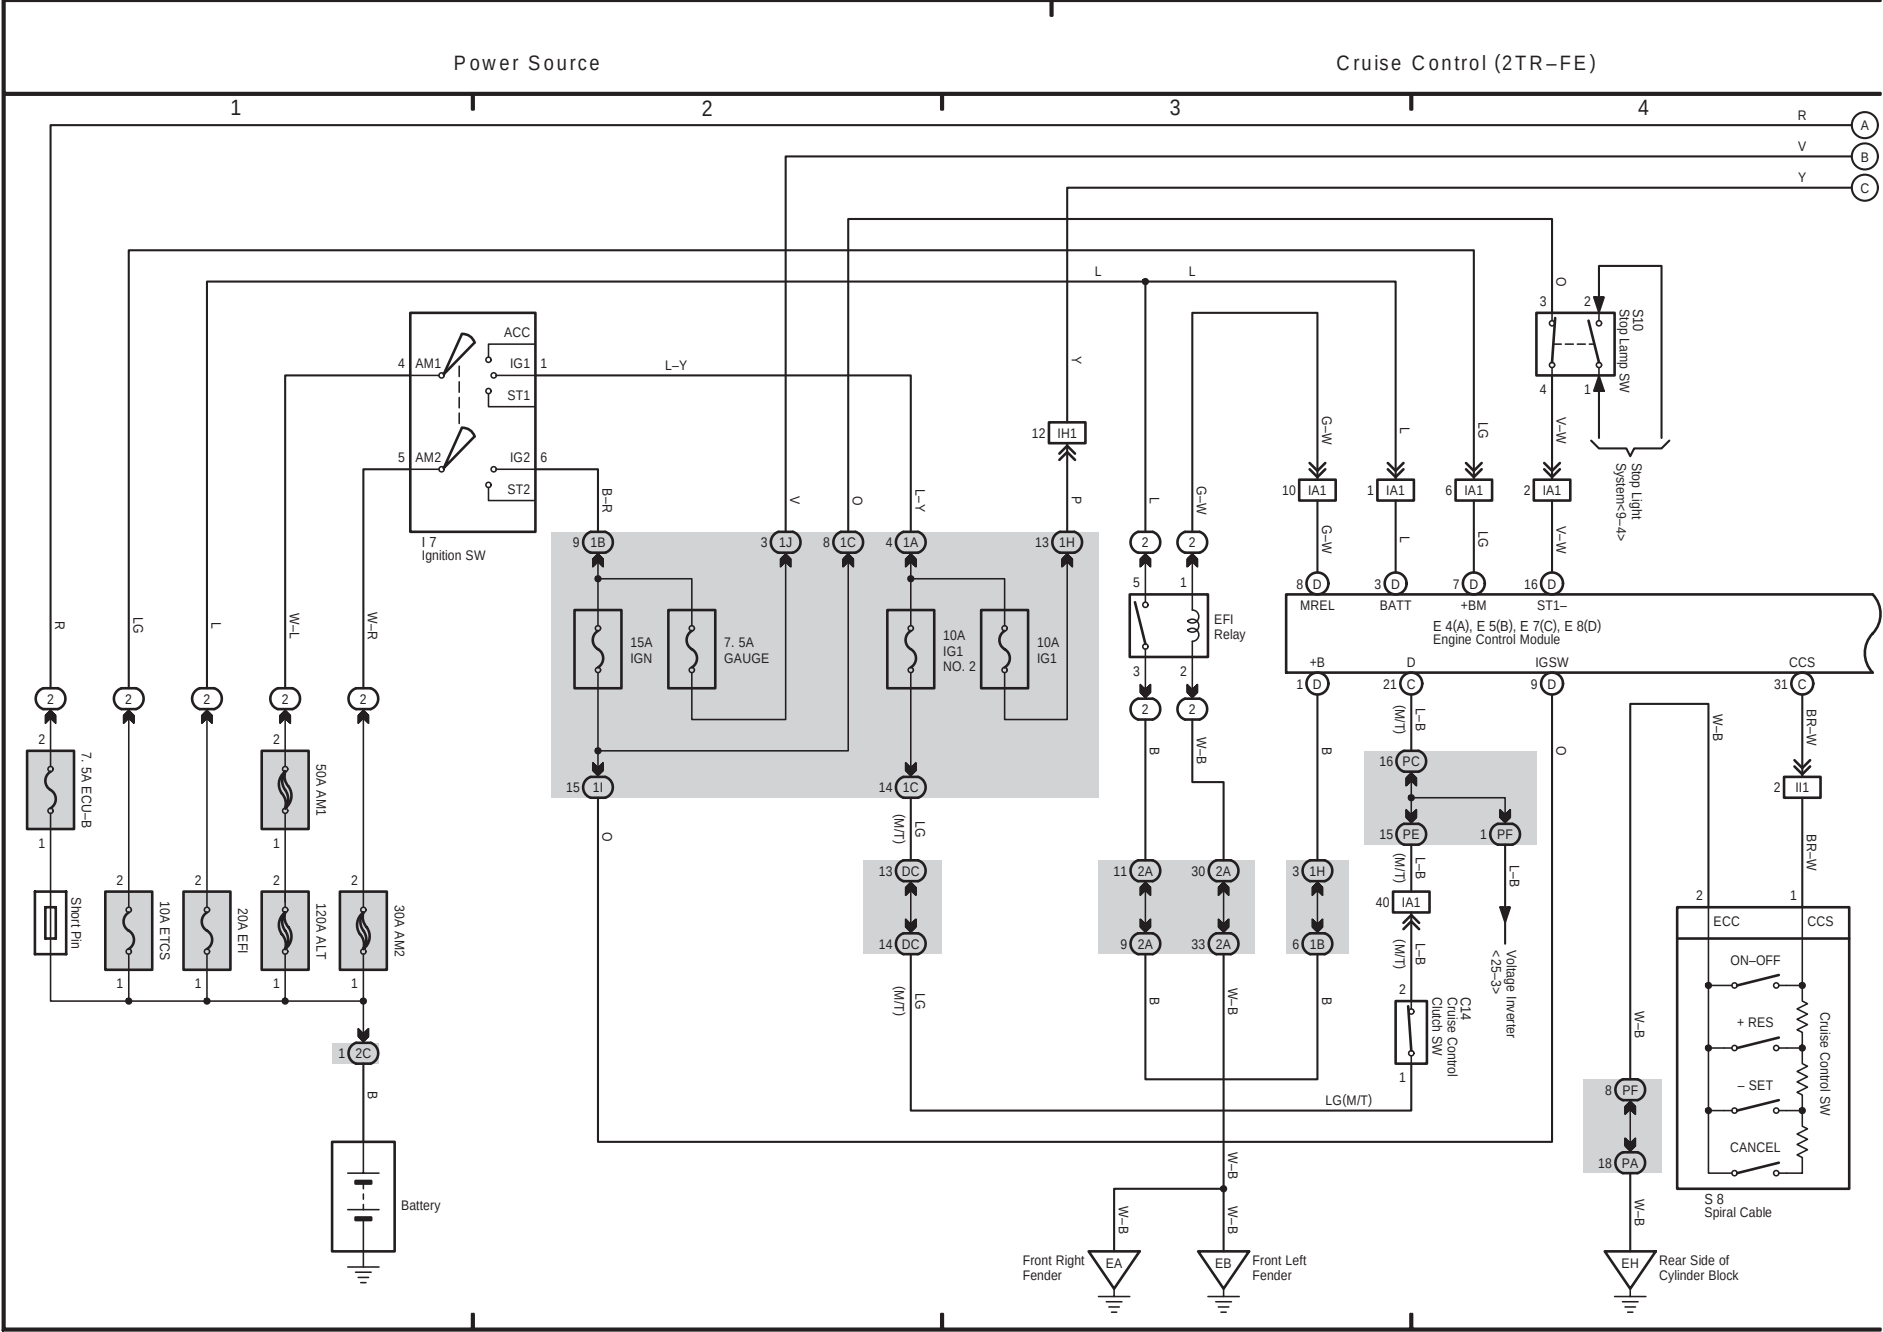



Electronically Controlled Transmission and A/T Indicator (2TR-FE)

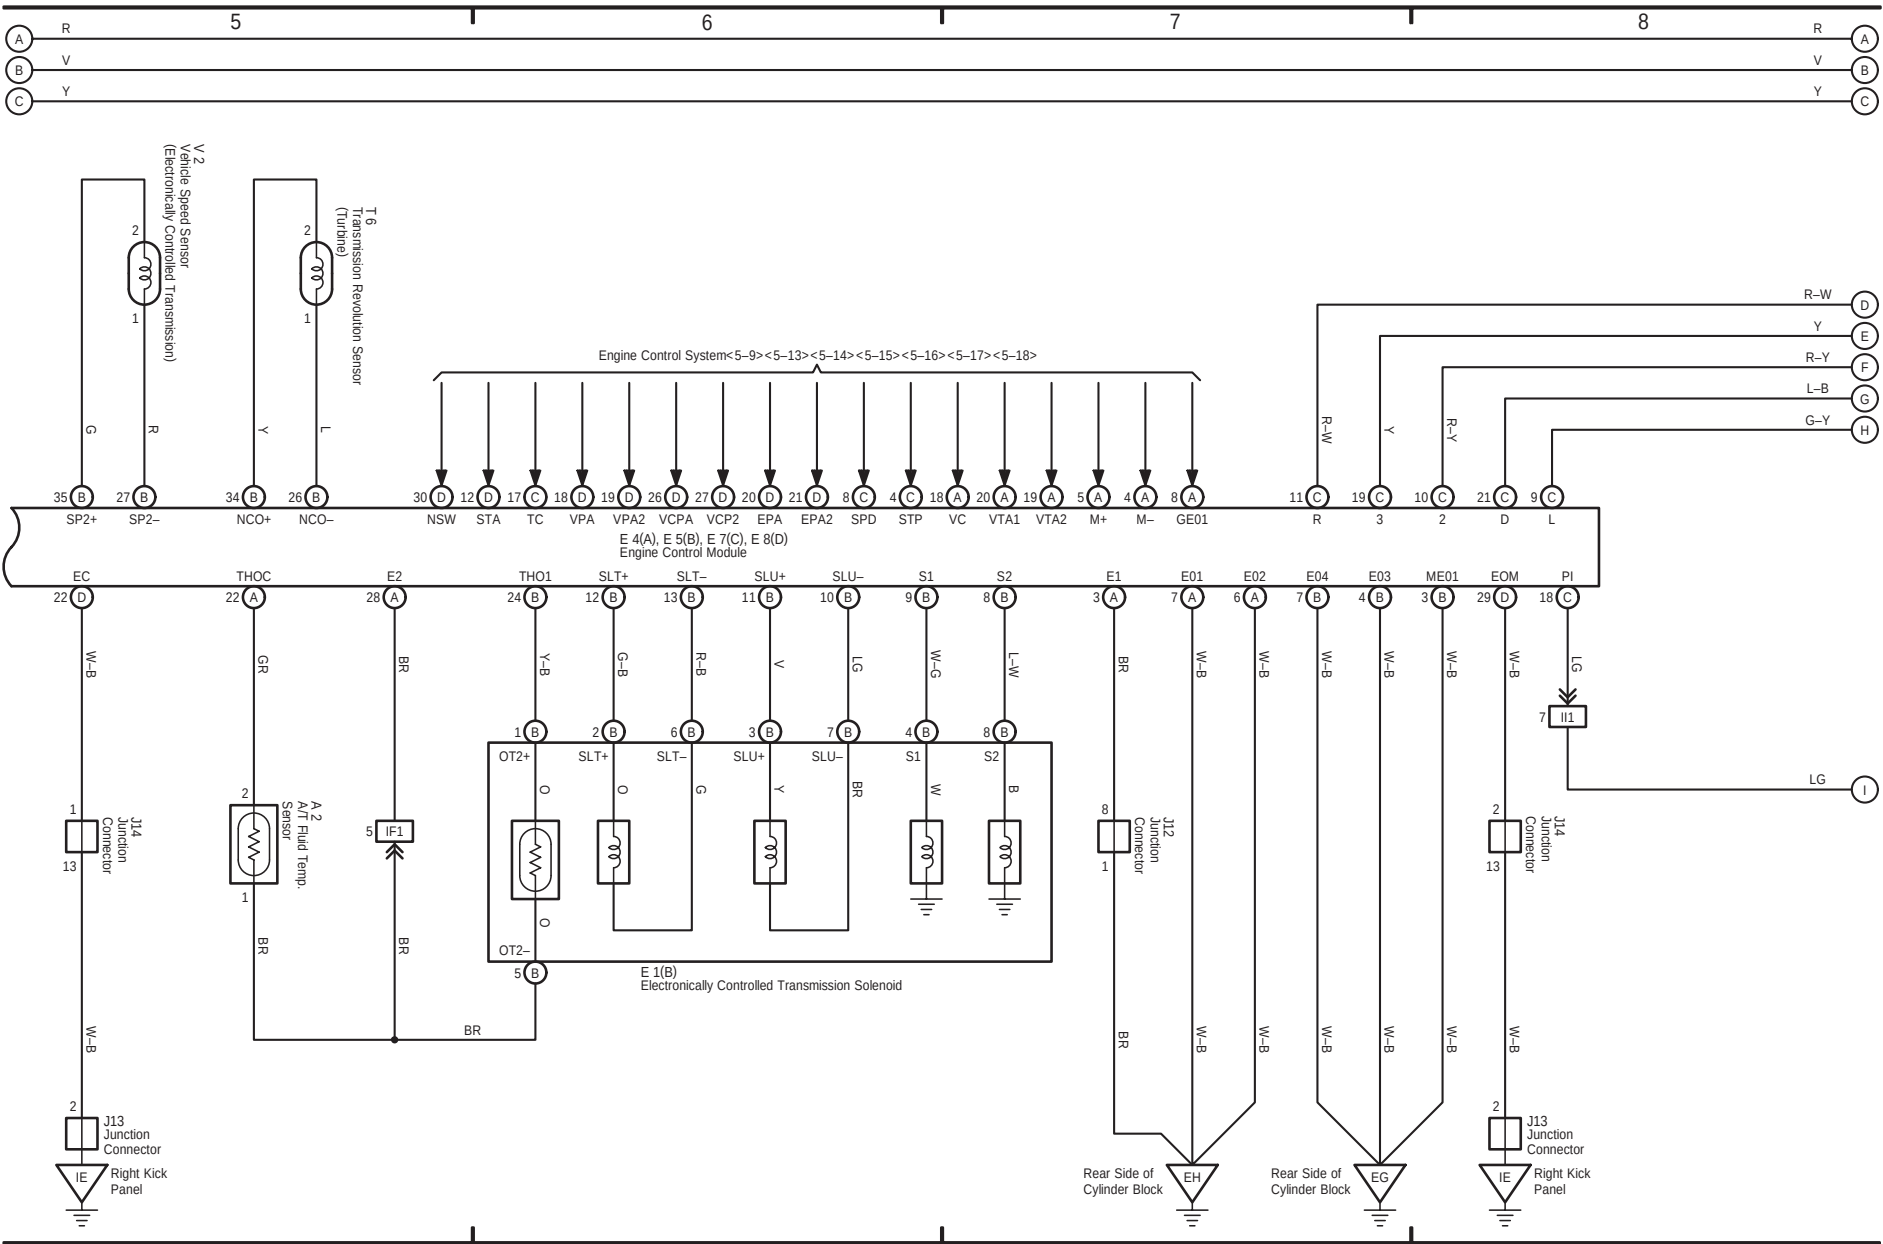


TOYOTA TACOMA (EM03N0U)

TOYOTA TACOMA (EM03N0U)

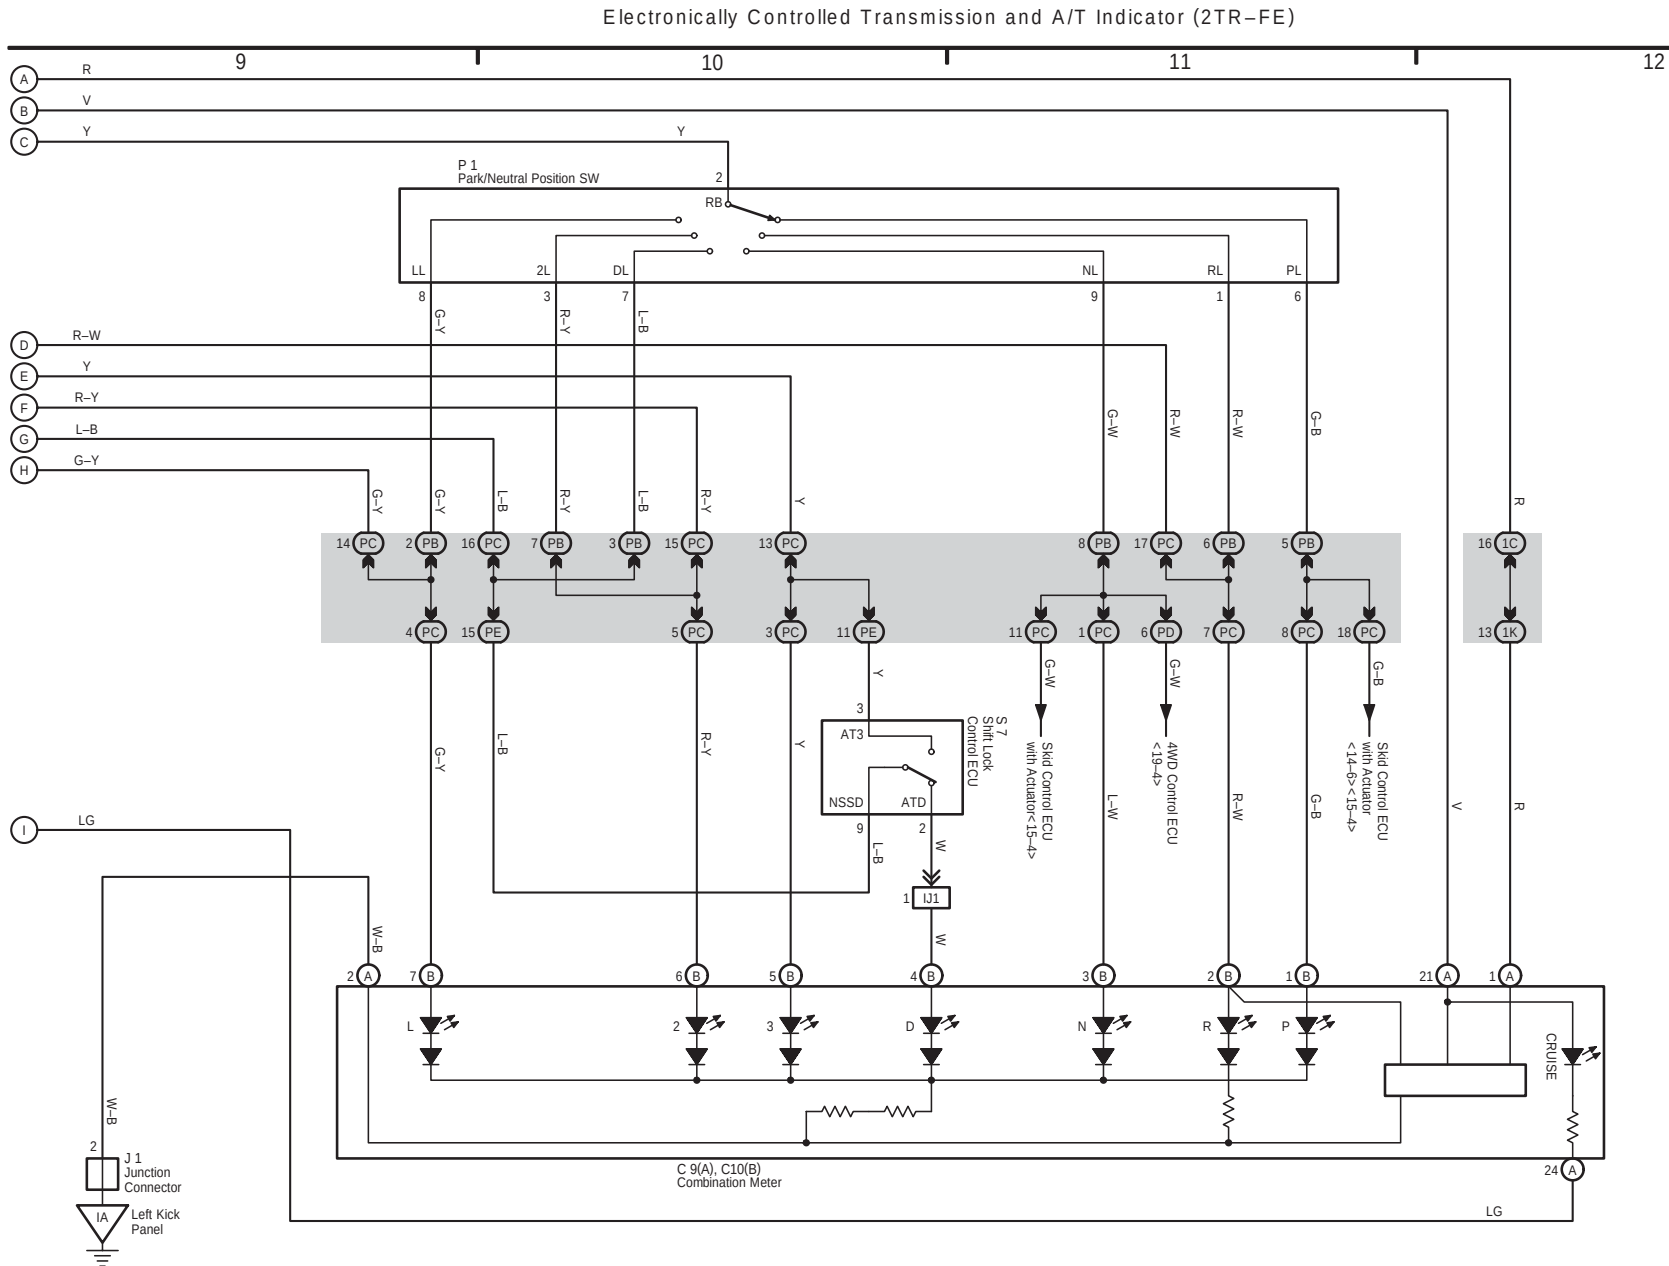


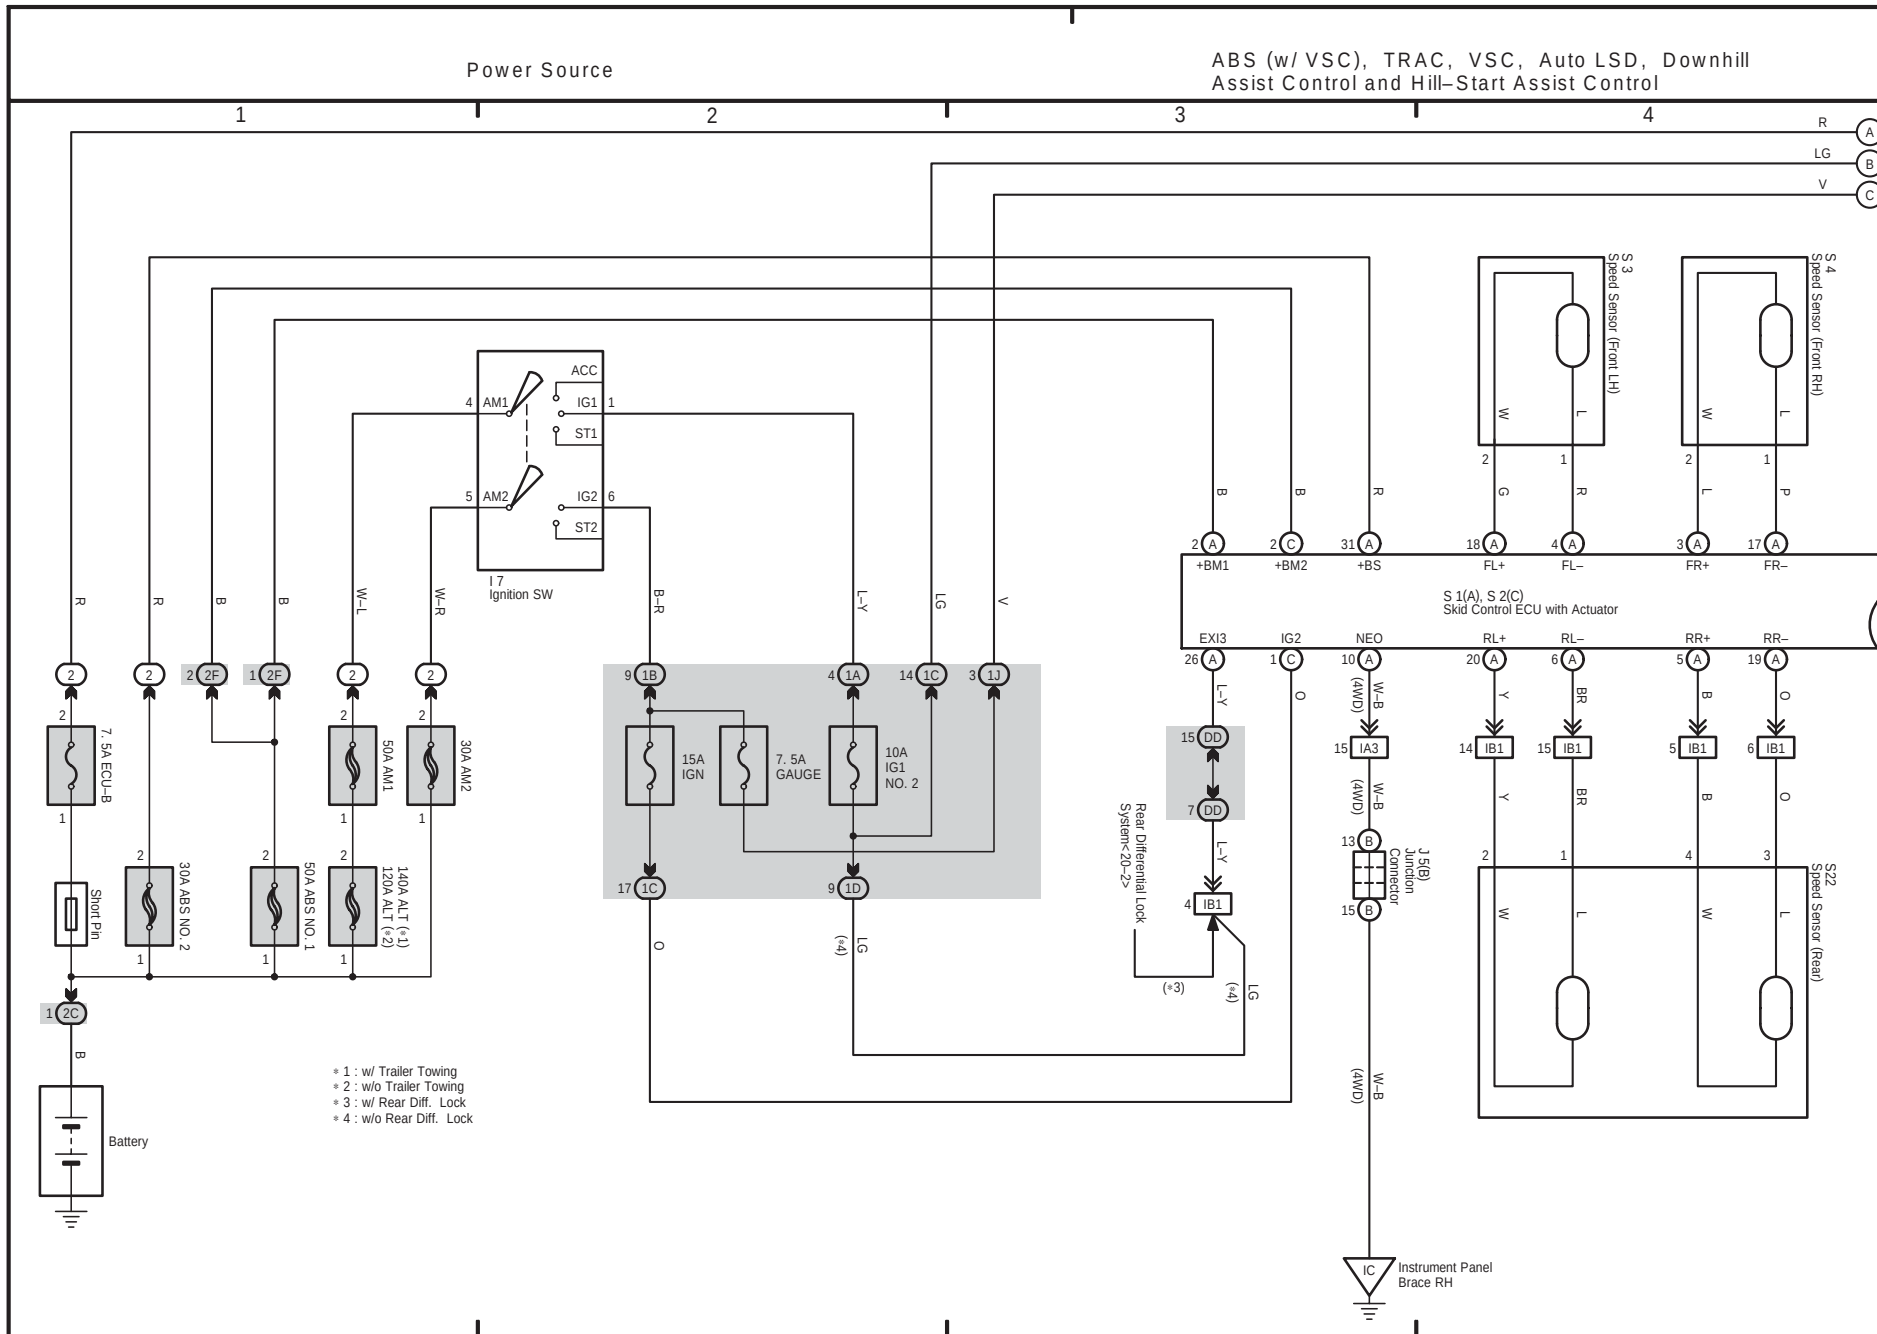


TOYOTA TACOMA (EM03N0U)

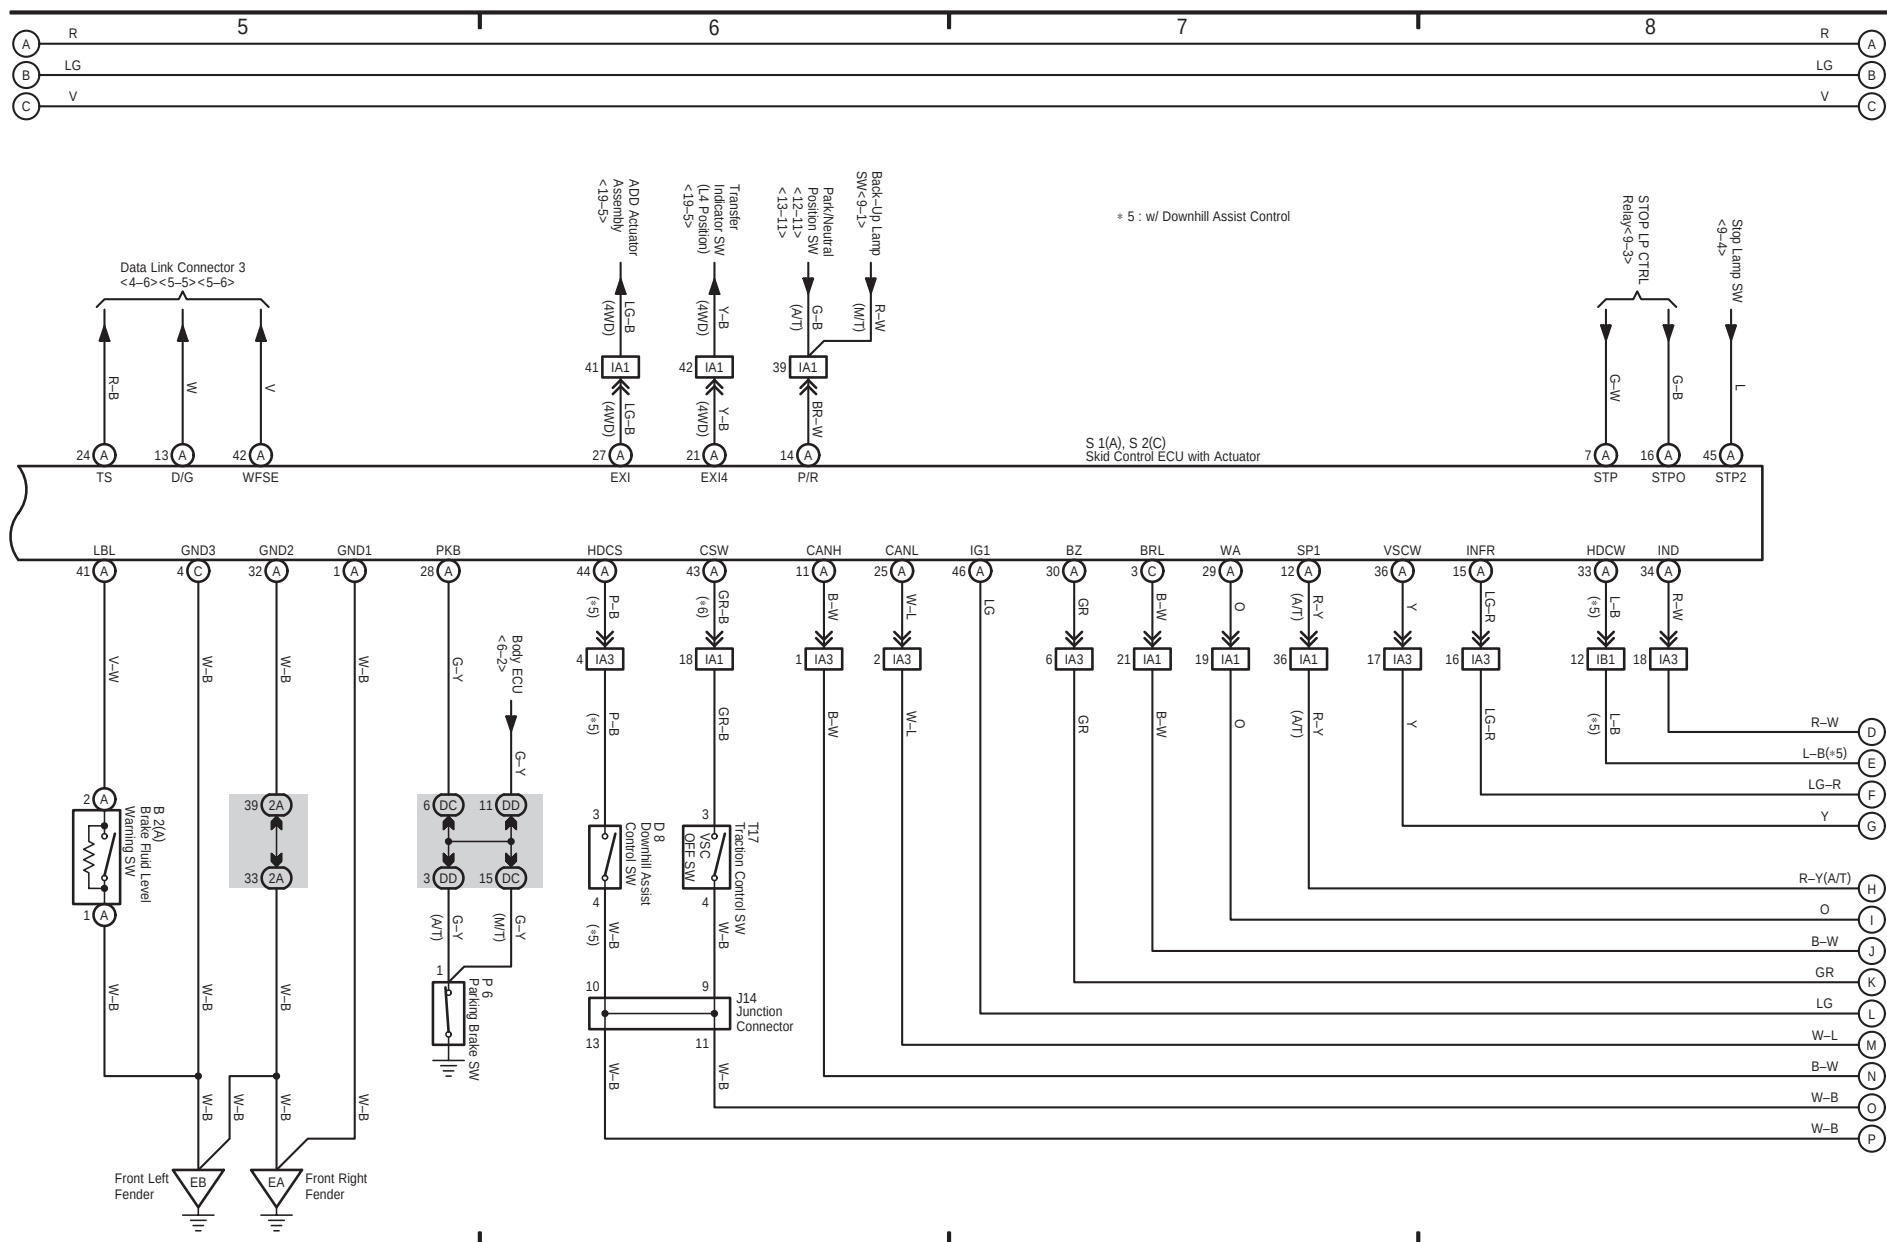


14 TOYOTA TACOMA (Cont' d)

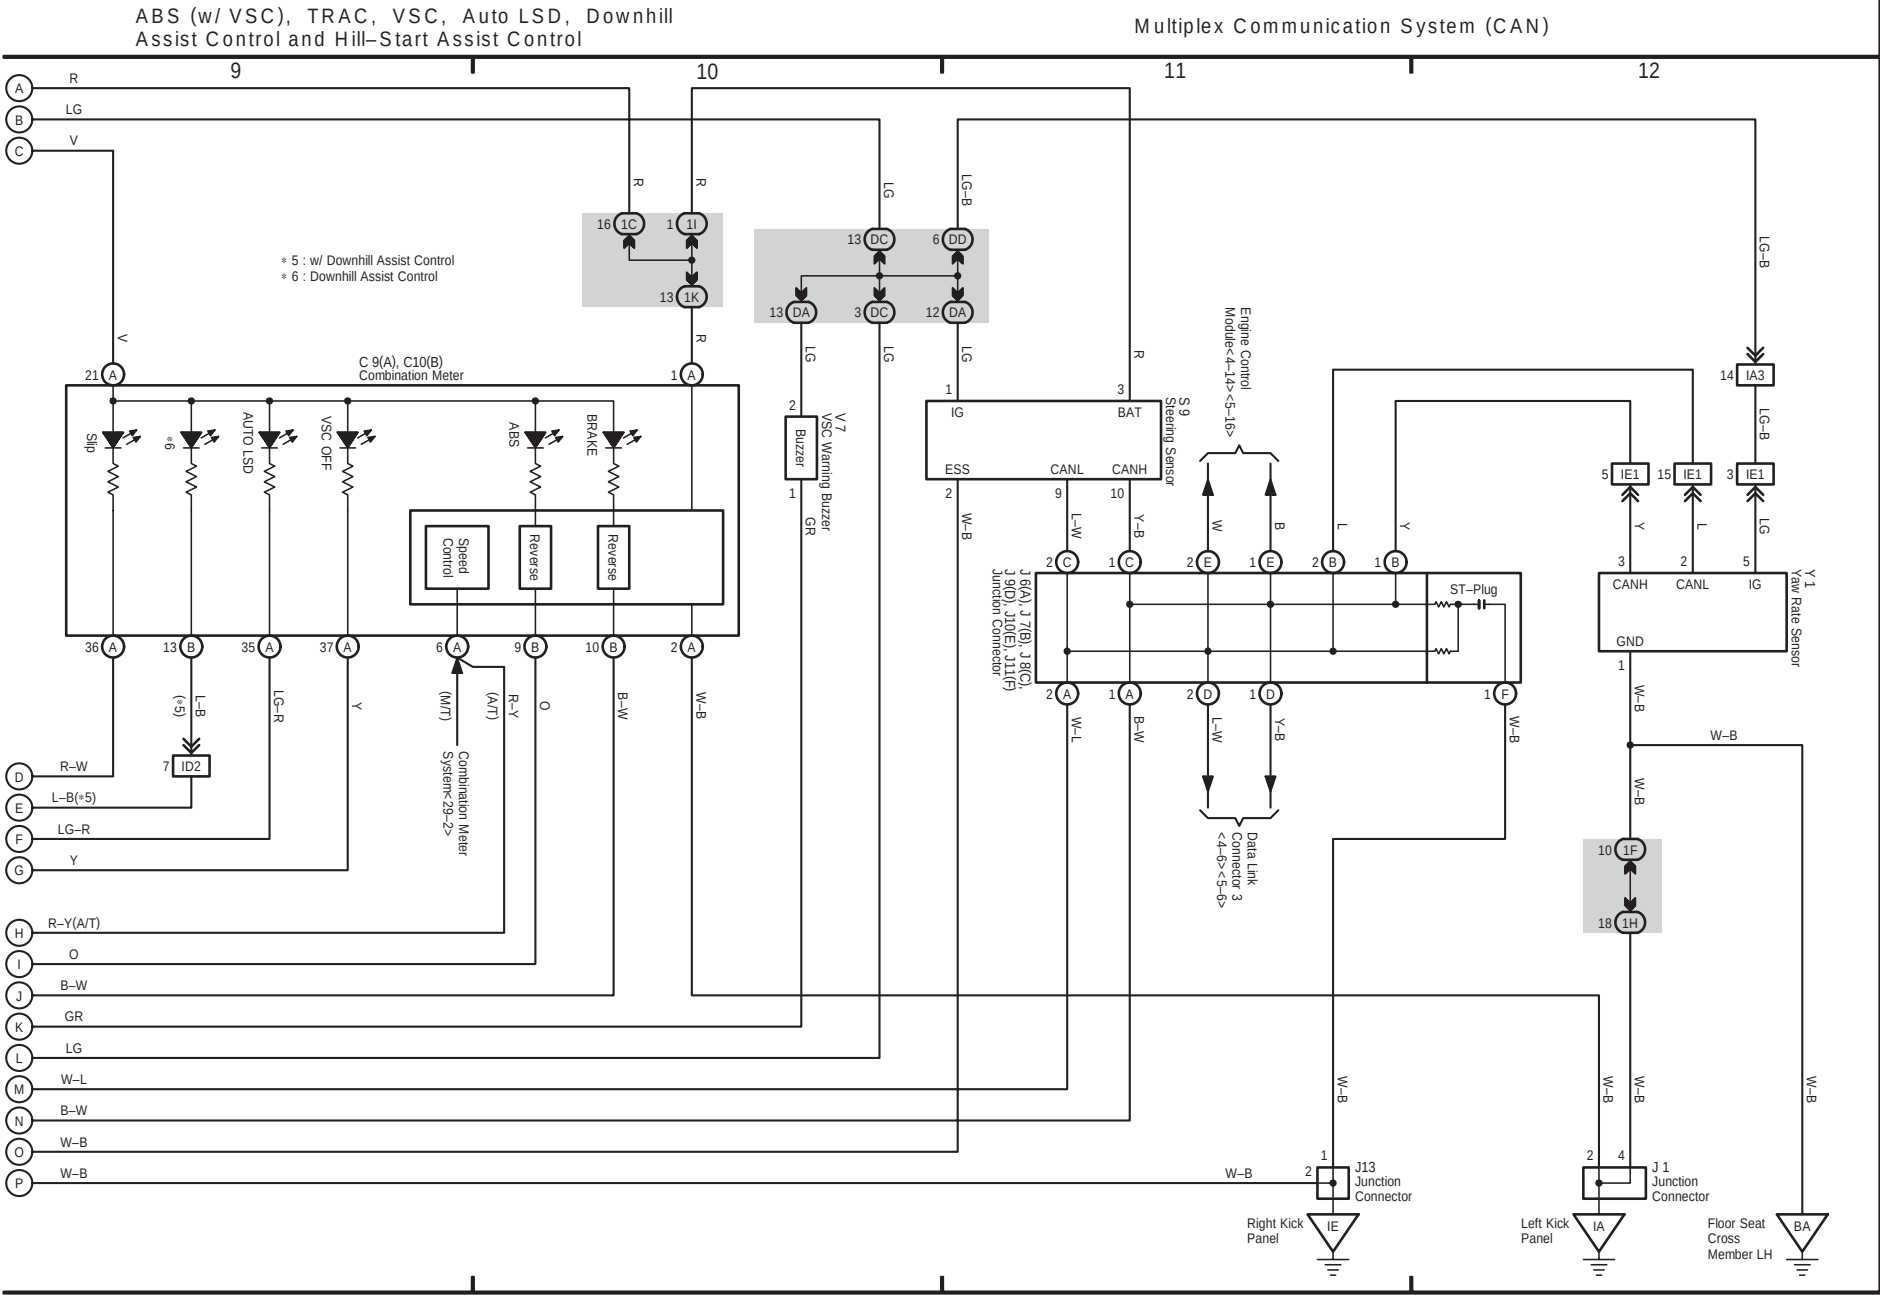

15 TOYOTA TACOMA

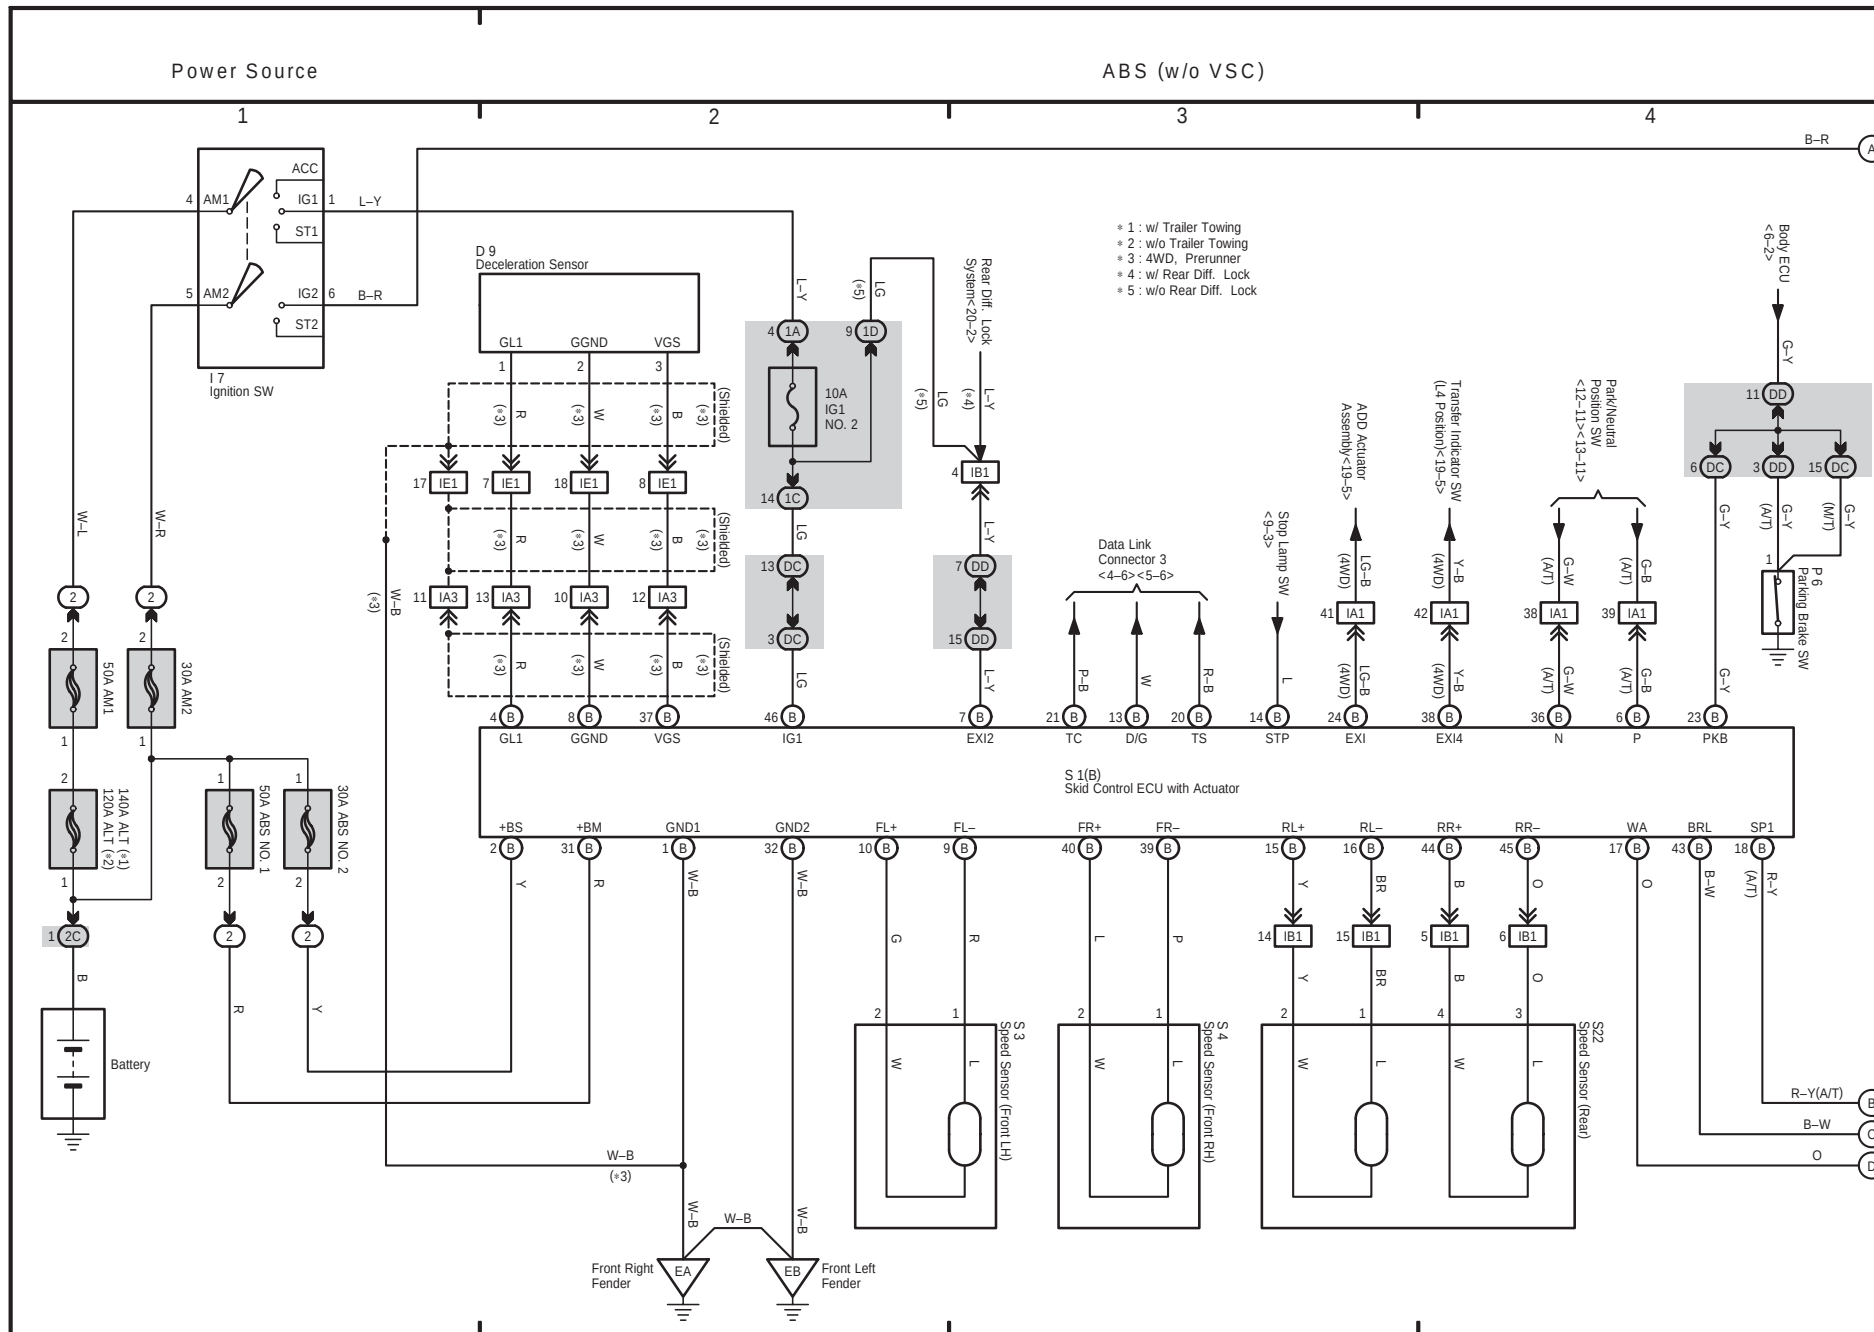




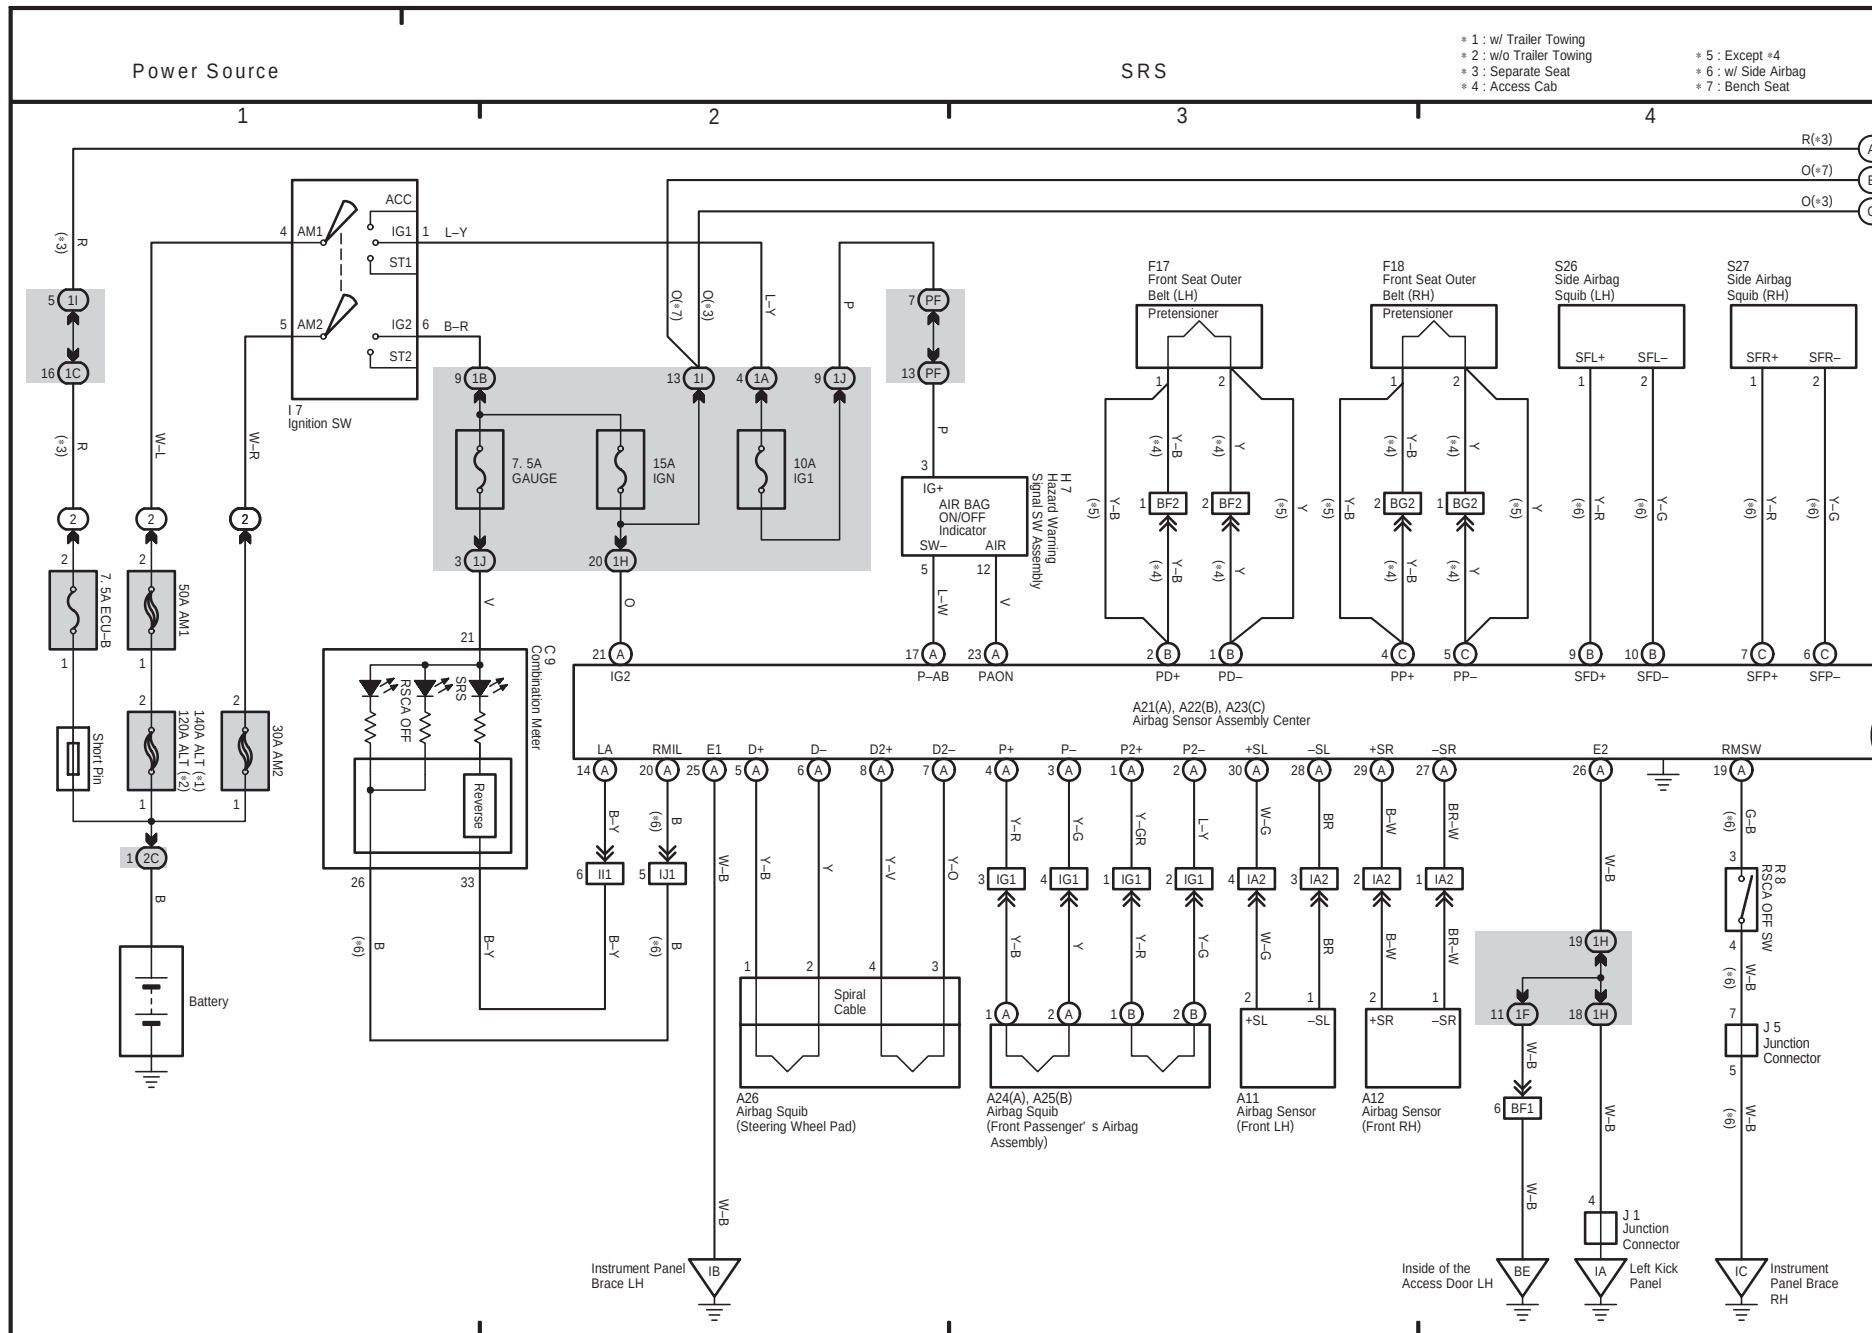

SRS




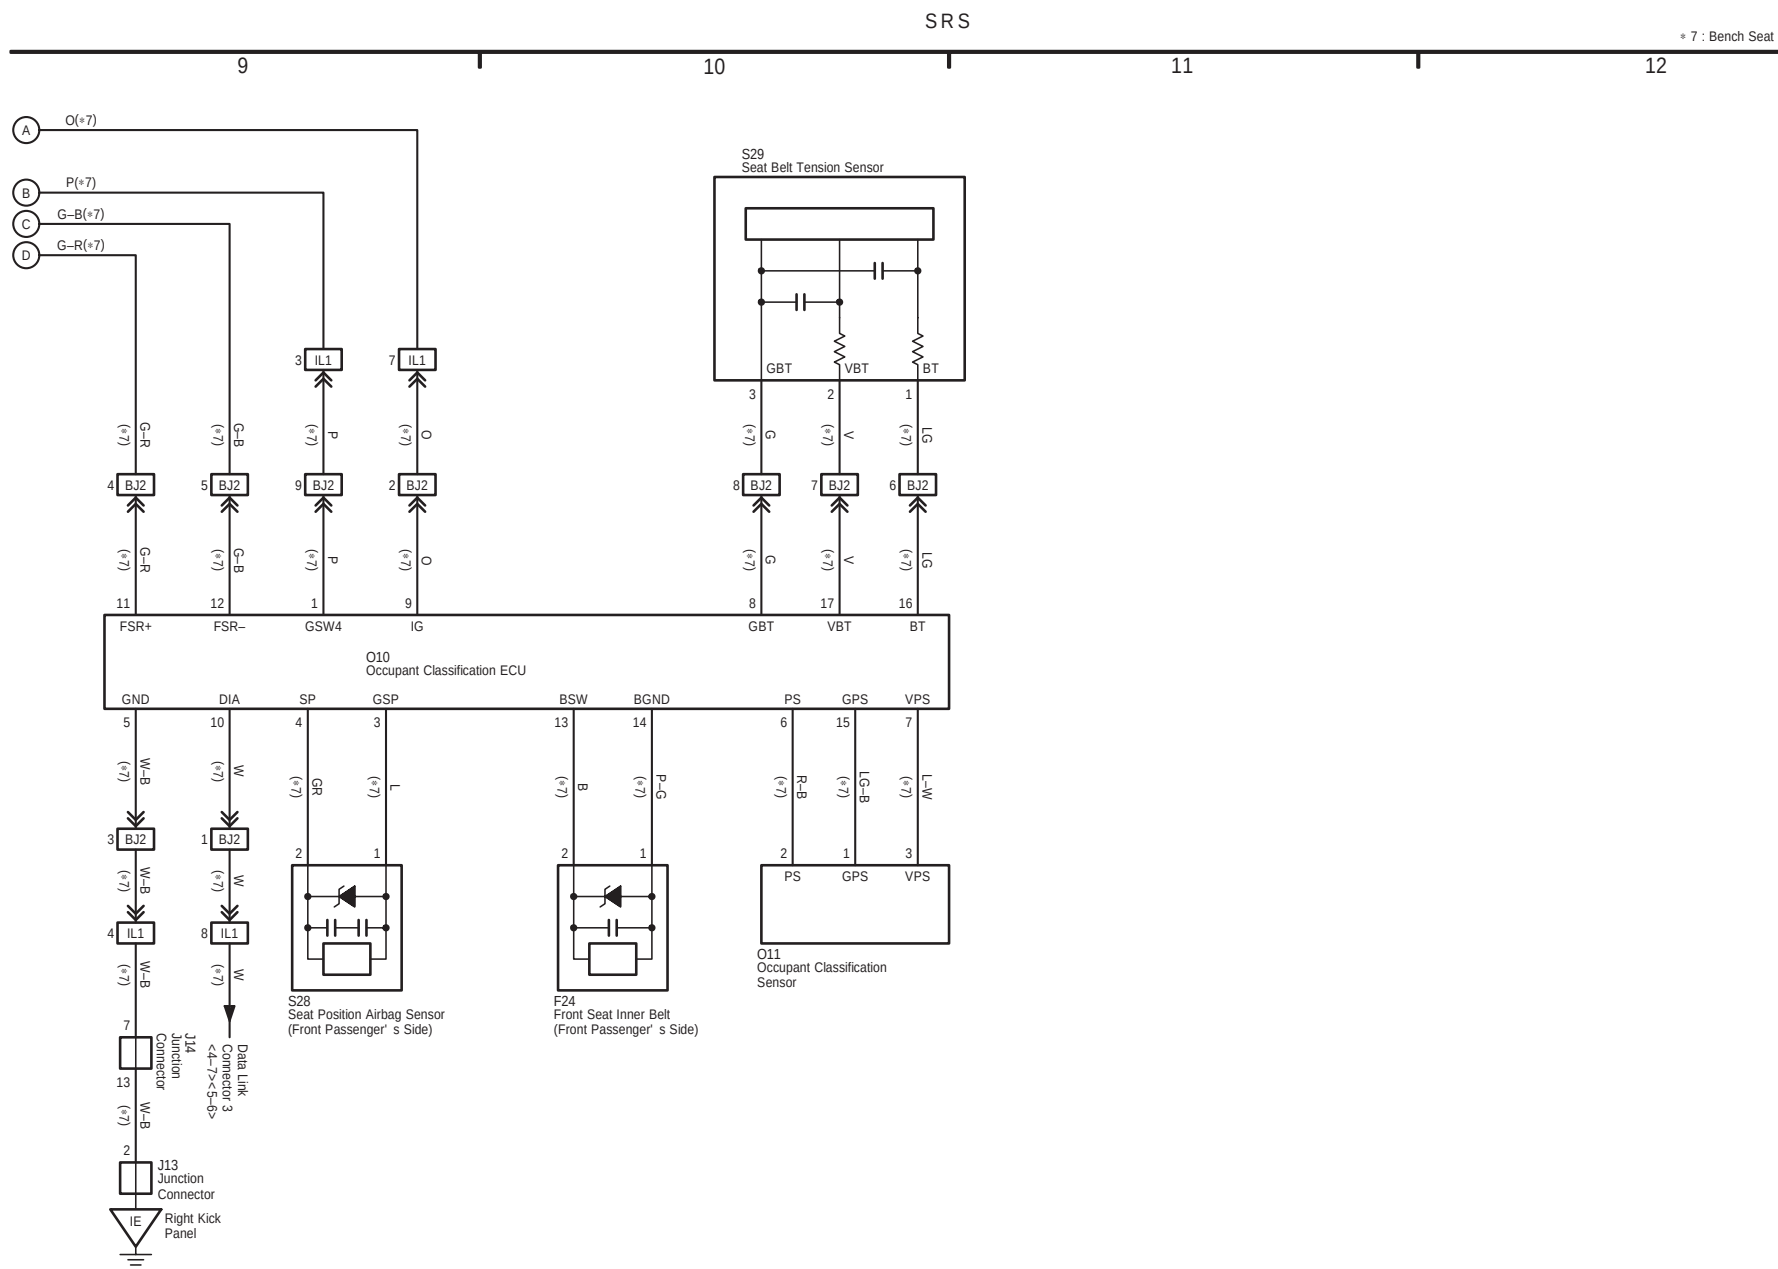


17 TOYOTA TACOMA

(Cont. next page)

M OVERALL ELECTRICAL WIRING DIAGRAM

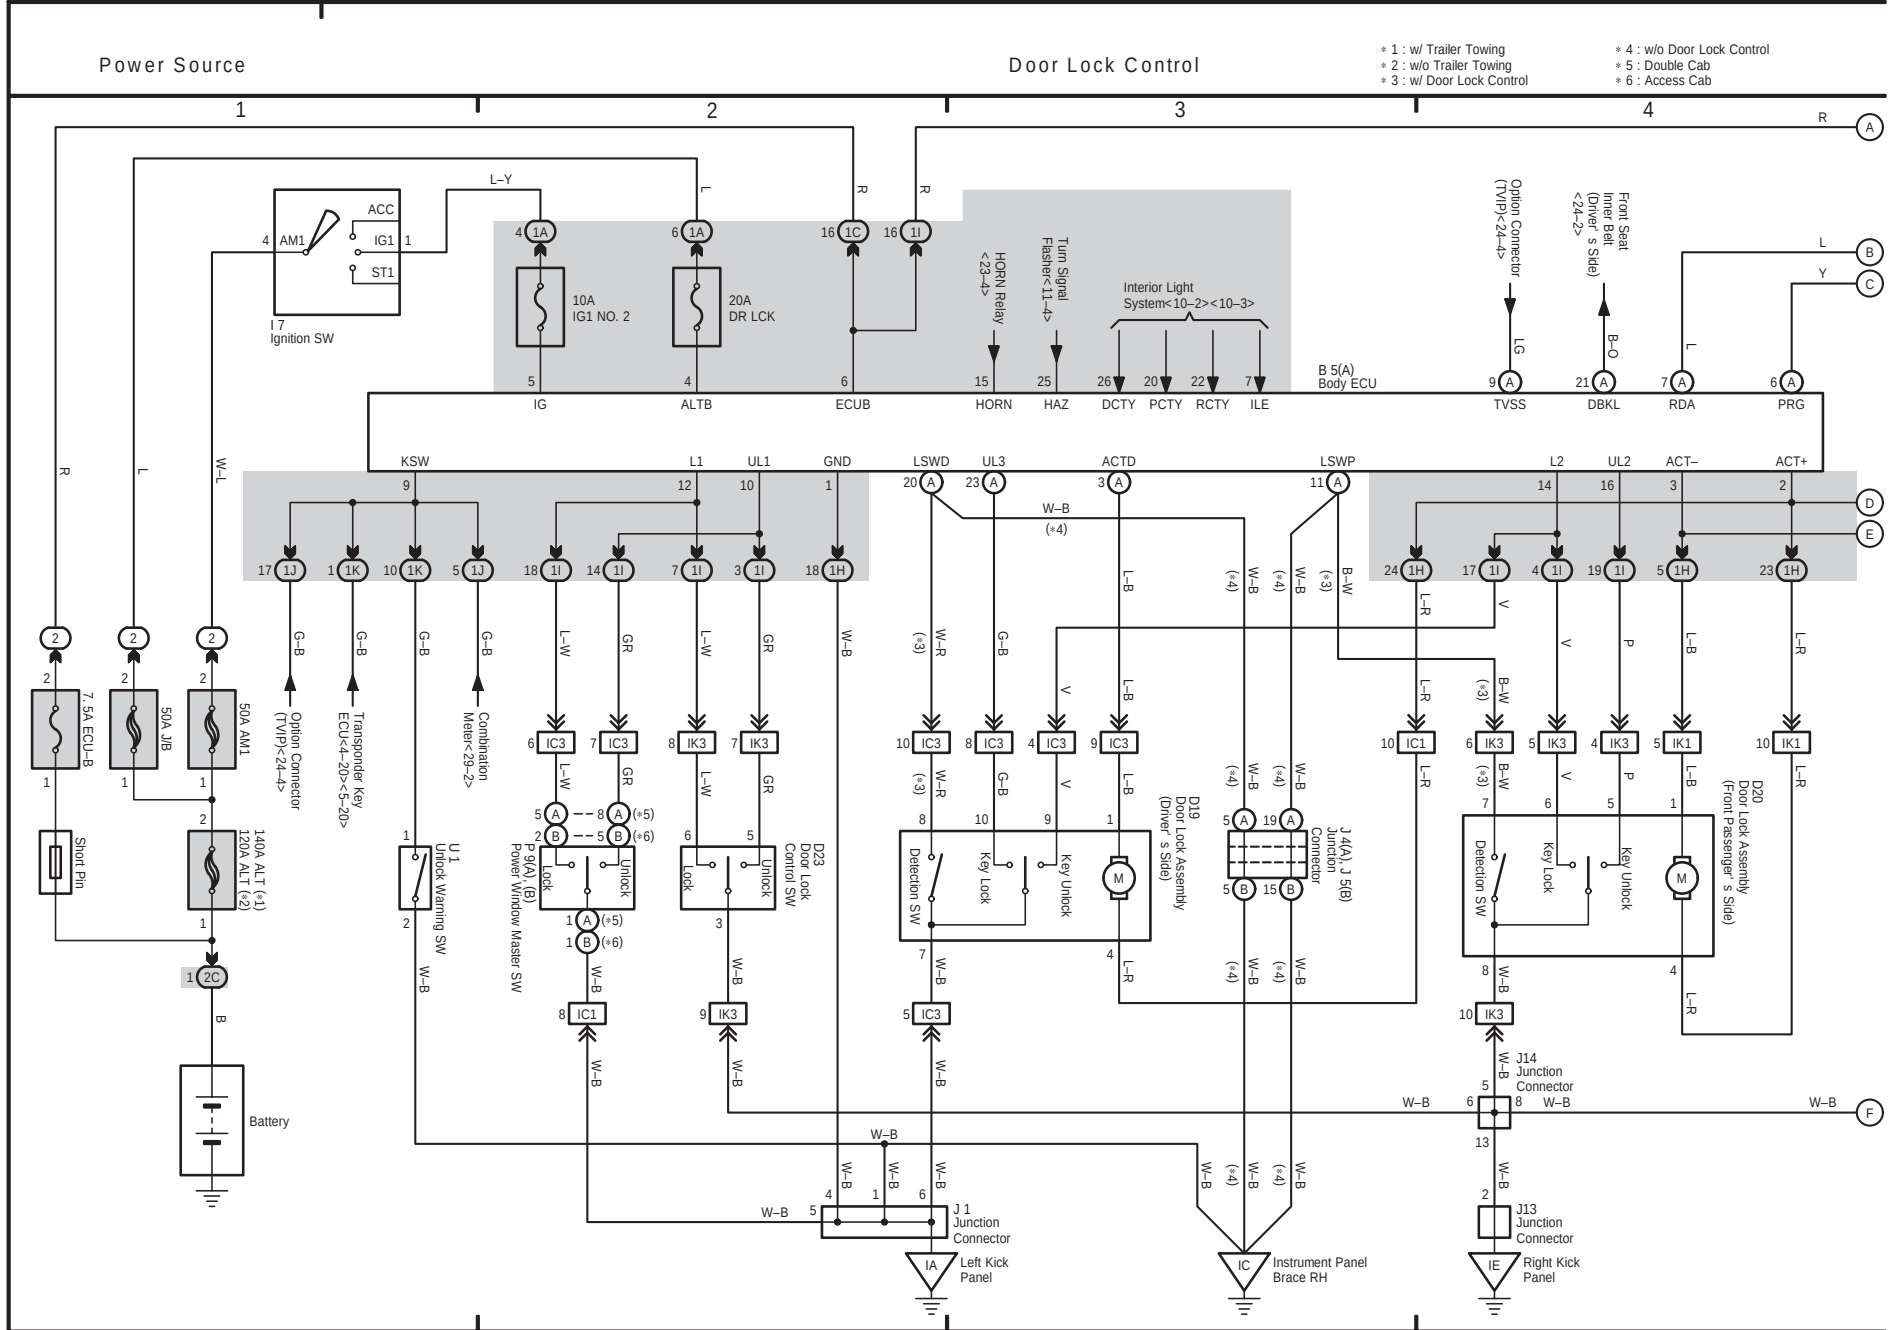


17 TOYOTA TACOMA (Cont' d)

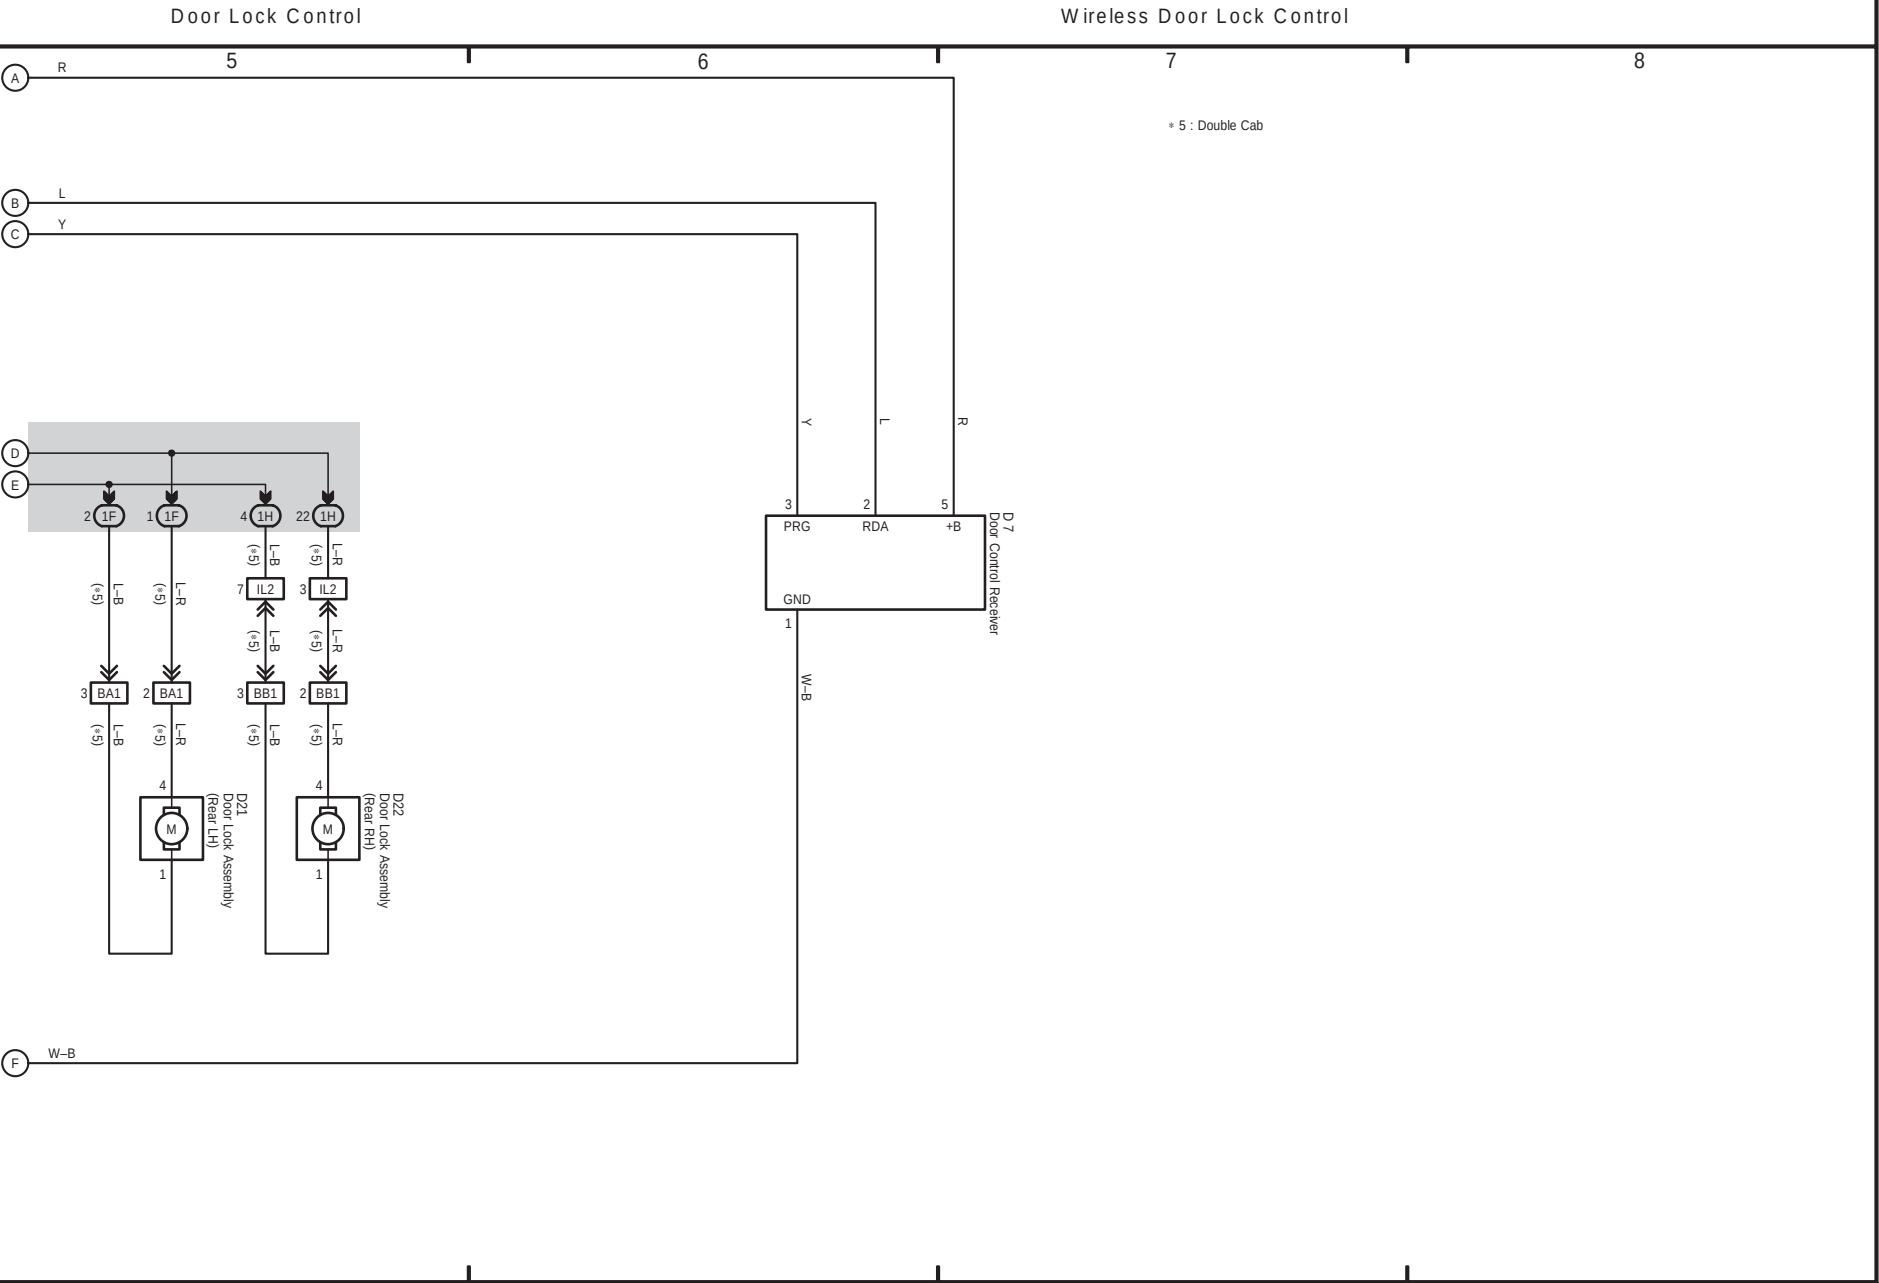


TOYOTA TACOMA (EM03N0U)


TOYOTA TACOMA (EM03N0U)

18 TOYOTA TACOMA

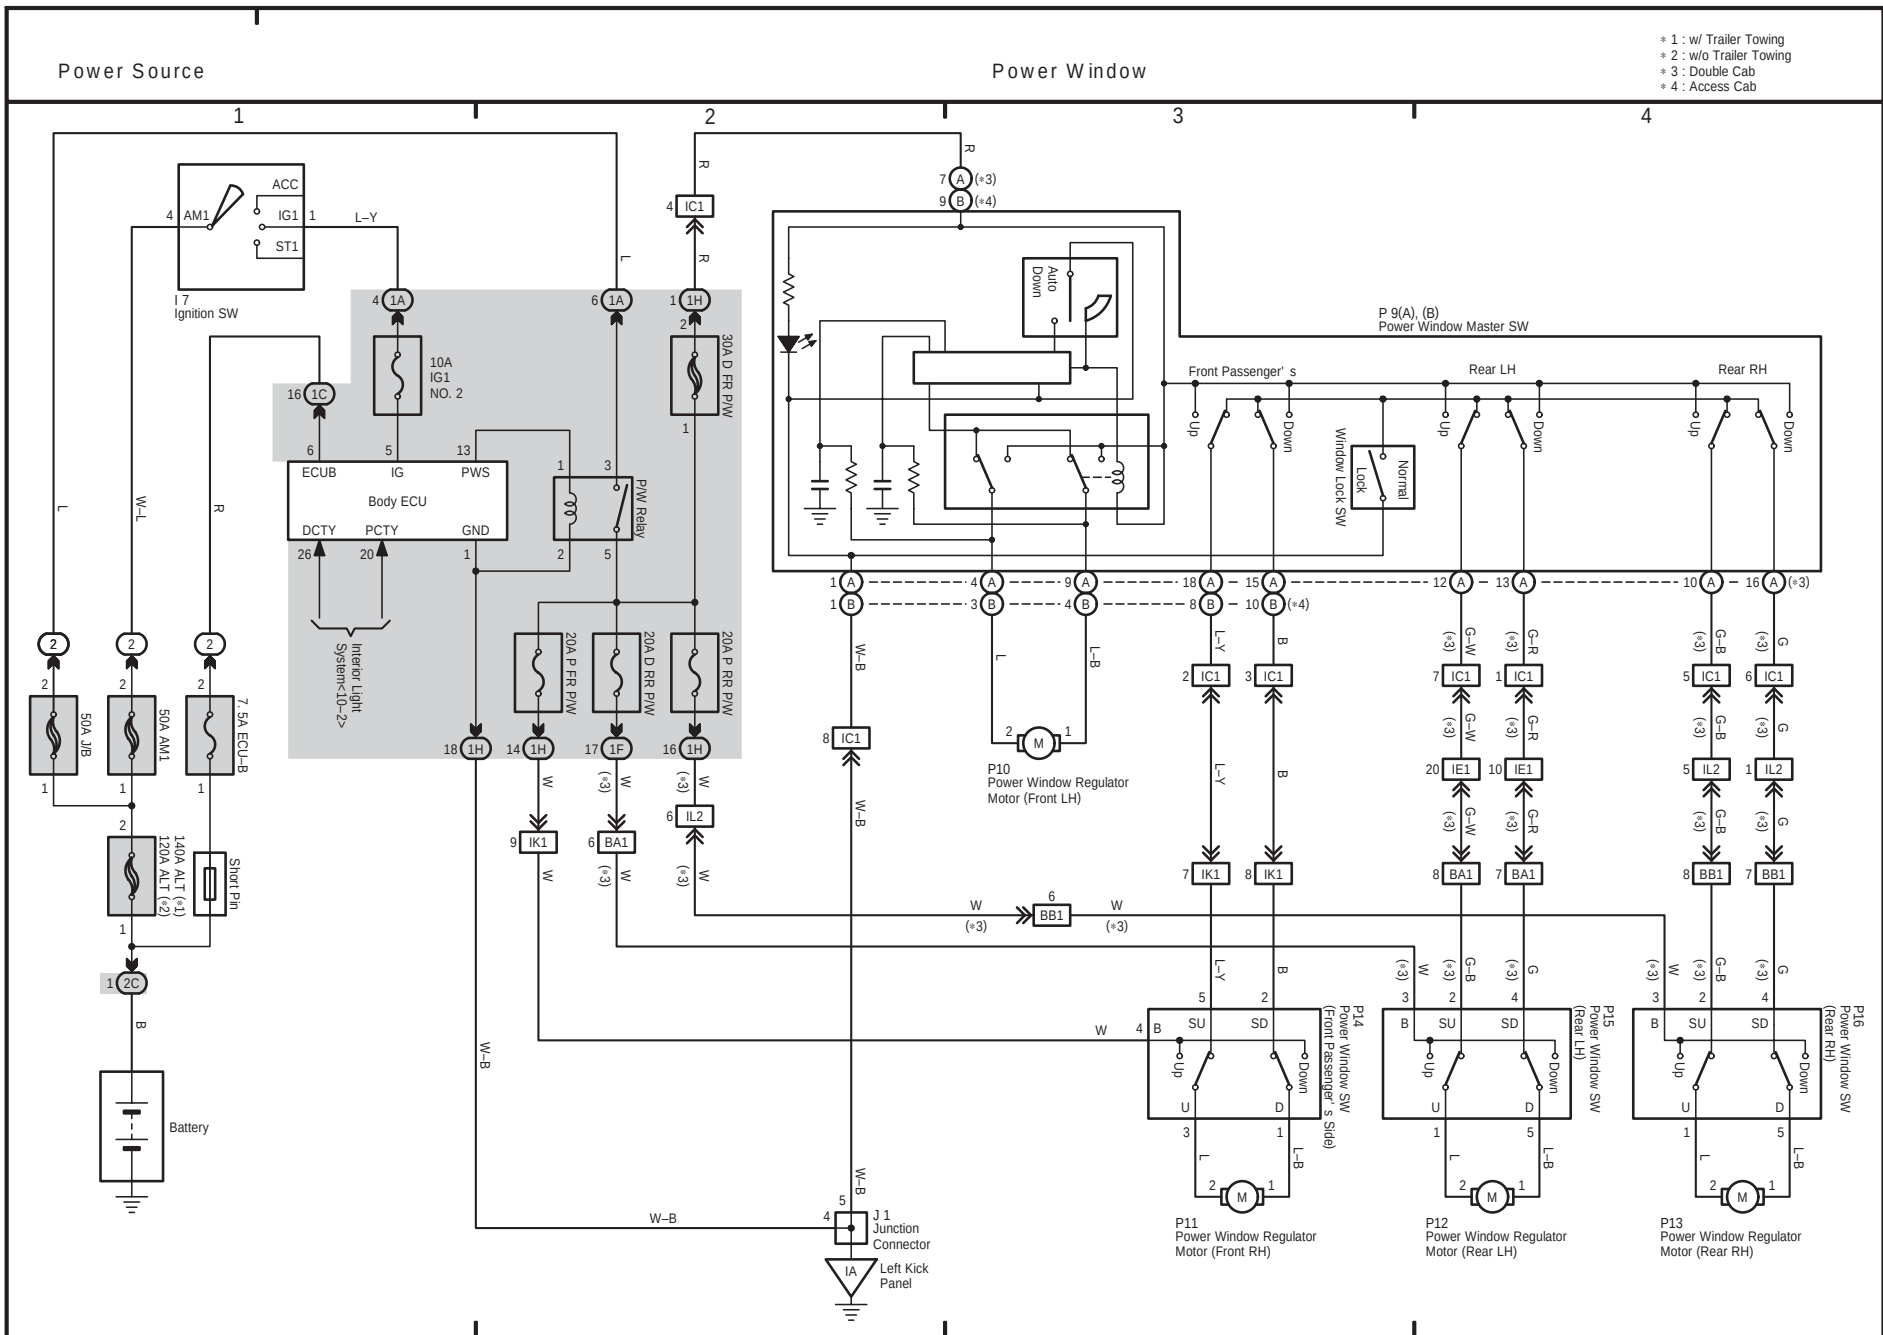


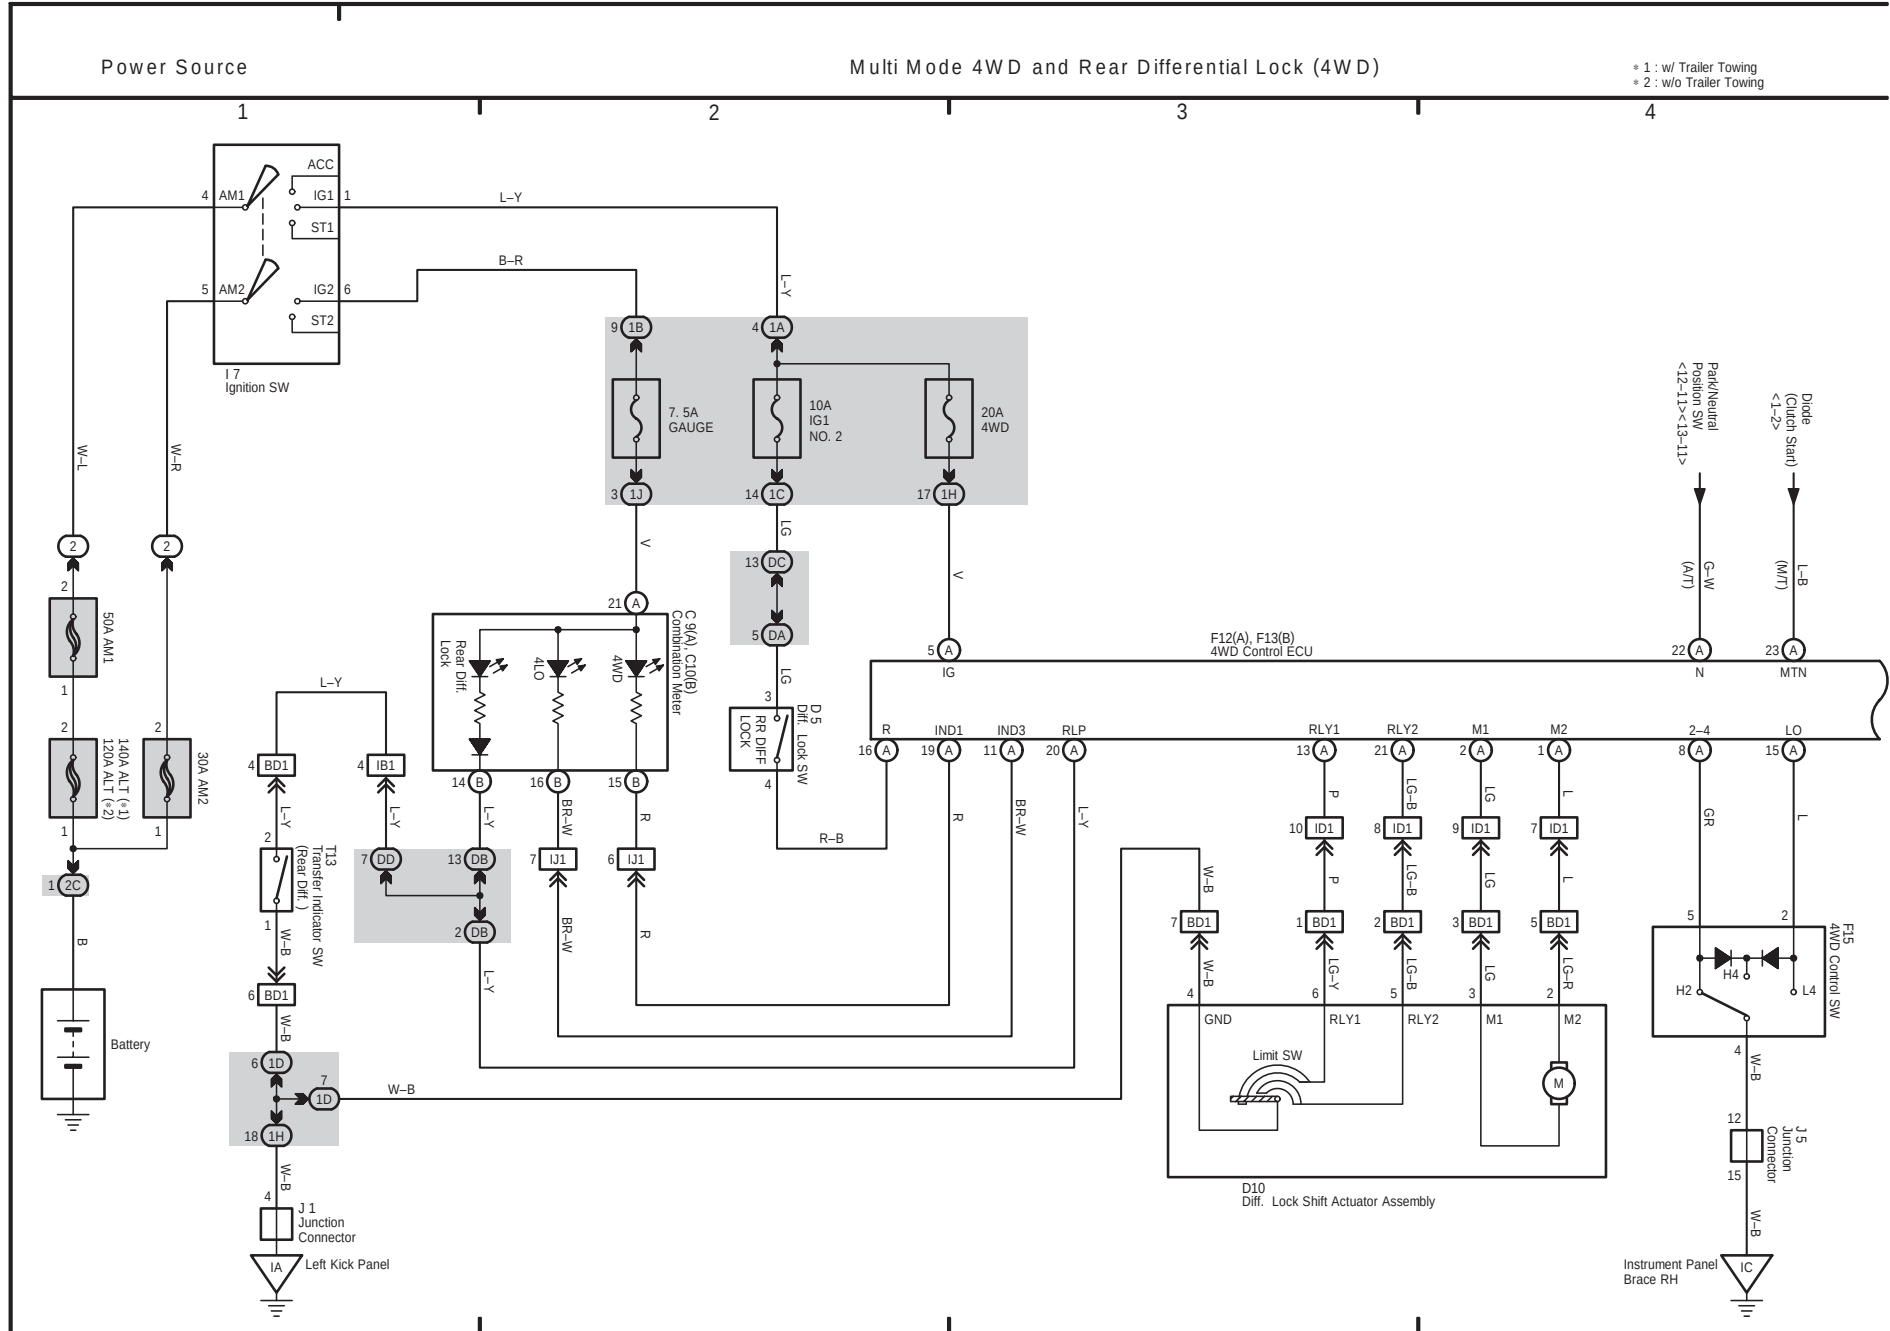

- * 3 : w/ ADD
- * 4 : 1GR-FE
- * 5 : 2TR-FE

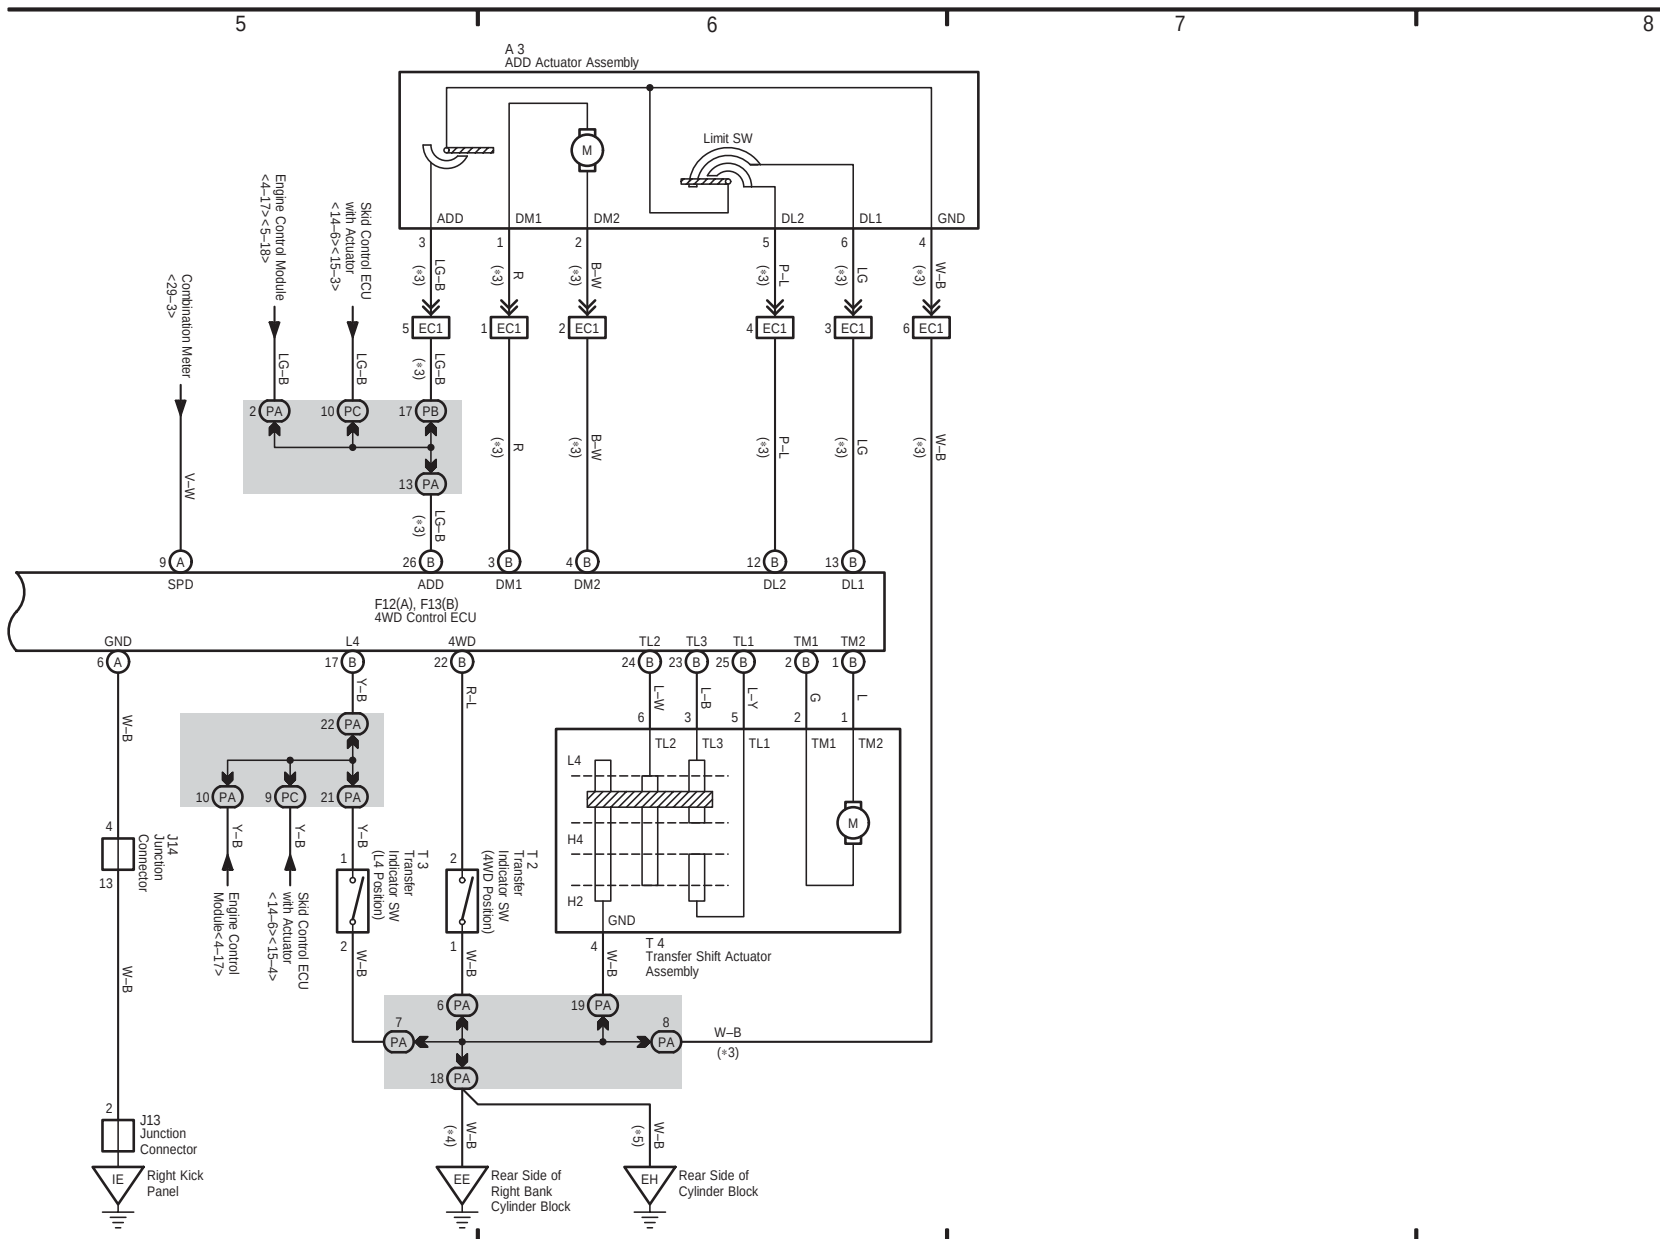


20 TOYOTA TACOMA

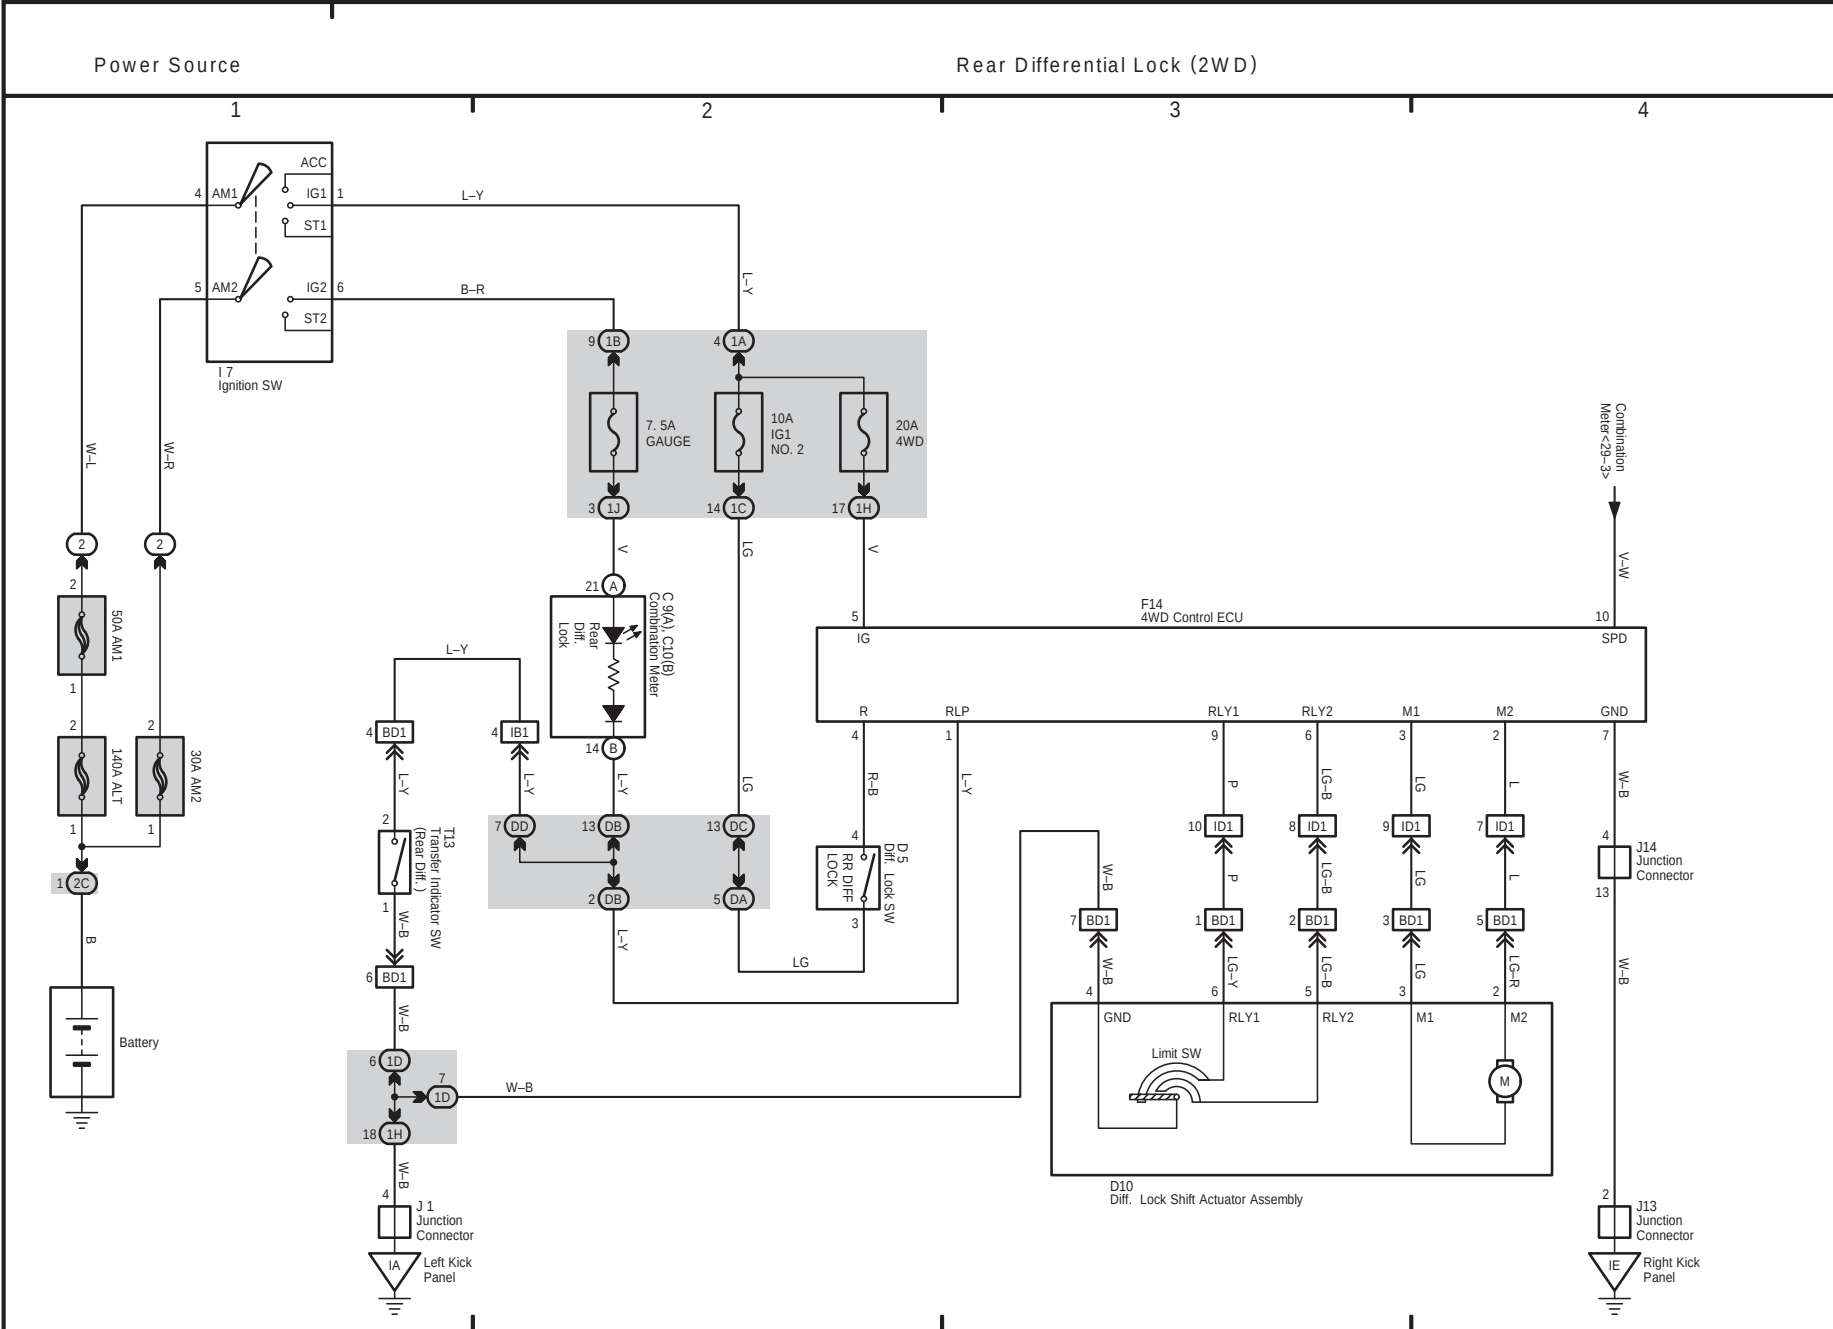


21 TOYOTA TACOMA

TOYOTA TACOMA (EM03N0U)


357

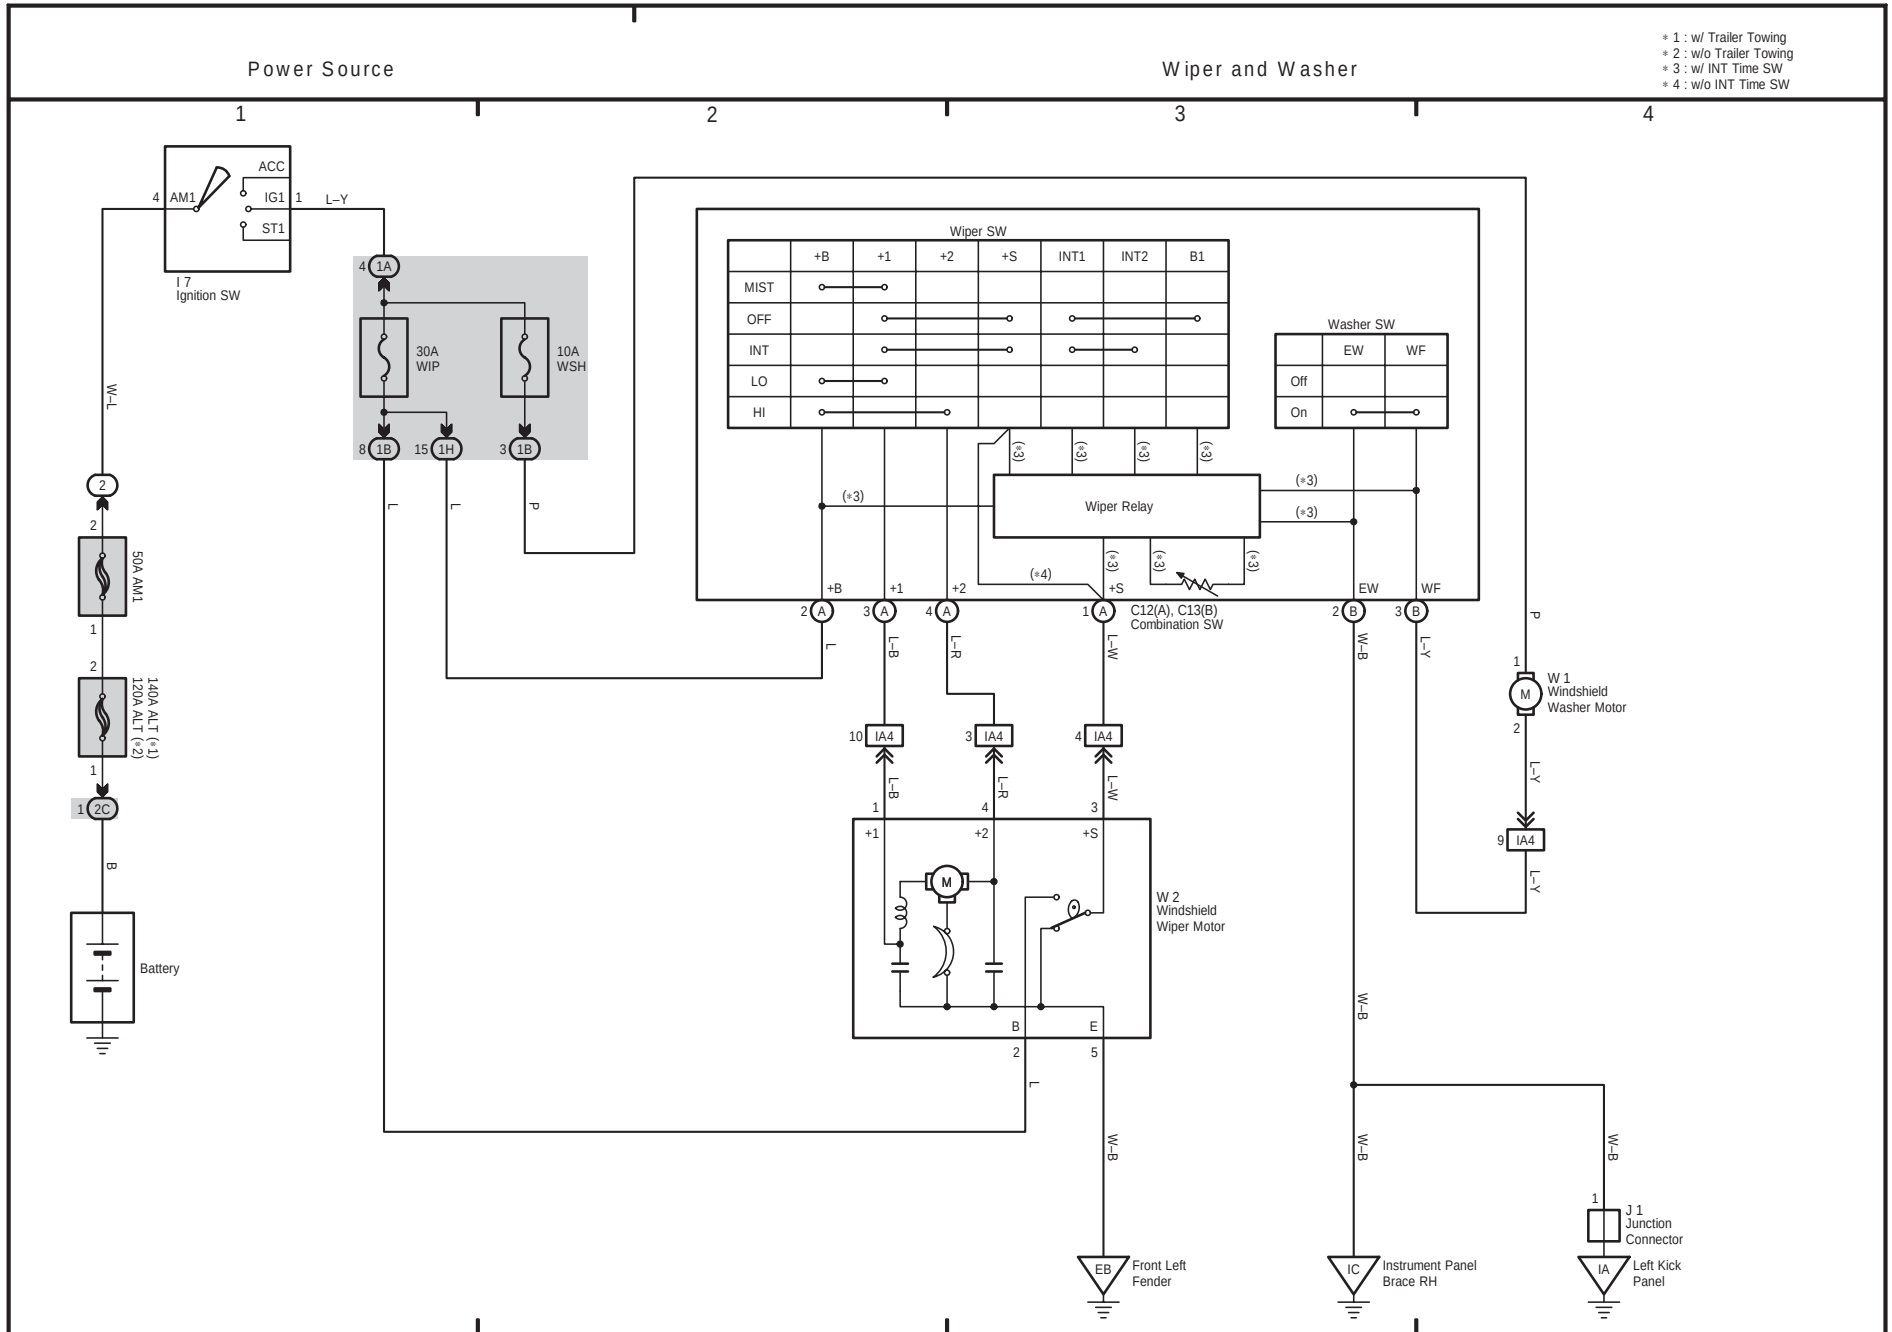

22 TOYOTA TACOMA

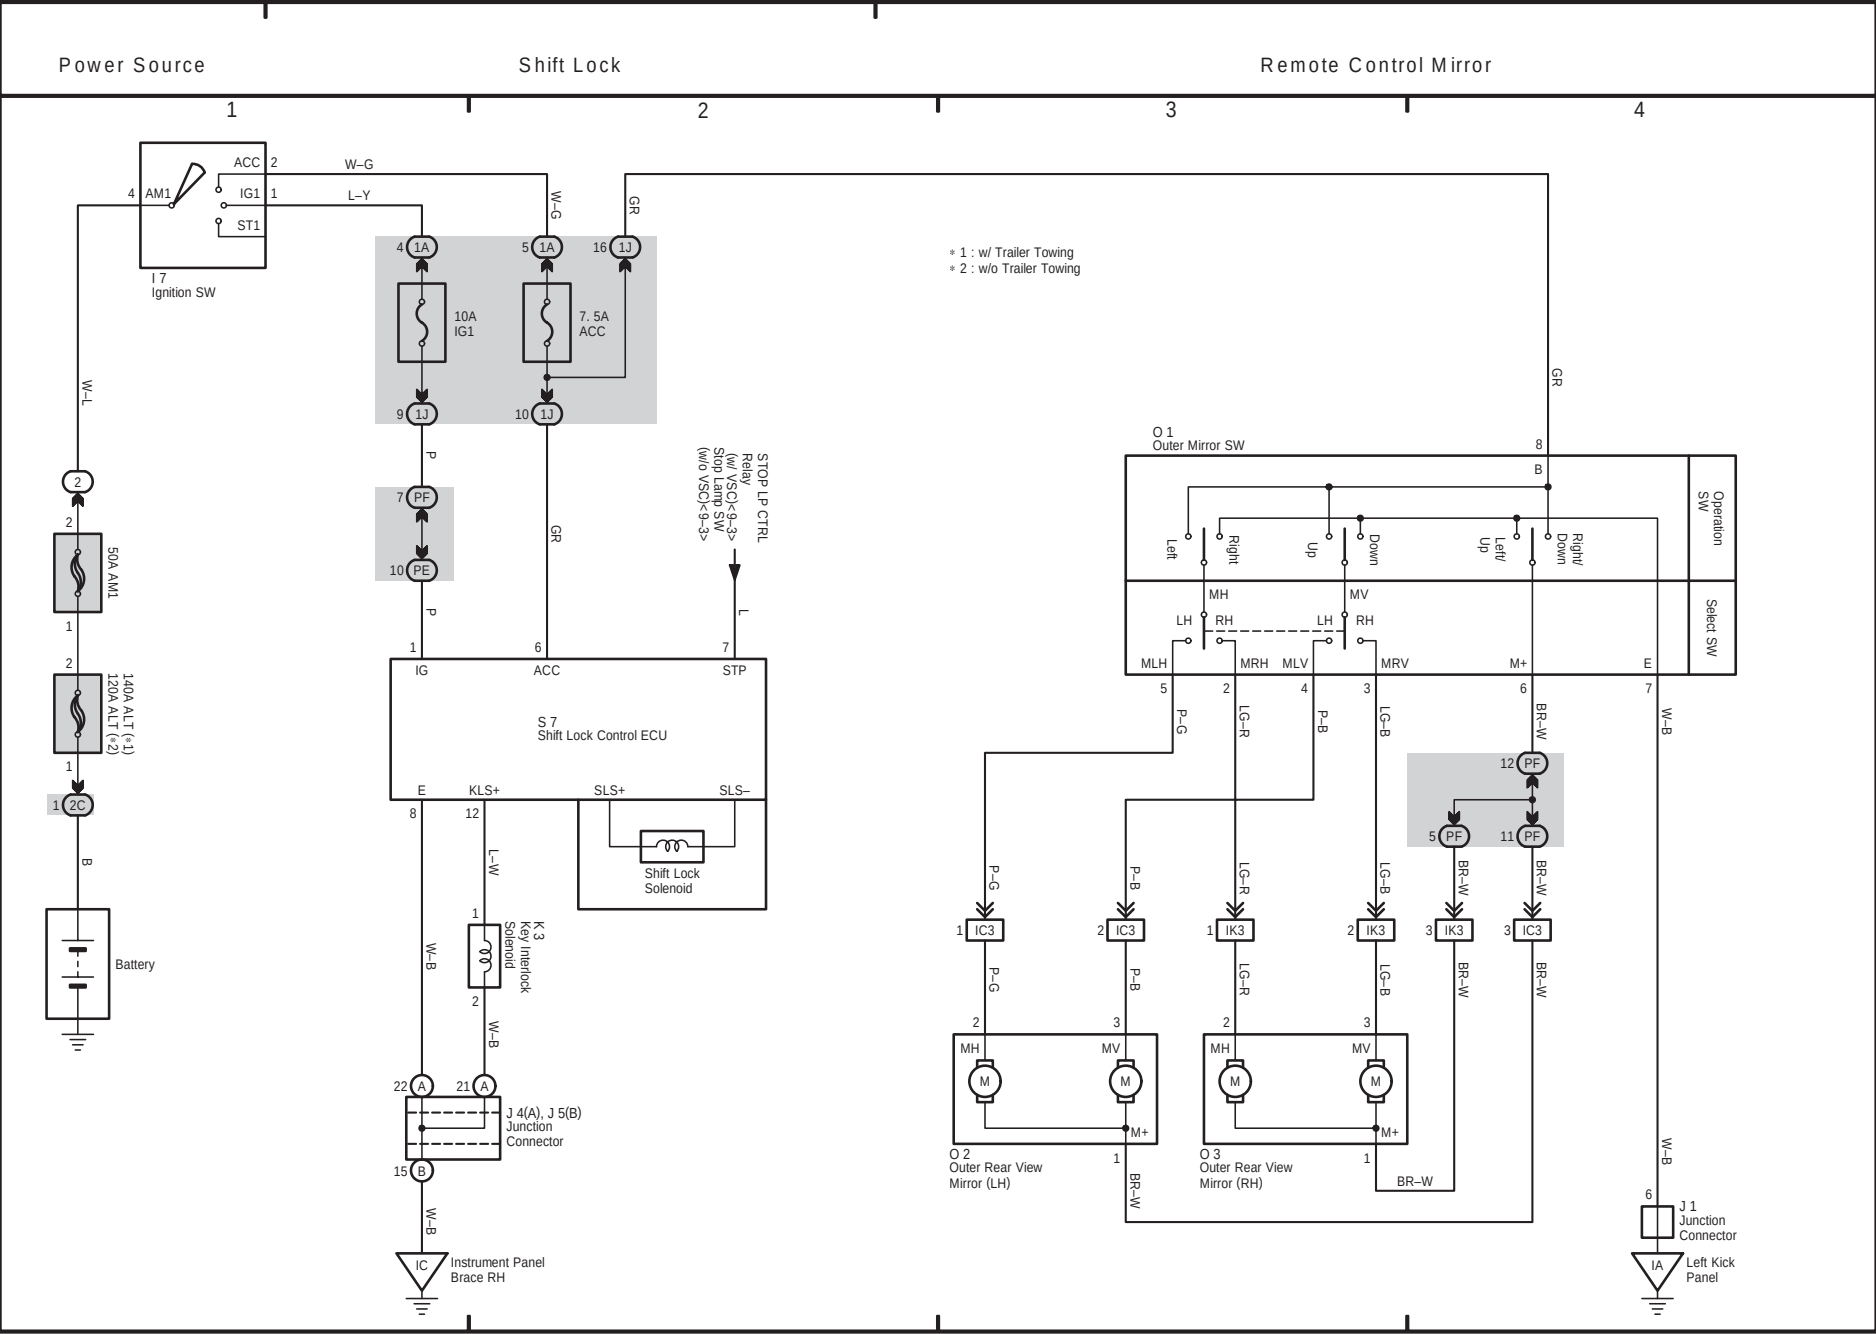


23 TOYOTA TACOMA

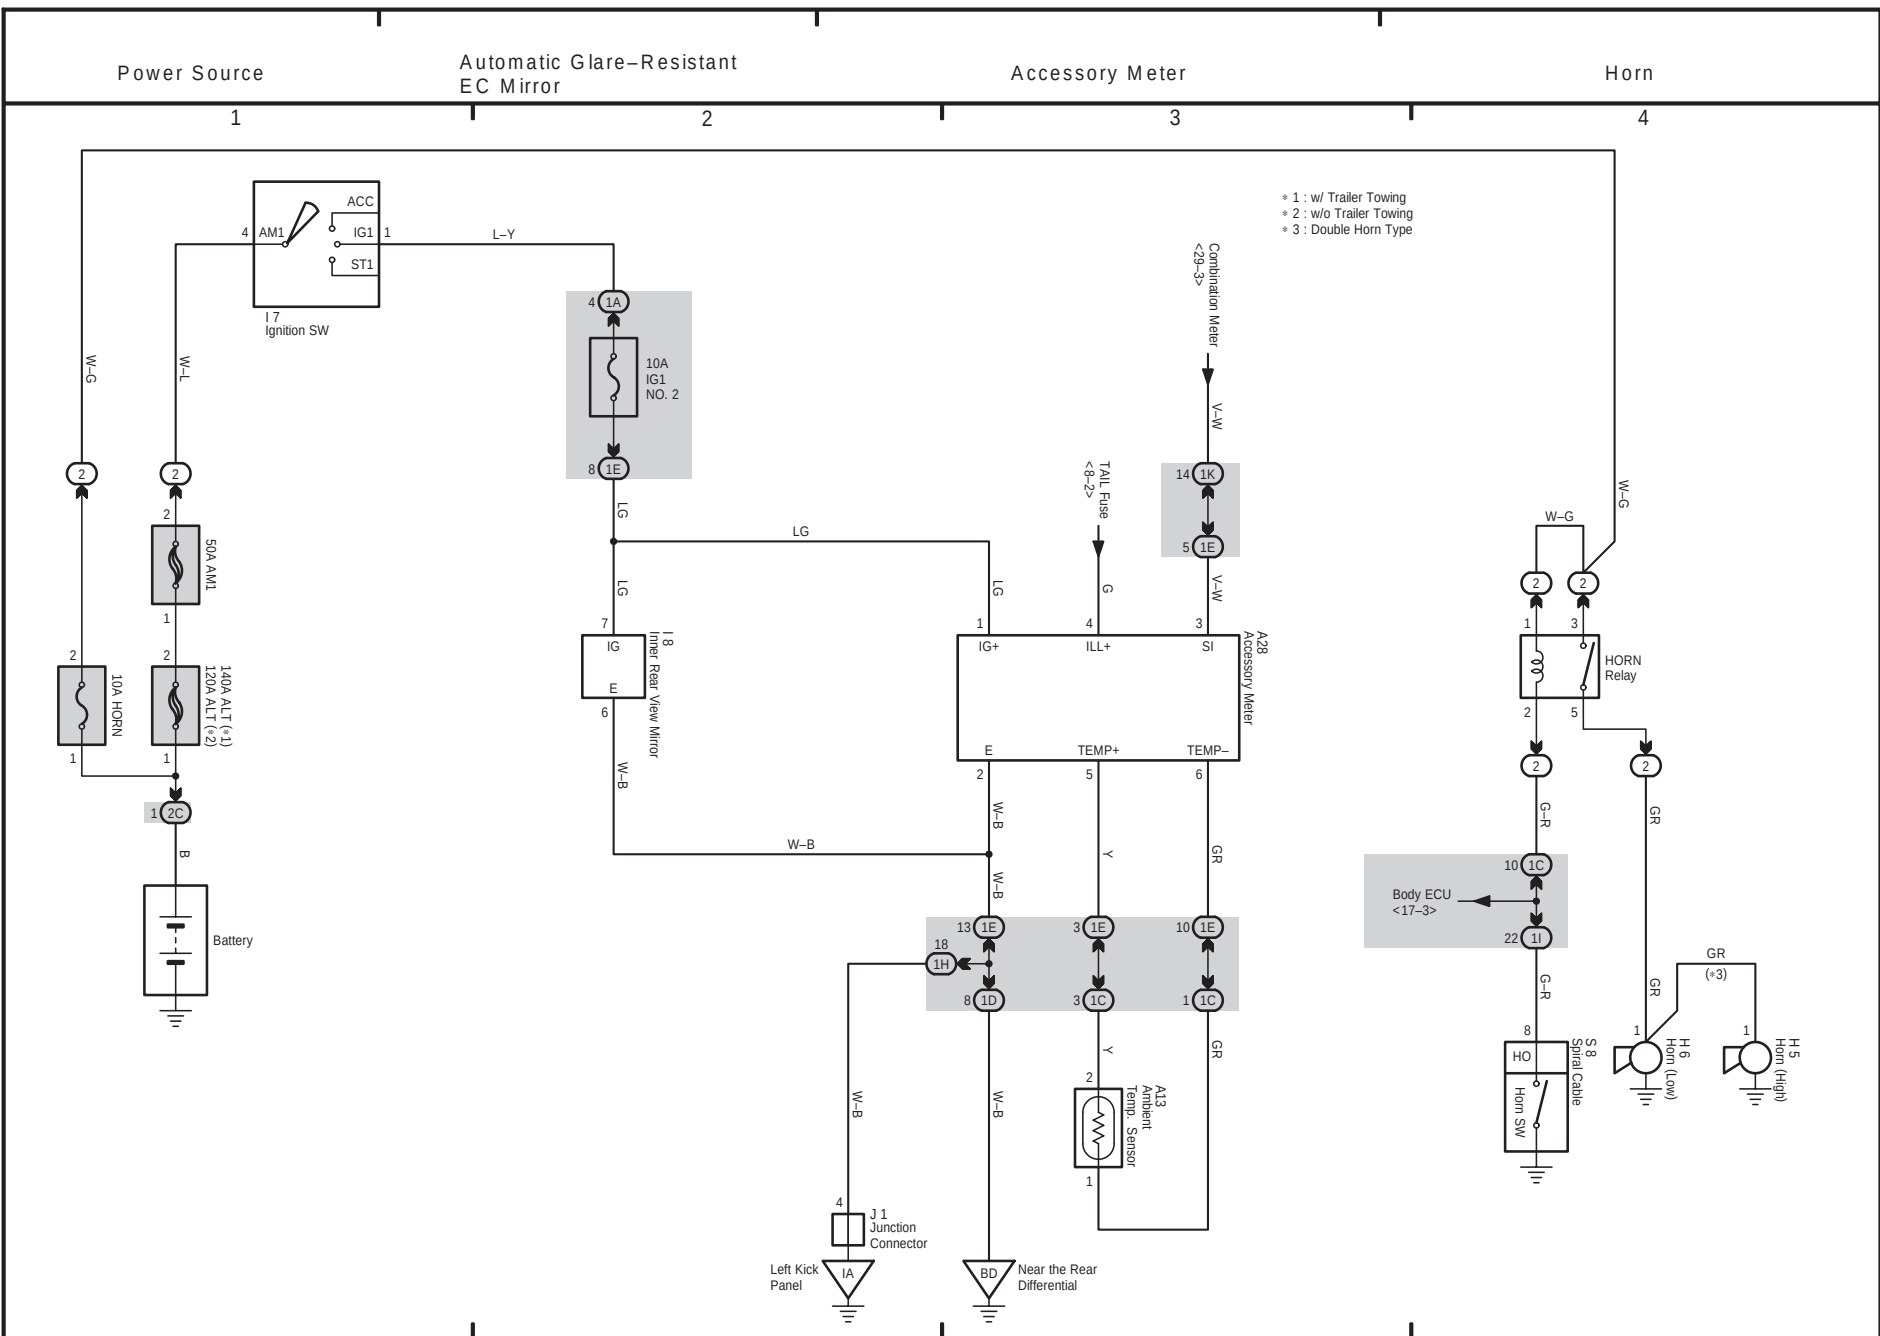


M OVERALL ELECTRICAL WIRING DIAGRAM


24 TOYOTA TACOMA

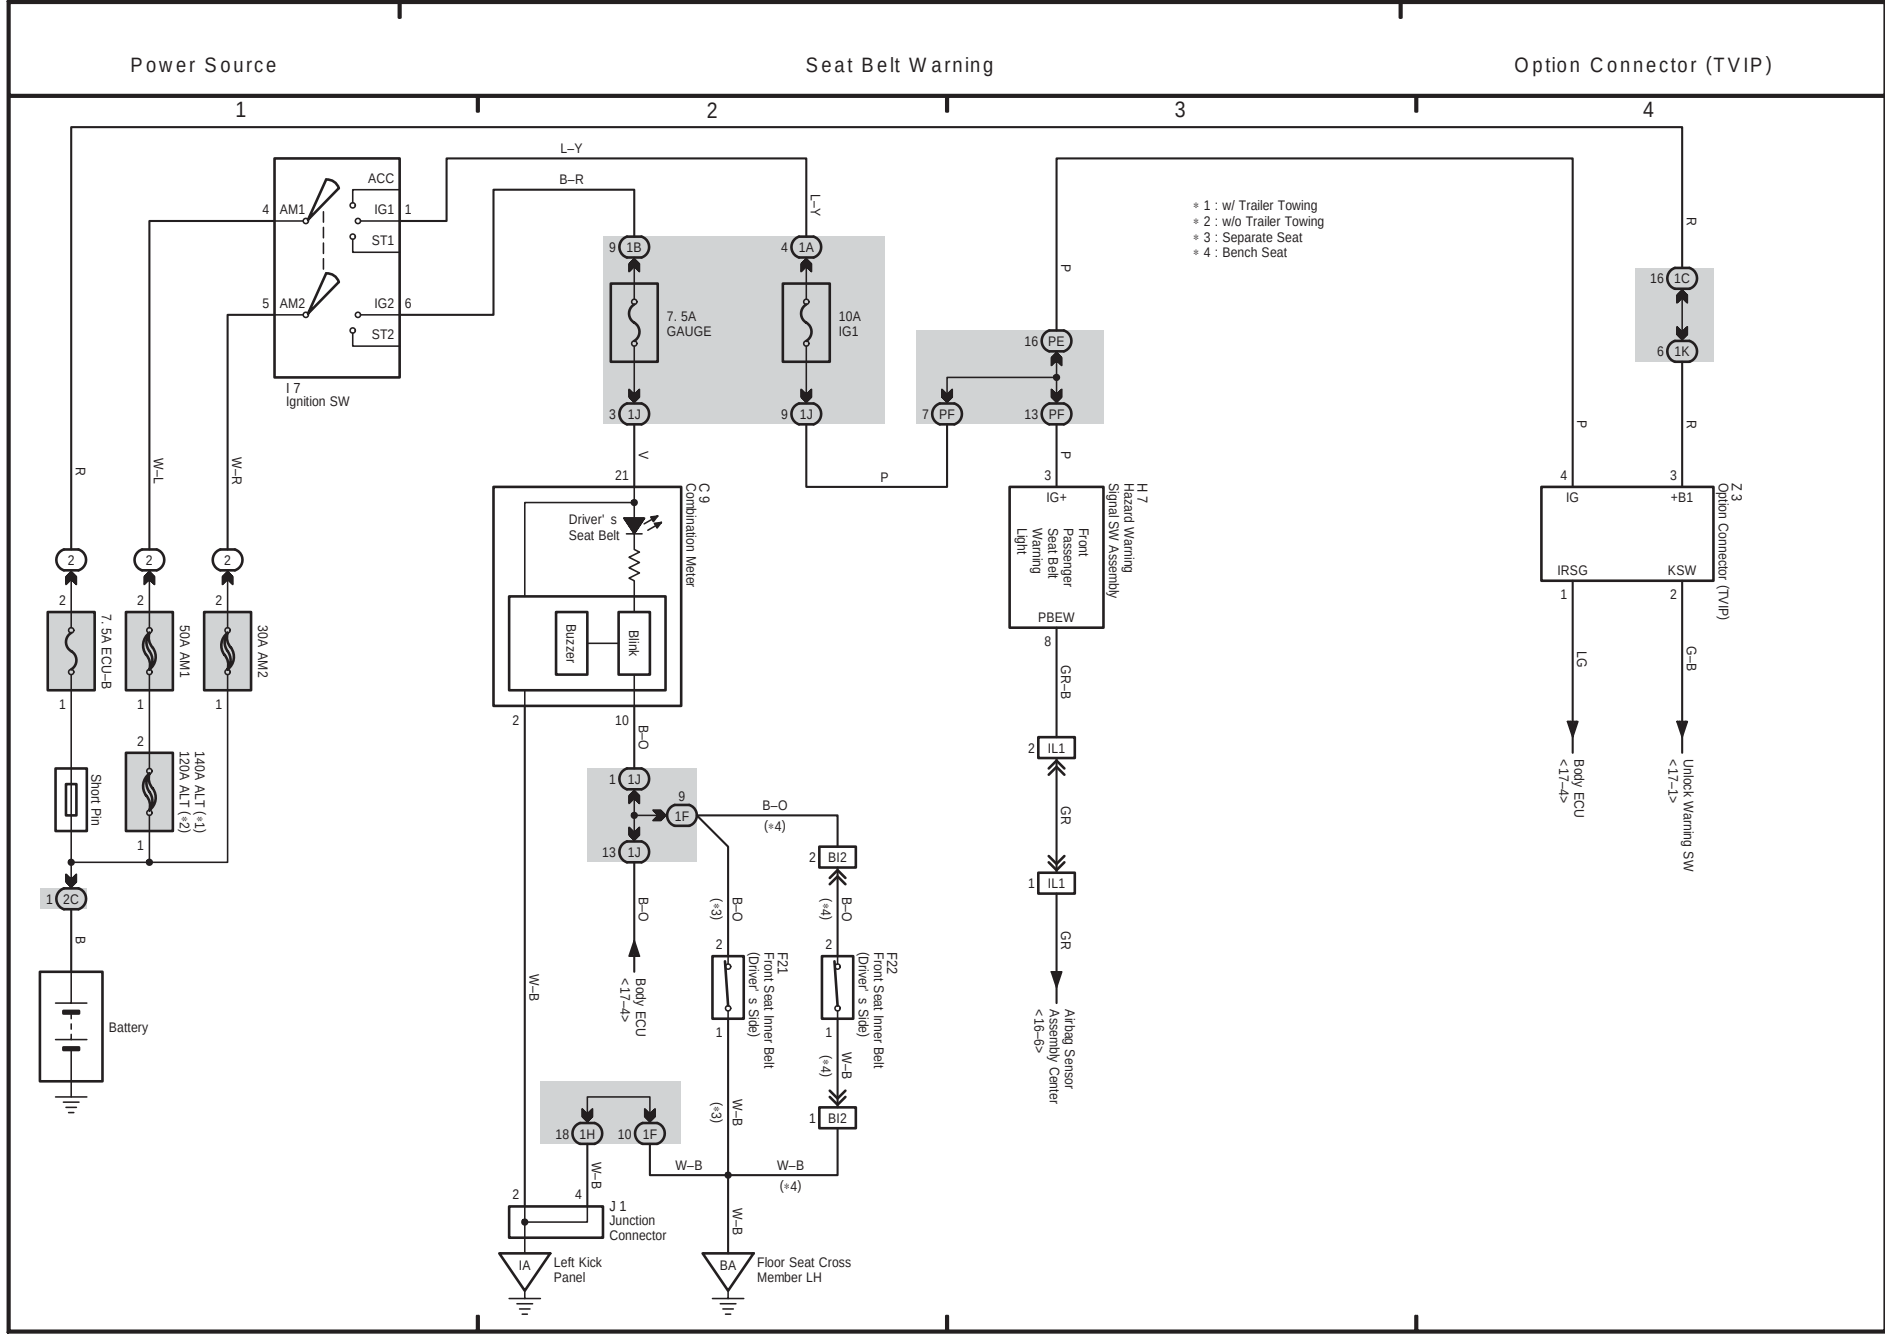



25 TOYOTA TACOMA


TOYOTA TACOMA (EM03N0U)

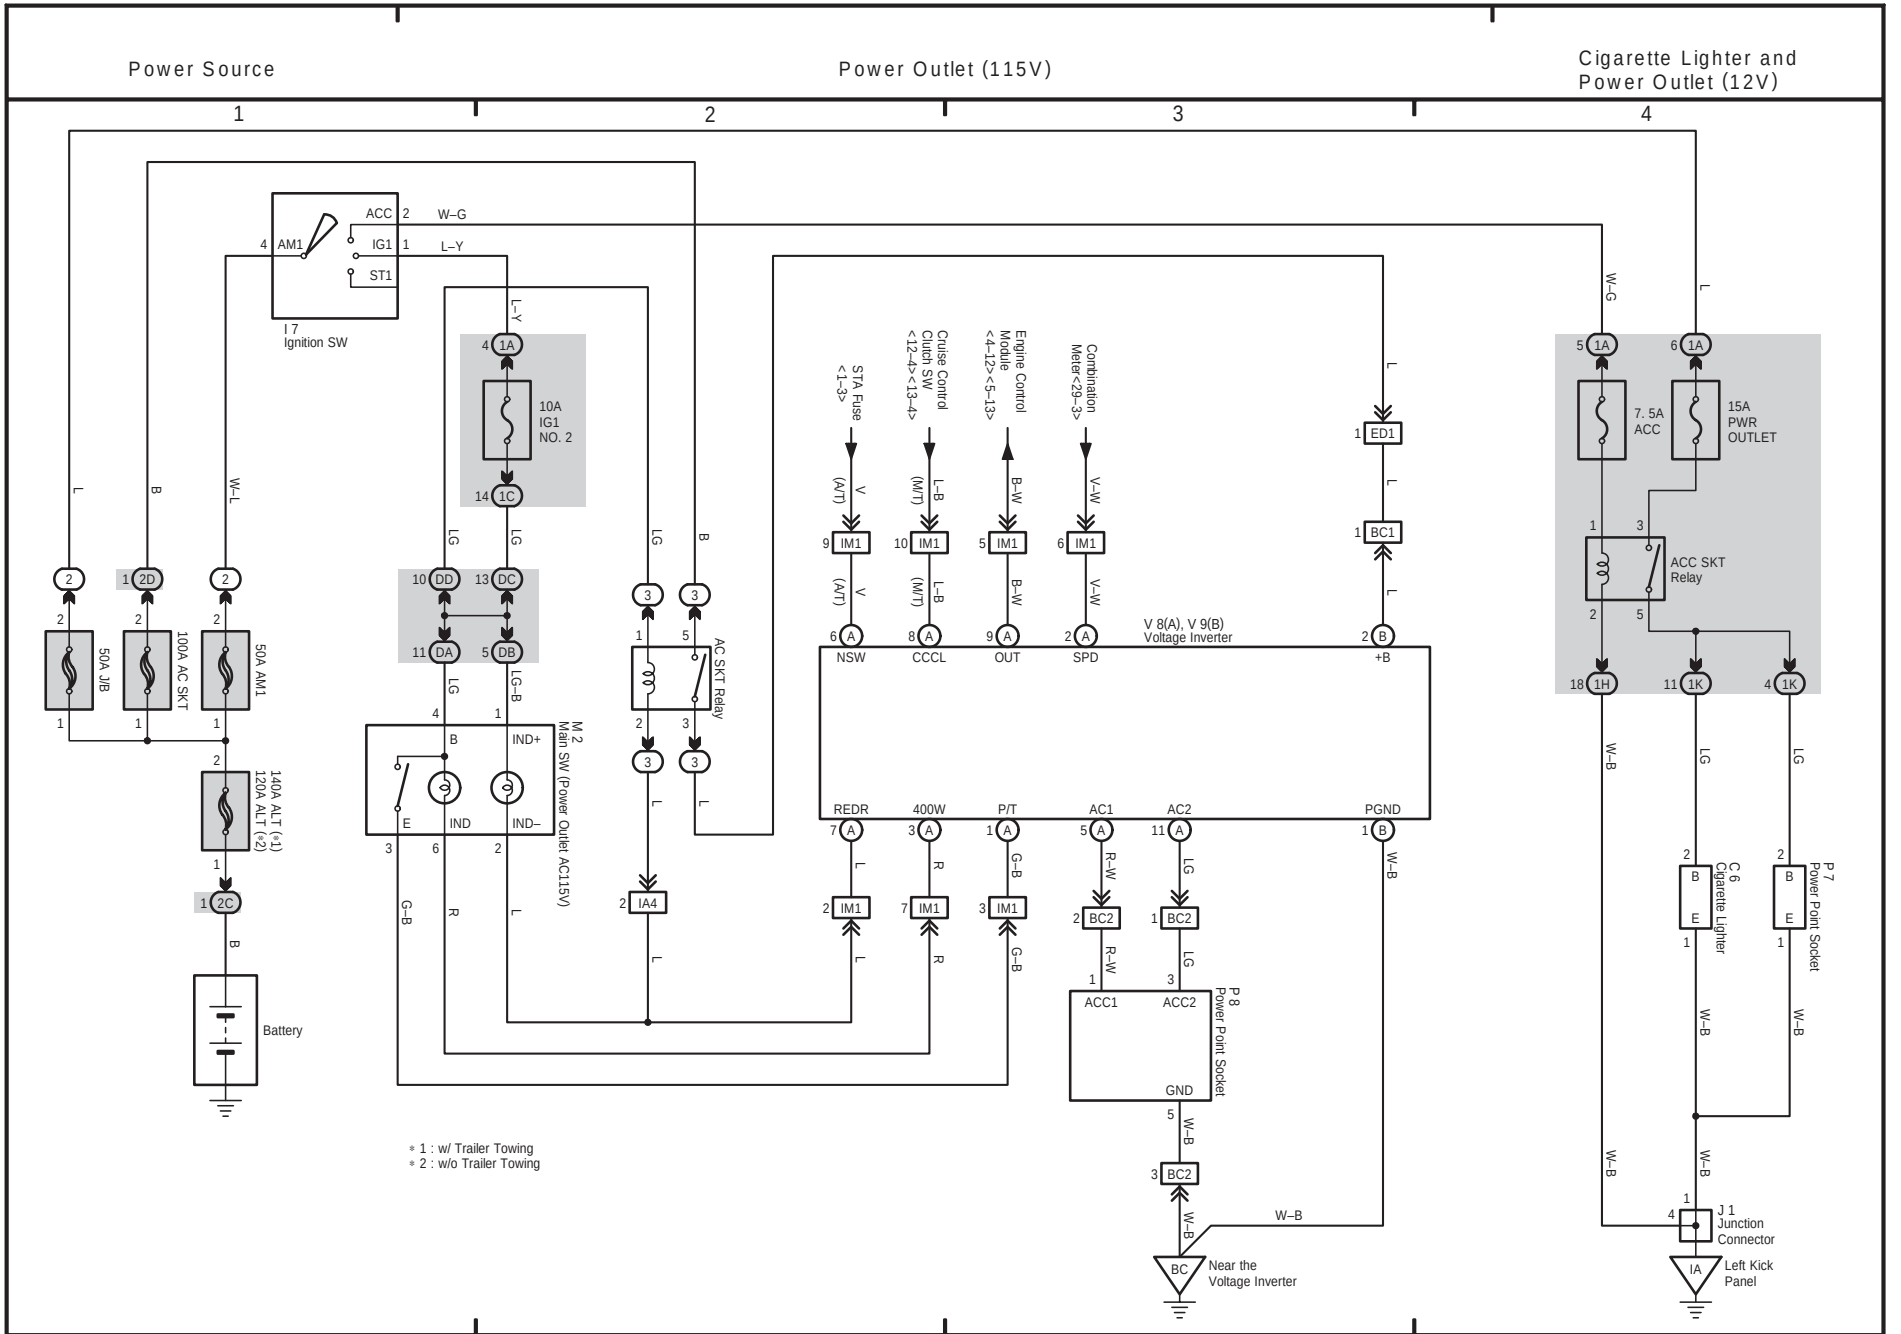


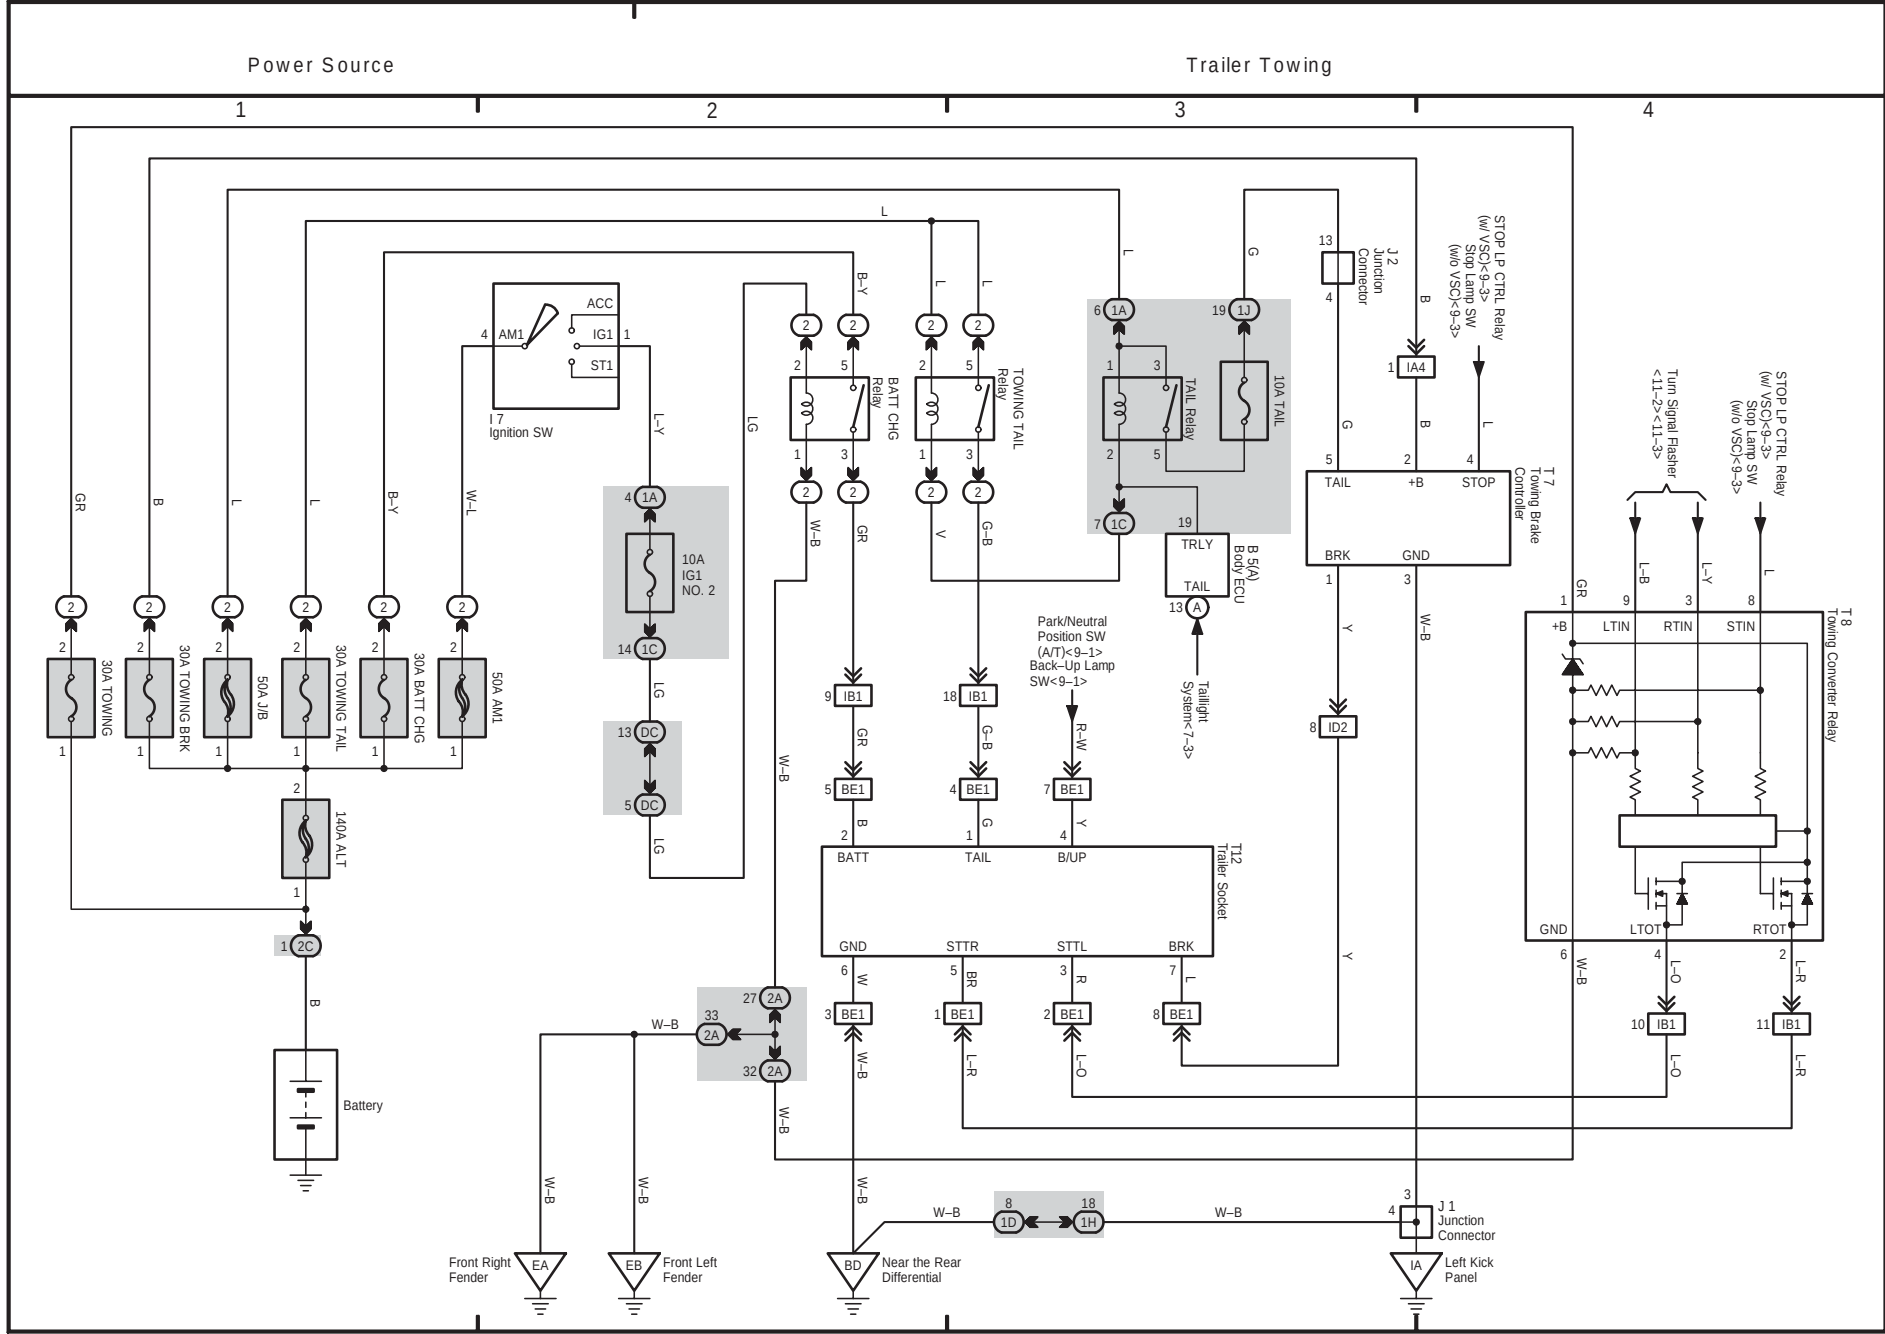


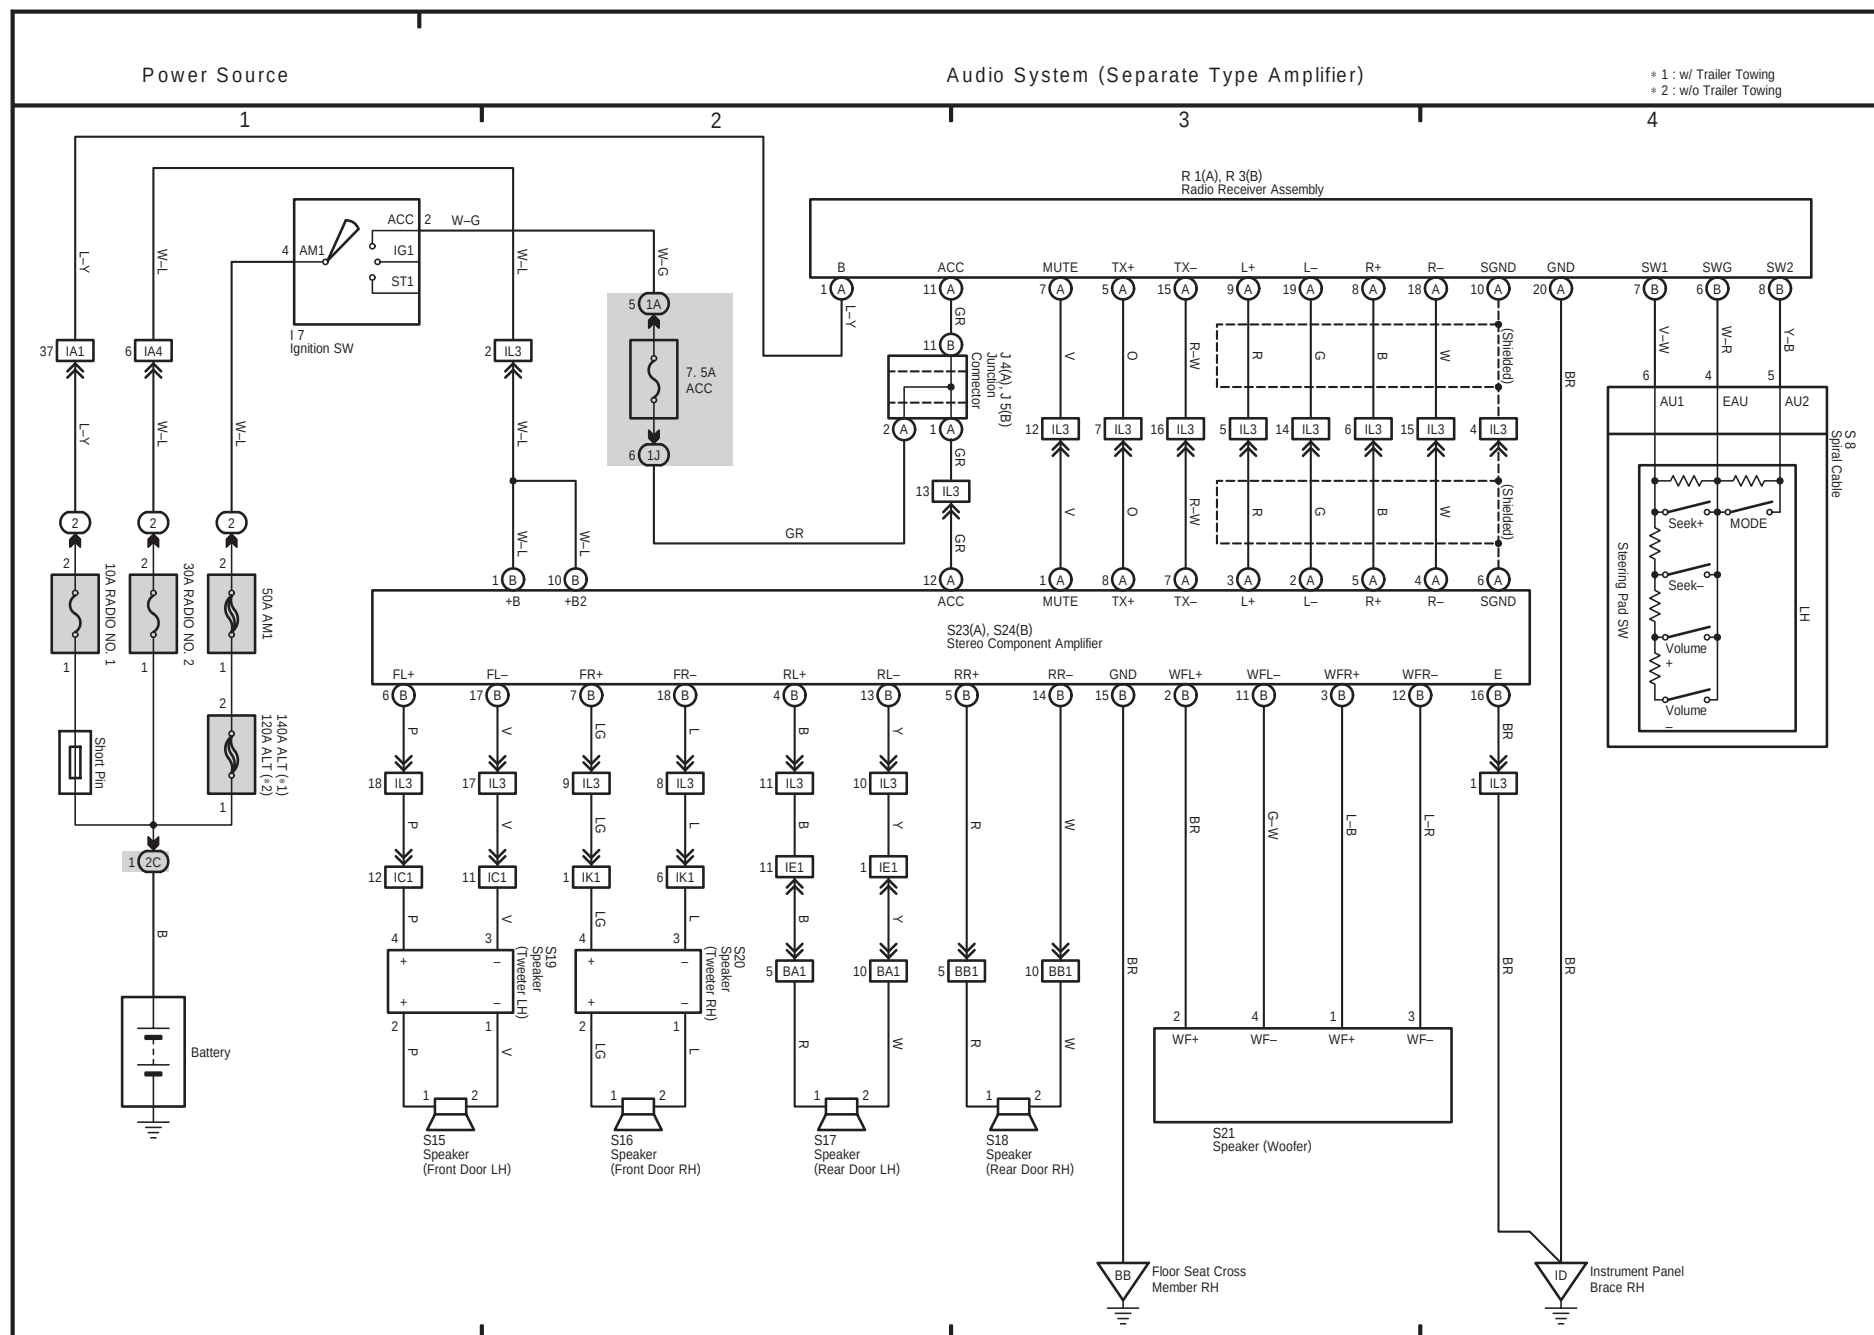

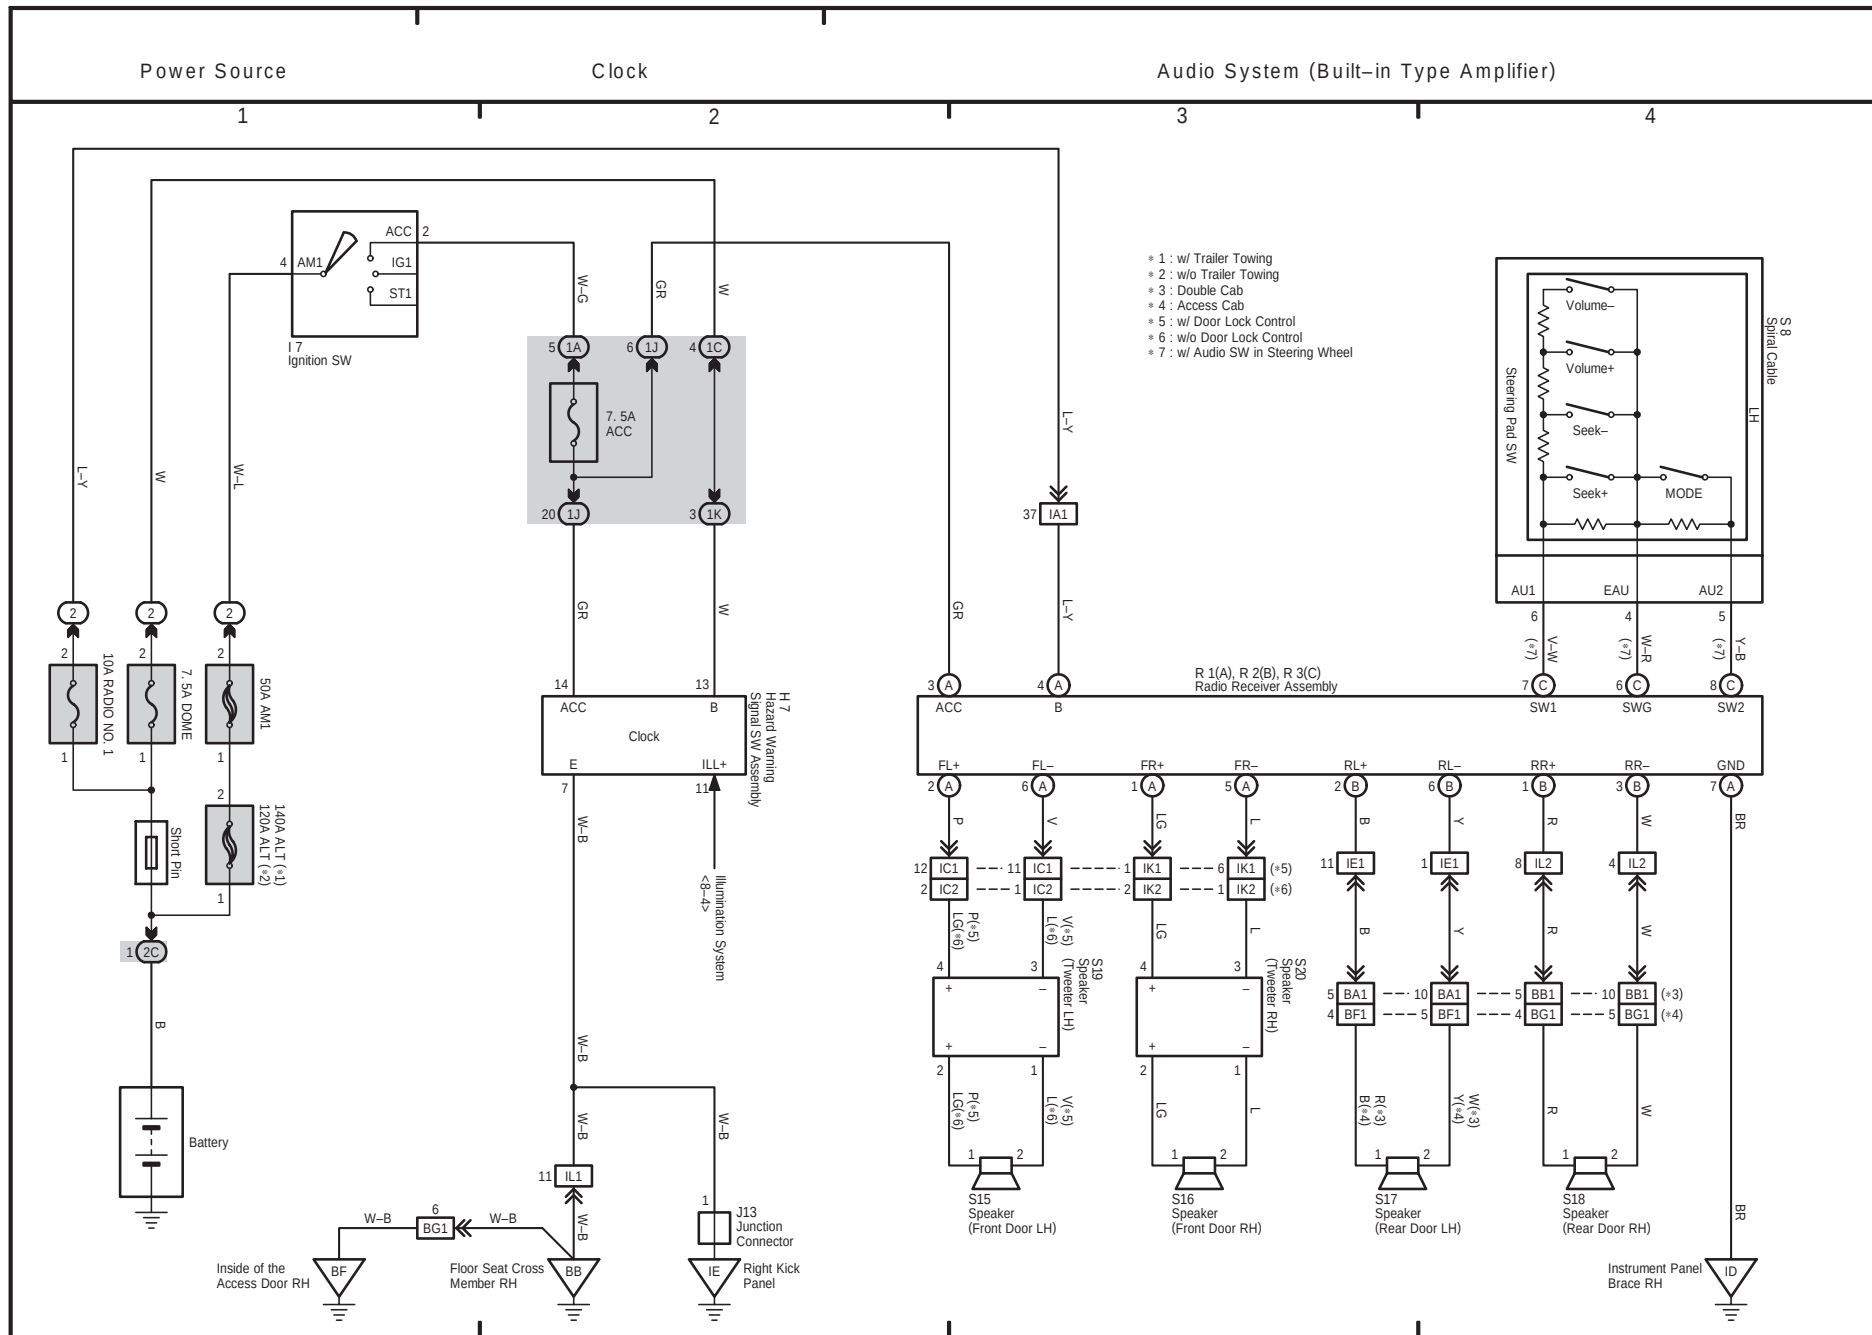

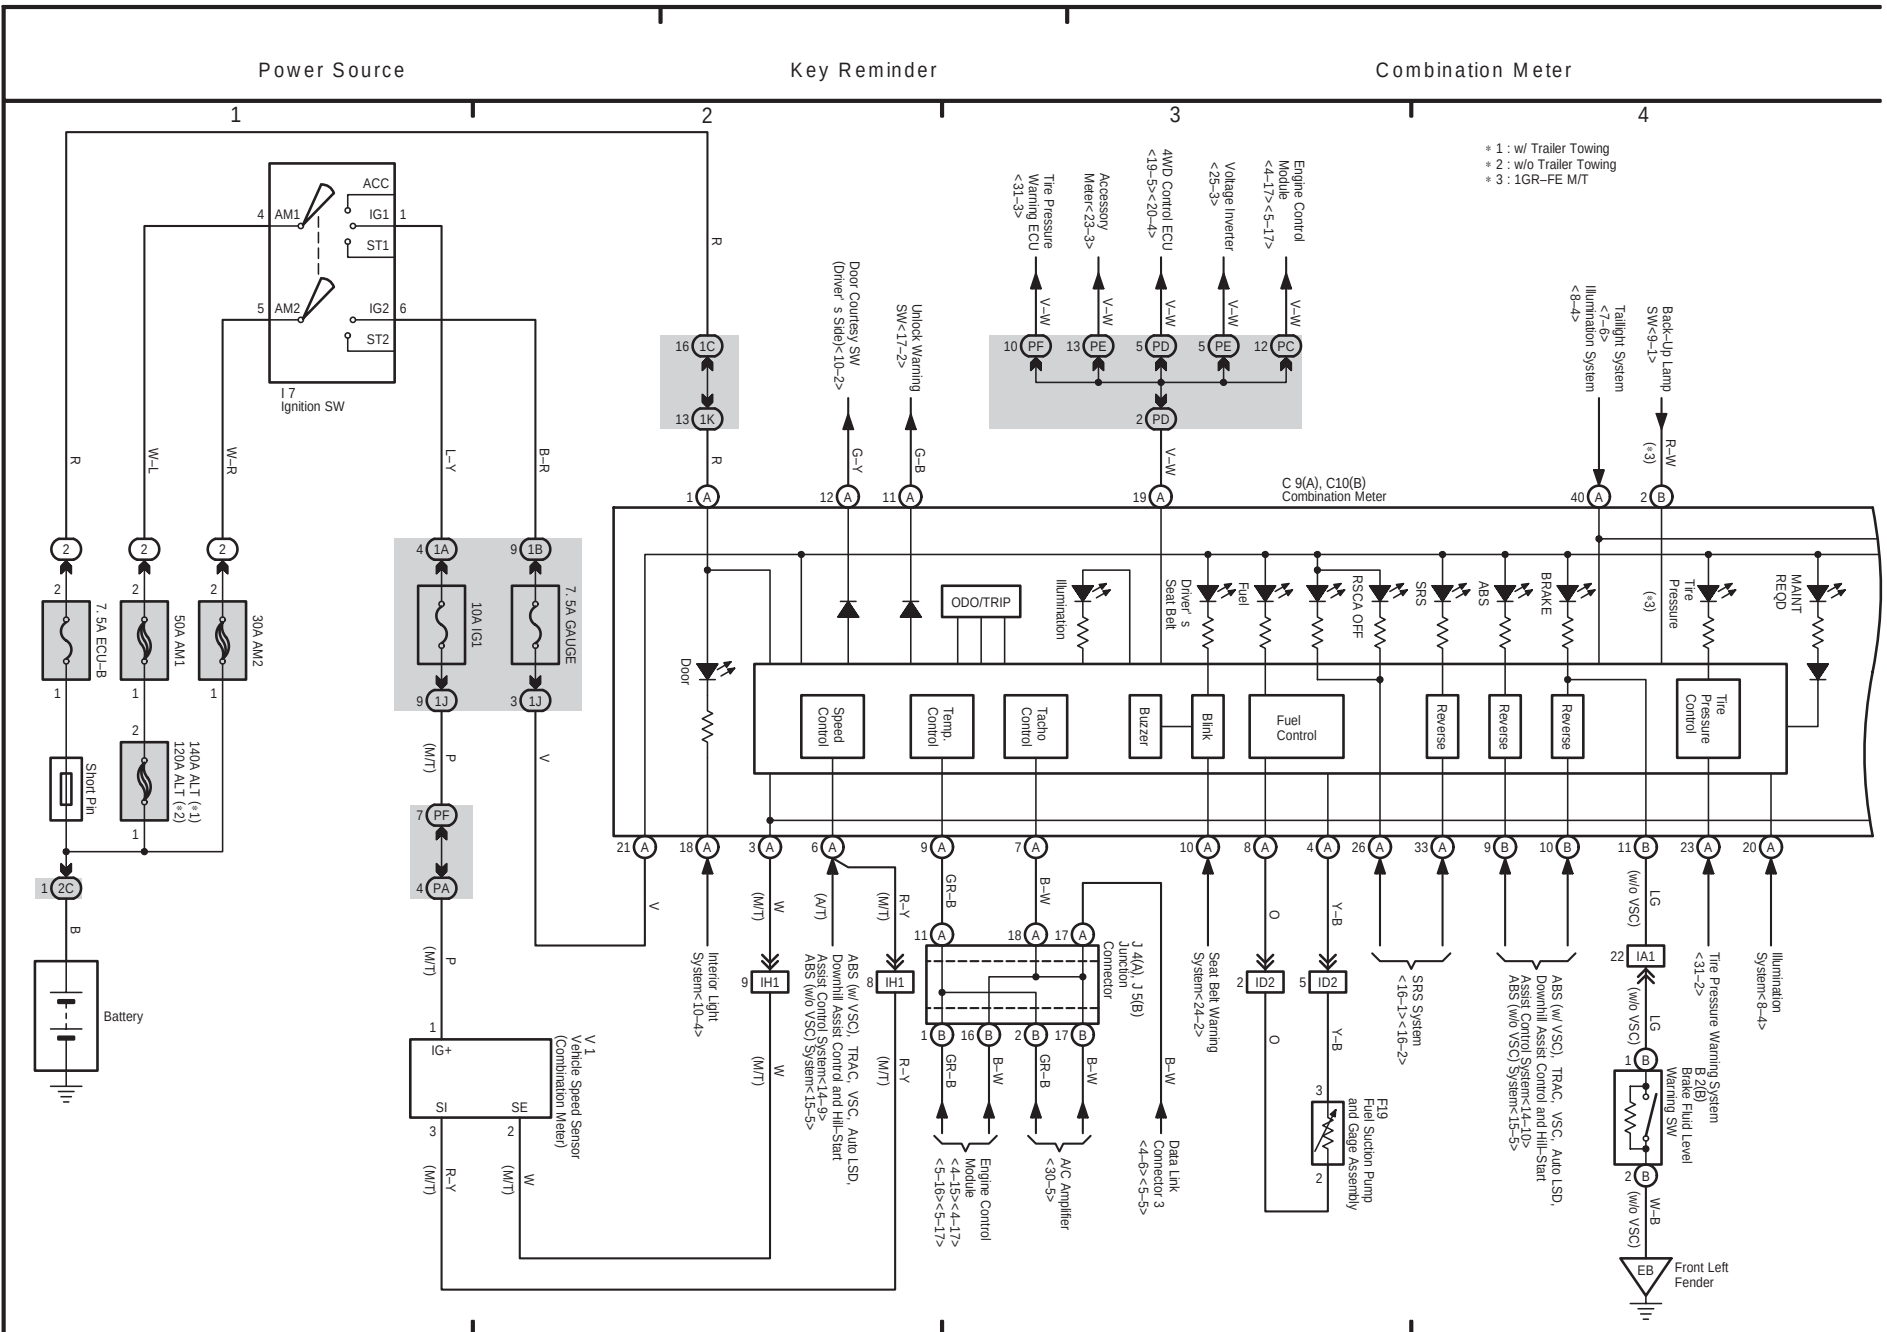

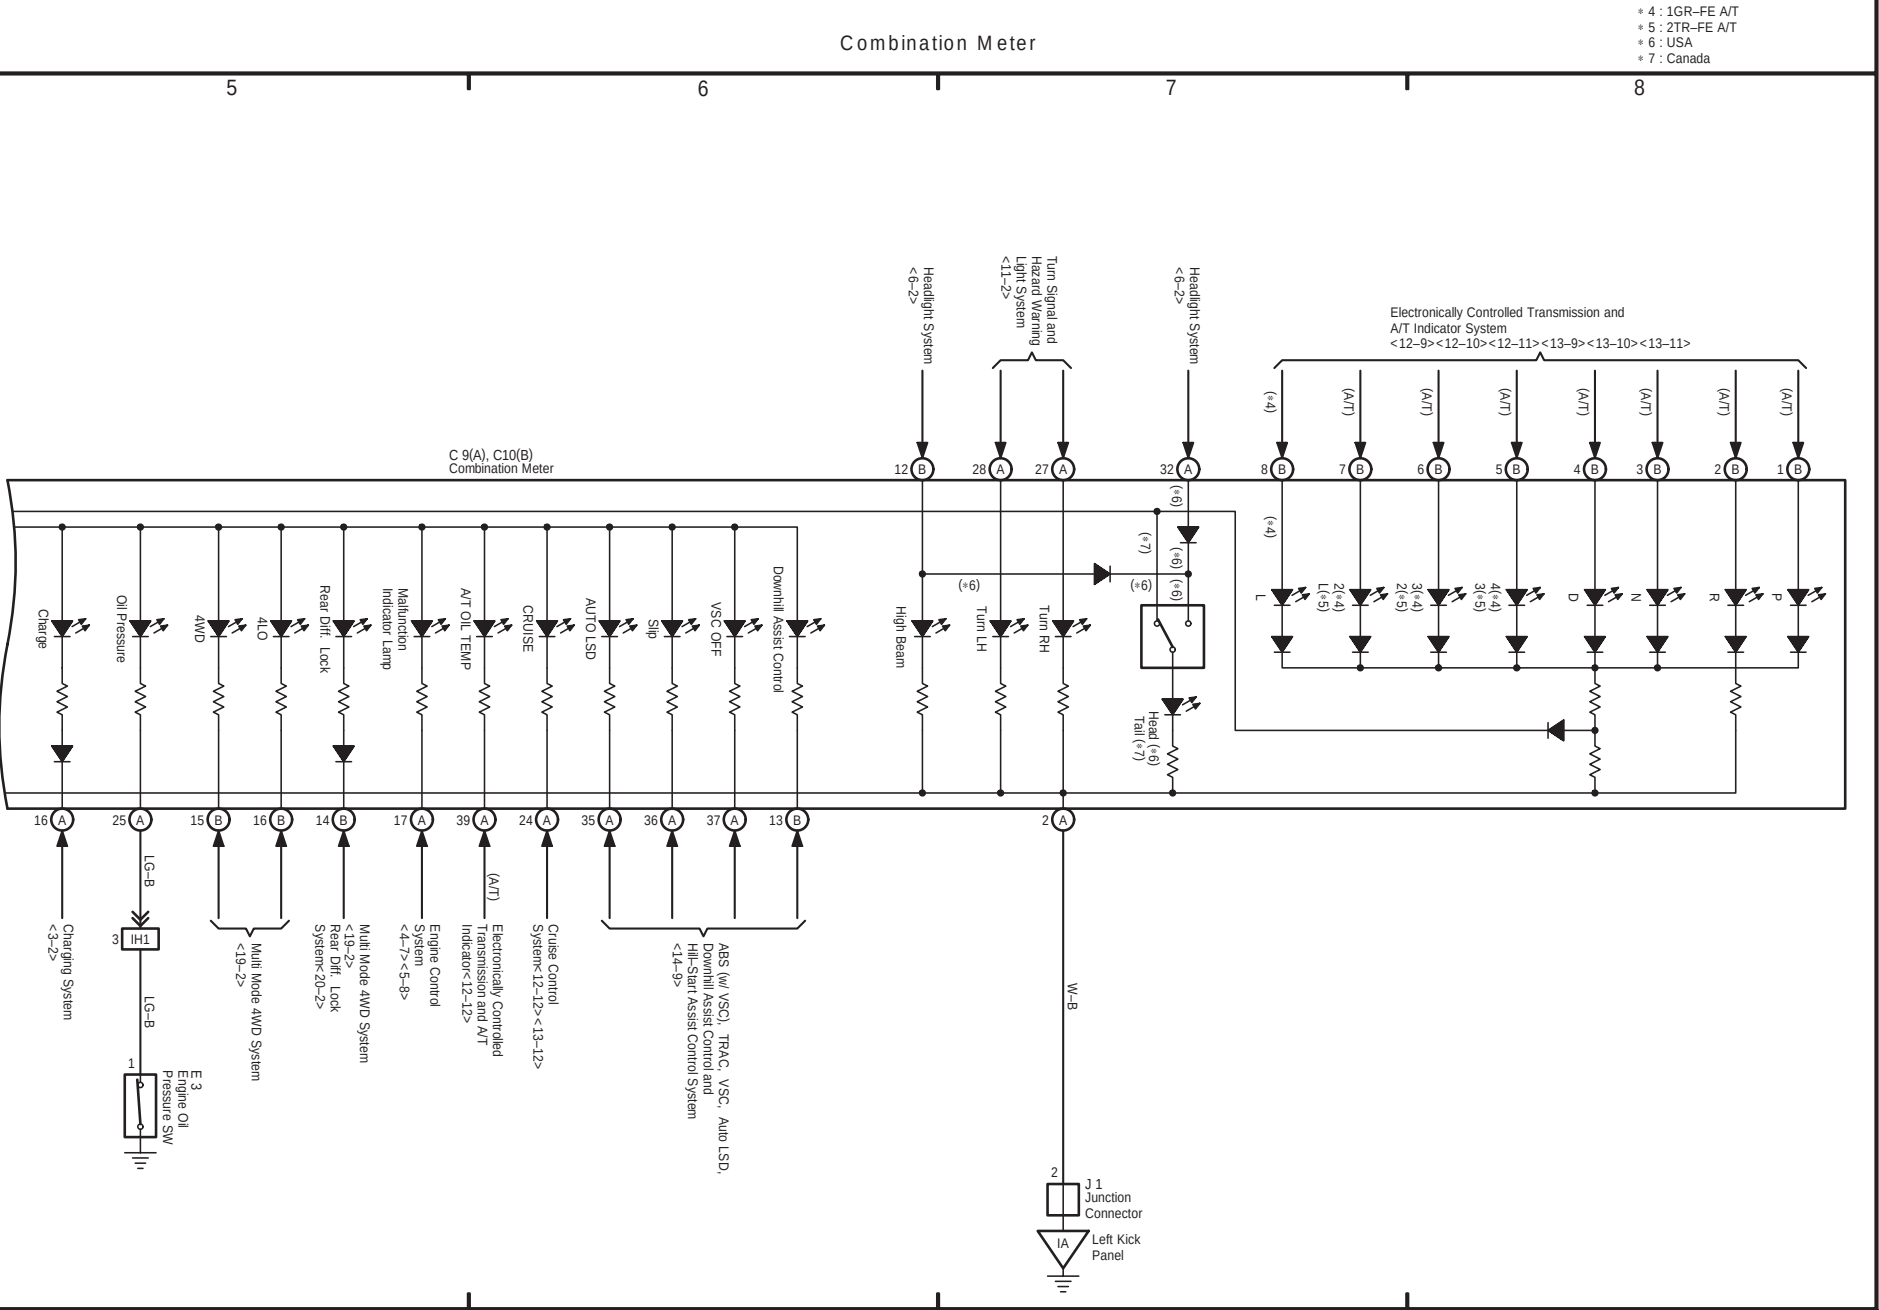


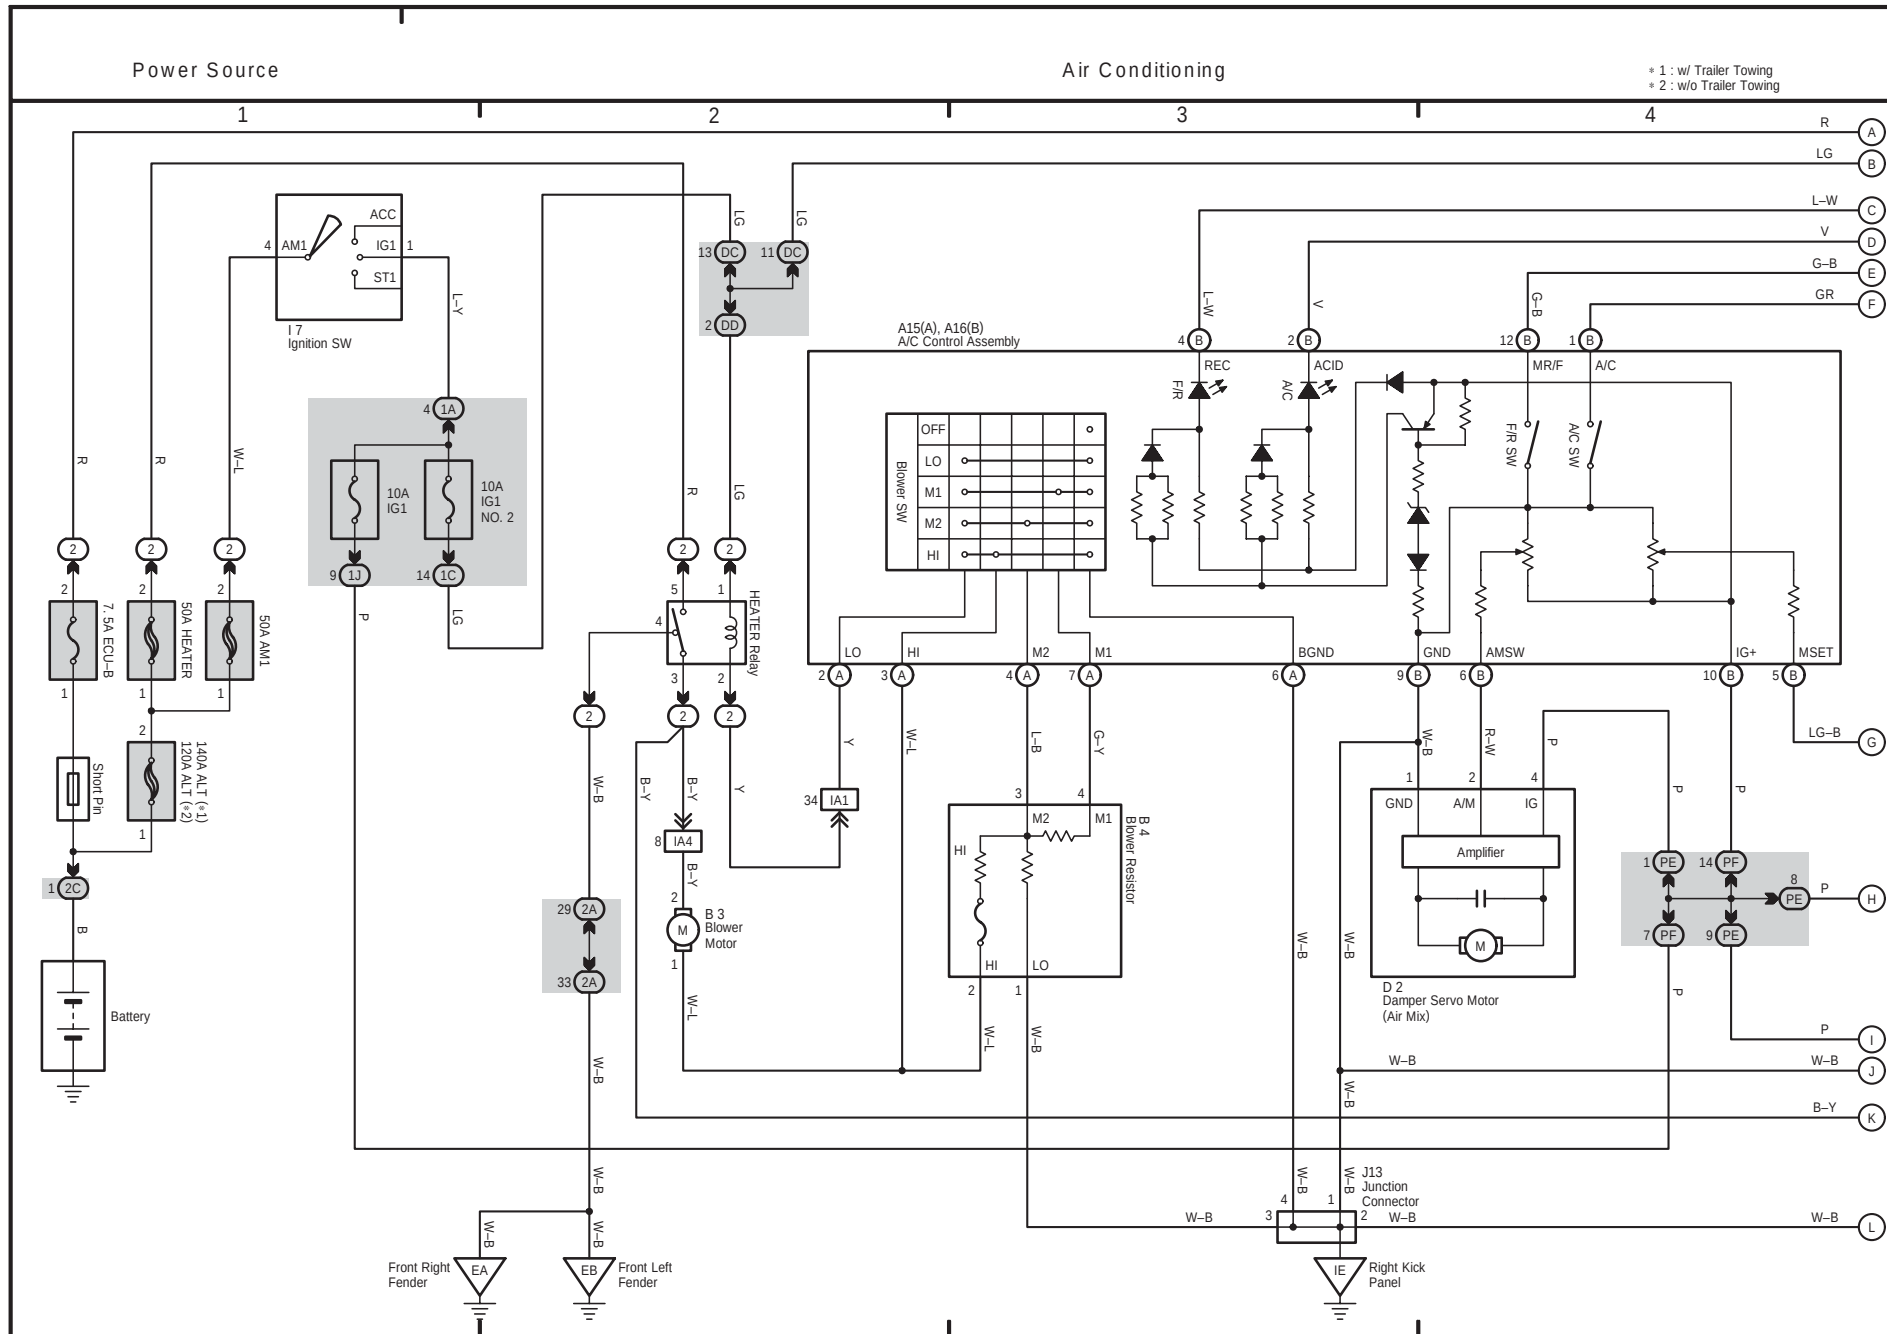

30 TOYOTA TACOMA (Cont' d)

Air Conditioning

* 3 : w/ Accessory Meter

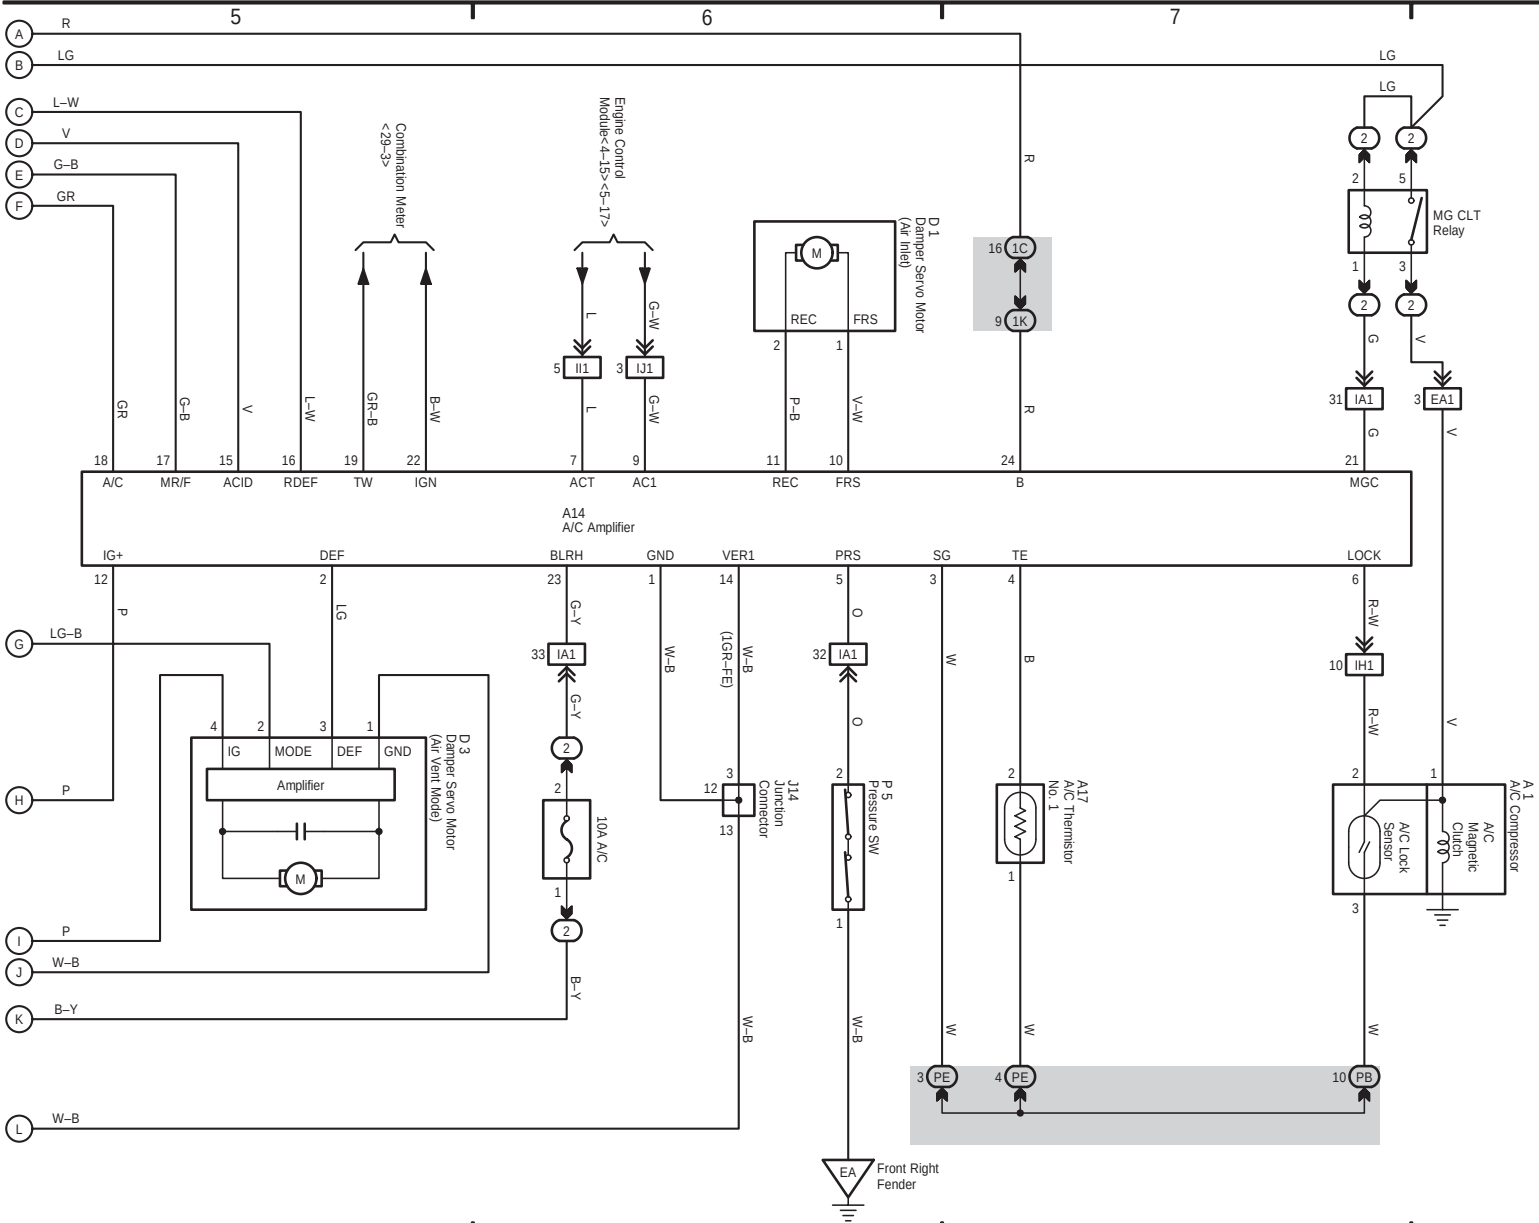

31 TOYOTA TACOMA

